







## A-B TOOLS

The *A-B Tools Options* are available for the *Straight A-B line*, *Fixed Contour line*, and the *Pivot Pattern*. Select the **Menu Options** button  and then the **A-B Tools** button. 



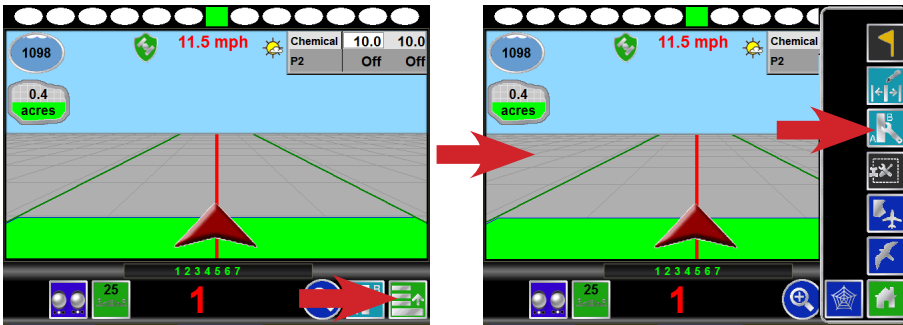



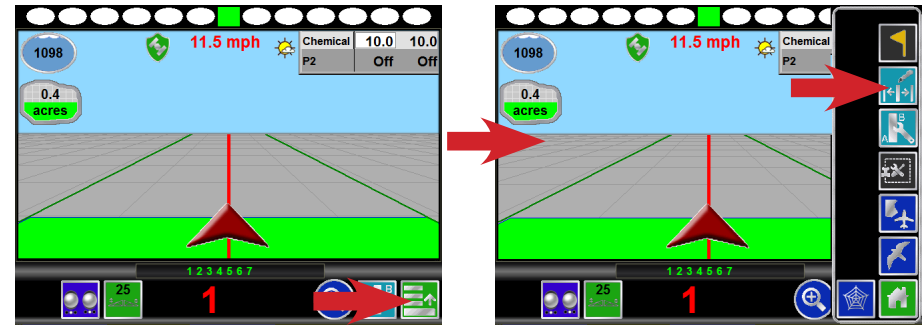

## NUDGE FEATURES


Along with the built-in nudge increments is the ability to set custom nudge increments with on screen buttons. Press the **Menu Options** button  and then the **Edit Nudge** button. 





## A-B TOOLS OPTIONS

FUNCTION	BUTTON	DESCRIPTION
Reset A-B Line		Clears the displayed guidance line. If the current guidance line is going to be reused, make sure to save it before resetting.
Save A-B Line		Saves the current guidance line into memory. Saved guidance lines can be transferred to other field computers.
Re-calibrate A-B Line		Adjusts the current guidance line to the machine's current course-over-ground.
Nudge Left		Adjusts the current guidance line to the left in 1 inch (2 cm) increments.
Nudge Right		Adjusts the current guidance line to the right in 1 inch (2 cm) increments.

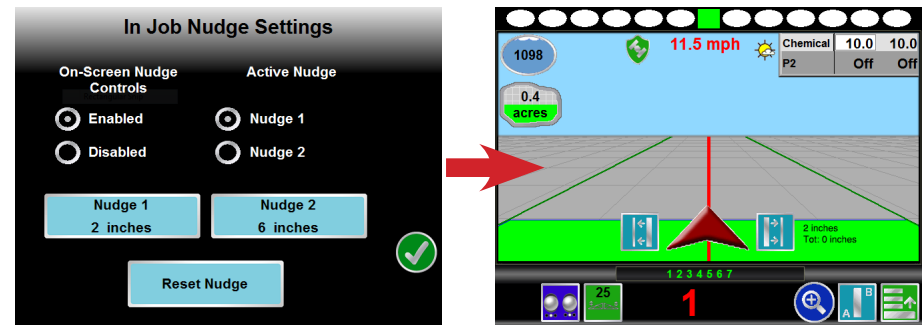On the *In Job Nudge Settings* page enable the **On-Screen Nudge Controls**, set your increments for **Nudge 1** and **Nudge 2**, select which nudge increment as active, and select the **Okay** button. 



The on screen **Nudge** buttons for the active increment will be visible once a guidance line has been created.  

## A-B TOOLS OPTIONS