
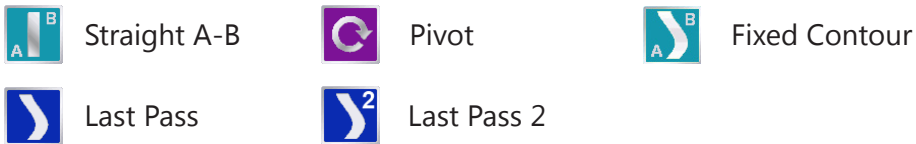



CHOOSE A GUIDANCE LINE

The Envizio Pro will start with the last guidance line used. To choose a different guidance line, select the current **Guidance Pattern** button.

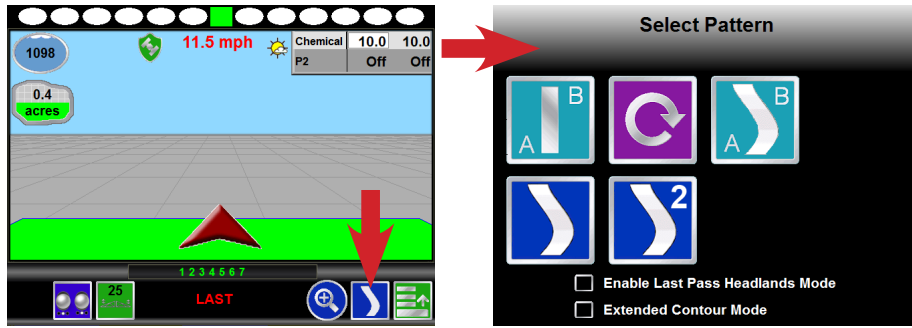

SET A STRAIGHT A-B LINE

Select the **Set A Point** button.

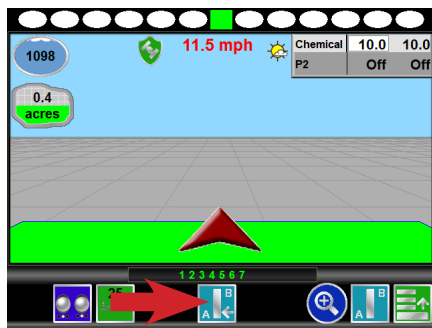


- When at the end of the initial pass, select the **Set B Point** button.
- A compass heading may be used by selecting the **Menu Options** button and then selecting the **Set B by Heading** button.

A previously saved *straight A-B line* may be loaded from memory from the *Menu Options* by selecting the **Load A-B Line** button.



SET A PIVOT PATTERN


Select the **Set A Point** button.

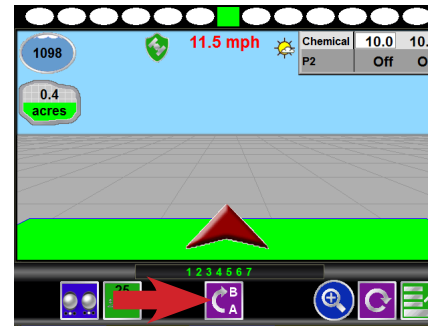

- At the end of the pivot pass, select the **Set B Point** button.
- A previous saved *Pivot pattern* may be loaded from memory from the *Menu Options* by selecting the **Load A-B Line** button.

SET A FIXED CONTOUR LINE

Select the **Set A Point** button.

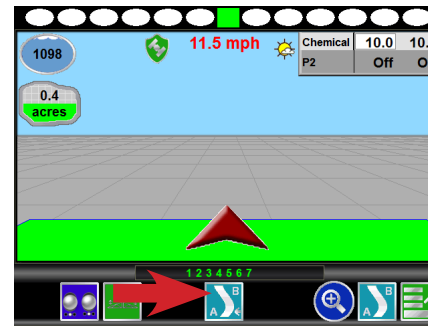

- When at the end of the initial pass, select the **Set B Point** button.
- Guidance ends at the *B Point* unless **Extended Contour Mode** is selected on the *Select Pattern* page.

A previously saved *Fixed Contour line* may be loaded from memory from the *Menu Options* by selecting the **Load A-B Line** button.



SET LAST PASS OR LAST PASS 2 LINE

The *Last Pass* and *Last Pass 2 lines* are created based on the closest applied area.

If the *Last Pass line* incorrectly locks onto the headland coverage instead of the previous pass then select **Enable Last Pass Headlands Mode** on the *Select Pattern* page.

If the *Last Pass 2 line* needs to be recalculated then select the **Recalculate** button on the main run screen.



CREATING GUIDANCE LINES