

- This install guide is intended for use with standard rate direct drive motor installations; if a low rate kit has been purchased see the installation instructions provided with it.
- Install hydraulic motors on the left hand end of meter auger shaft. The same side that the current ground drive is connected to.



- Remove bolts securing meter shaft bearing to meter housing. Disconnect ground drive coupler shaft from the meter shaft.
- Mount bracket to bearing using the supplied longer bolts. Bracket is adjustable to allow for different mounting configurations given different bin setups.



- Mount hydraulic motor and pwm valve to bracket.
- Position hex adapter in motor and coupler on meter auger shaft and connect them using the supplied cotter pins.