


Calibration Pitcher Bracket Installation Sheet

This sheet provides the installation instructions for a Raven calibration pitcher. This bracket is only intended to hold the pitcher during calibration. Remove and store the pitcher during normal operation.

1. Find a location close to the injection pump to install the pitcher bracket. Verify the site will allow the pitcher to sit completely in the bracket with the mouth up and the pitcher can easily be removed.

FIGURE 1. Pitcher Bracket

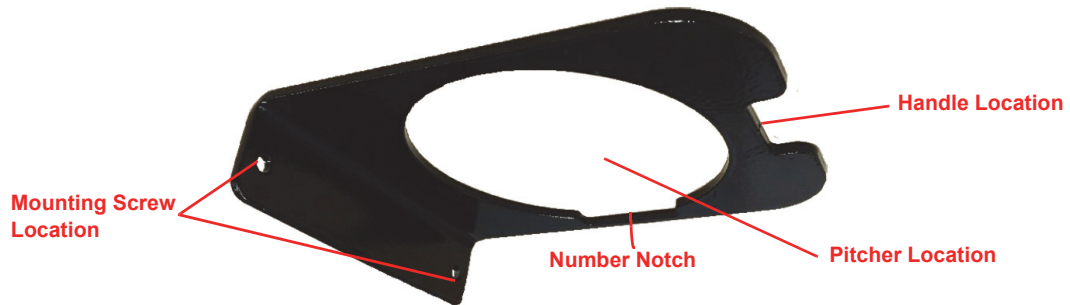

2. Secure the bracket using the provided #10 mounting screws.
3. Place the pitcher in the pitcher bracket.
4. After using the pitcher, remove the pitcher from the bracket and store in a safe place. Do not store the pitcher in the bracket.

FIGURE 2. Proper Pitcher Orientation

