


- Omniseed hydraulic motor installs in place of the individual meter clutch on the back right side of the seed meter.

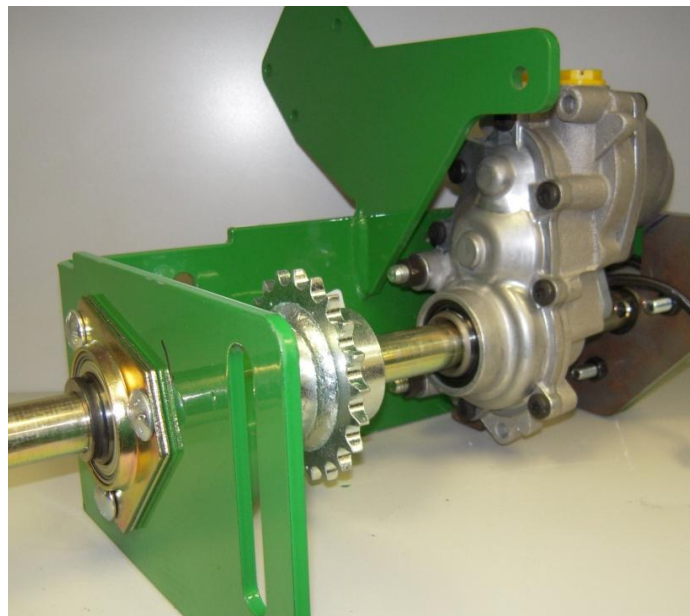

- Begin by removing the driveshaft that connects the variable speed gear box to the clutch assembly.
- Remove the entire clutch assembly and shaft, remove the outside bearing as well
- Install the motor mounting bracket to the meter clutch bracket as shown and then loosely mount the hyd motor to the bracket.



- Install the supplied new shaft through the motor and inner bearing. Install the new sprocket and existing chain at the same time. Reinstall the outer bearing.
- Using the existing locking collars from the original assembly, secure the new shaft in place. Tighten set screws on new sprocket to secure it.
- Mount pwm valve to upper tab of bracket where clutch solenoid previously mounted.