


Rotary Sensor Installation

1. Park the machine on a level surface, with the wheels pointing straight ahead.

FIGURE 1. Rotary Sensor Assembly Alignment

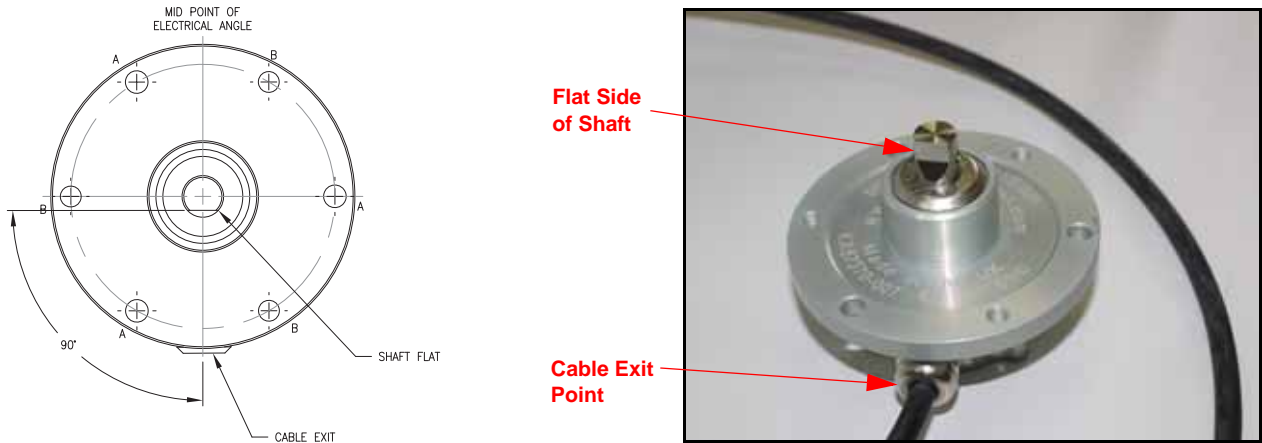

2. Align the flat side of the shaft with the cable exit point as shown in the figure above.
3. Using care not to move the sensor shaft, slide the rotary sensor arm onto the shaft.
4. Secure the rotary sensor arm to the shaft using set screws.