

**Ag-Chem Rogator 864, 874, 1064,
1064C, 1074, 1264, 1264C, 1274C, SS
SmarTrax™ Installation Manual**

P/N 016-4001-031 Rev A

09/15

E16269

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

Chapter 1	<i>Important Safety Information</i>	1
	Important Safety Information	1
Chapter 2	<i>Introduction</i>	3
	Updates	4
	Preparing for Installation	4
	Kit Contents	5
Chapter 3	<i>Mounting the SmarTrax Hydraulic Valve</i>	9
	Mount the SmarTrax Hydraulic Valve	9
Chapter 4	<i>Hydraulic Connections</i>	11
	Installing Hydraulic Hoses	12
	Hydraulic Connection Diagram	16
Chapter 5	<i>Wiring and Electrical Connections</i>	17
	Connecting the SmarTrax Hydraulic Valve	17
	Connecting the Pressure Transducer	17
	Route the Valve Cable Harness	18
	Install the Foot Switch	18
	Install the SmarTrax Node	19
Chapter 6	<i>Start-Up Procedures</i>	23
	Remove Air from the Hydraulic System	23
	Verify the SmarTrax Installation	24
Chapter 7	<i>System Drawings</i>	25

CHAPTER

1

Important Safety Information

Important Safety Information

NOTICE

Read this manual and the operation and safety instructions included with your implement and/or controller carefully before installing the SmarTrax™ system.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your Raven equipment, contact your local Raven dealer for support.
- Follow all safety labels affixed to the SmarTrax components. Be sure to keep safety labels in condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact your local Raven dealer.

When operating the machine after installing SmarTrax, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate SmarTrax or any agricultural equipment while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when SmarTrax is engaged.
- Disable SmarTrax when exiting from the operator's seat and machine.
- Do not drive the machine with SmarTrax enabled on any public thorough-fare or main road.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling SmarTrax when the safe working distance has diminished.
- Ensure SmarTrax is disabled prior to starting any maintenance work on SmarTrax or the machine.

Please review the operation and safety instructions included with your implement and/or controller.

WARNING

- This machine must remain stationary and switched off while installation or maintenance is conducted.
- Before starting the hydraulic installation, be sure to bleed pressure from the hydraulic system.
- Hydraulic fluid may be hot or under high pressure. When starting the machine for the first time after installing the SmarTrax system, be sure that all persons stand clear of the machine in case a hose or fitting has not been completely tightened.
- Always wear appropriate protective equipment when working on hydraulics.

CAUTION

Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on the hydraulic system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when first opening a system that has previously been pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic oil may be extremely hot and under high pressure. Caution must be exercised.
- Any work carried out on the hydraulic system must be performed in accordance with the machine manufacturer's approved maintenance instructions.
- When installing SmarTrax hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced in the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will adversely reduce performance and possibly damage the SmarTrax hydraulic valves.

Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.

CHAPTER

2

Introduction

Congratulations on your purchase of the Raven SmarTrax system. This system is designed to provide cutting-edge, hands-free steering of agricultural equipment via GPS (Global Positioning System) coordinates.

This manual applies to the following machines. For future reference, write your serial number in the space below.

Make: Ag-Chem

Model: RoGator 864, 874, 1064, 1064C, 1074, 1264, 1264C, 1274, 1274C and SS Series

Year

Serial Number:

FIGURE 1. RoGator 1264C



Updates

Updates for Raven manuals as well as software updates for Raven consoles are available at the Applied Technology Division web site:

<http://www.ravenprecision.com/Support/index2.jsp>

Sign up for e-mail alerts and we will notify you when updates for your Raven products are available on the Raven web site.

<http://www.ravenprecision.com>

Preparing for Installation

Before installing SmarTrax, park the machine where the ground is level, clean, and dry. Be sure to follow good safety practices and procedures during the SmarTrax installation procedure. Bleed pressure from the hydraulic system and leave the machine turned off for the duration of the installation process. Carefully read and follow the instructions in this manual to properly complete the installation process.

Recommendations

Observe the following recommendations while installing the SmarTrax system:

- Use part numbers to identify parts.
- Do not remove the plastic wrapping from a part until it is necessary for installation.
- Do not remove plastic caps from a part until it is necessary for installation.

Tools Needed

Before beginning the installation process, it is a good idea to gather all the tools that you will need. These tools include the following items:

- Screwdrivers of various sizes
- SAE Standard-sized wrenches
- Allen wrenches
- Utility knife
- Drill
- Drill bits
- Side Cutters
- Pliers

Point of Reference

The instructions in this manual assume that you are standing behind the machine, looking toward the cab.

Hydraulic Fittings

The following fitting types may be referenced in this manual:

FIGURE 2. Hydraulic Fitting Types

JIC Fitting (M)



SAE O-Ring Fitting (M)



ORFS Fitting (M)



Kit Contents

This section contains a list of the kit contents that you should have received with this SmarTrax kit. Before you begin assembling the kit, compare the items in your SmarTrax kit with this list. If you have questions about your kit, contact your local Raven dealer or the Raven Customer Support Center.

Note: *In addition to the following kits, a SmarTrax controller or node kit is required to complete installation of the SmarTrax system. Contact your local Raven dealer for available kits and ordering information.*

TABLE 1. RoGator 864, 874, 1064, 1064C, 1074, 1264, 1264C, 1274, 1274C and SS Series SmarTrax Installation Kit (P/N 117-4001-031)

Picture	Item Description	Part Number	Qty
Not Pictured	Manual - RoGator 864, 874, 1064, 1064C, 1074, 1264, 1264C, 1274, 1274C and SS Series SmarTrax Installation	016-4001-031	1
	Cable - SmarTrax Valve Harness	115-4001-002	1
	Bracket - Universal Valve Mounting	107-0171-907	1
	Bracket - Hydraulic Valve Mounting	107-0171-596	1
	Transducer - SmarTrax Pressure	422-0000-086	1

TABLE 1. RoGator 864, 874, 1064, 1064C, 1074, 1264, 1264C, 1274, 1274C and SS Series SmarTrax Installation Kit (P/N 117-4001-031)

Picture	Item Description	Part Number	Qty
	Valve - SmarTrax Hydraulic	063-0131-129	1
	Bolt - 5/16" Hex Head	311-0052-104	4
	Bolt - 1/2"-13 UNC x 1" Hex	311-0058-095	2
	Washer - 5/16" Split Lock	313-1000-019	4
	Nut - 1/2" Hex	312-1001-166	1
	Washer - 1/2" Flat	313-2300-017	2

TABLE 2. RoGator 864, 874, 1064, 1064C, 1074, 1264, 1264C, 1274, 1274C and SS Series SmarTrax Hydraulic Kit (P/N 117-0199-031)

Picture	Item Description	Part Number	Qty
	Fitting - 9/16" JIC (M/F) 45° Swivel Elbow	333-0012-027	4
	Fitting - 3/4" JIC (M/M/F) Swivel Run Tee	333-0012-039	4
	Fitting - 9/16" JIC (M/F) 90° Swivel Elbow	333-0012-042	4

TABLE 2. RoGator 864, 874, 1064, 1064C, 1074, 1264, 1264C, 1274, 1274C and SS Series SmarTrax Hydraulic Kit (P/N 117-0199-031)

Picture	Item Description	Part Number	Qty
	Fitting - 9/16" JIC (M/M/F) Swivel Run Tee	333-0012-043	4
	Fitting - 7/16" JIC (M) to 9/16" SAE O-Ring (M) Straight Adapter	333-0012-044	1
	Fitting - 9/16" JIC (M) to 9/16" SAE O-Ring (M) Straight Adapter	333-0012-045	5
	Fitting - 9/16" JIC (M) to 3/4" JIC (M) Straight Adapter	333-0012-118	4
	Fitting - 8/16" JIC (M/F) 90° Elbow	333-0012-119	1
	Fitting - 3/4" JIC (F) to 9/16" JIC (M) Straight Adapter	333-0012-141	2
	Hose - 8/16" JIC (F) to 9/16" JIC (F), 64"	214-1000-168	1
	Hose - 3/4" JIC (F) 90° to 9/16" JIC (F), 72"	214-1000-219	4
	Hose - 7/16" JIC (F) 90° to 9/16" JIC (F), 72"	214-1000-221	1

CHAPTER

3

Mounting the SmarTrax Hydraulic Valve

Mount the SmarTrax Hydraulic Valve

	<p data-bbox="873 762 1057 806">NOTICE</p> <p data-bbox="683 825 1230 978">The appearance of the SmarTrax hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.</p>
--	--


Install Fittings on the SmarTrax Valve

Before mounting the SmarTrax valve on the machine, install the supplied fittings (P/N 333-0012-045) to ports A, B, P, T and LS- Steer and LSPV on the SmarTrax hydraulic valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure.

Install Pressure Transducer

Install the pressure transducer directly to the 'PS' Port on the SmarTrax hydraulic valve.

FIGURE 1. Pressure Transducer

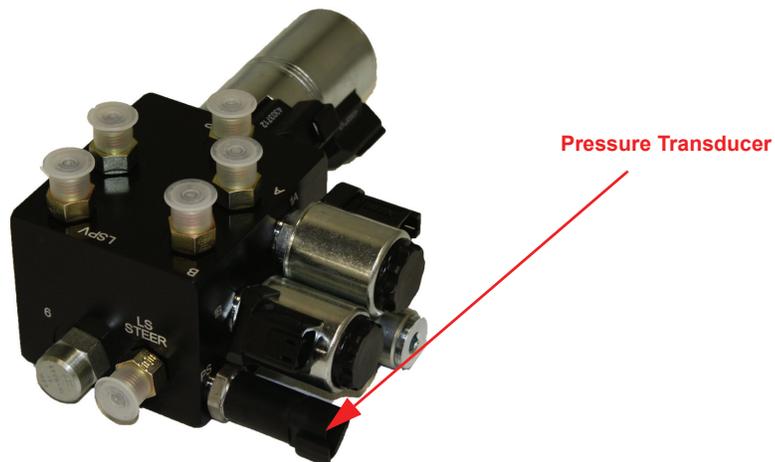

Mount the SmarTrax Hydraulic Valve

1064, 1264, and 1274 Models

1. Mount the universal mounting bracket (P/N 117-0171-907) to the cross member of the machine below the cab using the provided 1/2"-13 UNC x 1" bolts (P/N 311-0058-095), 1/2" washers (P/N 313-2300-017), and 1/2" nuts (P/N 312-1001-166). The hydraulic valve mounting bracket is secured between the chassis railing.
2. Mount the SmarTrax hydraulic valve (P/N 063-0131-129) to the mounting bracket using the supplied 5/16" bolts (P/N 311-0052-104) and 5/16" lock washers (P/N 311-1000-019).

864, 874, and 1074 Models

1. Mount the universal mounting bracket (P/N 107-0171-907) to the cross member of the machine below the cab adjacent to the access ladder using the provided 1/2"-13 UNC x 1" bolts (P/N 311-0058-095), 1/2" washers (P/N 313-2300-017), and 1/2" nuts (P/N 312-1001-166).
2. Use the existing hole in the cross member to mount the bracket. Once mounted, mark the second hole in the frame and drill a second mounting hole.
3. Mount the SmarTrax hydraulic valve (P/N 063-0131-129) to the mounting bracket using the supplied 5/16" bolts (P/N 311-0052-104) and 5/16" lock washers (P/N 311-1000-019).


Note: Depending on the model of machine, the hydraulic mounting plate (P/N 107-0171-569) may also need to be used in order to mount the universal mounting bracket and the SmarTrax hydraulic valve.

FIGURE 2. SmarTrax Valve Mounting Location

1064, 1264, and 1274 Models



864, 874, and 1074 Models

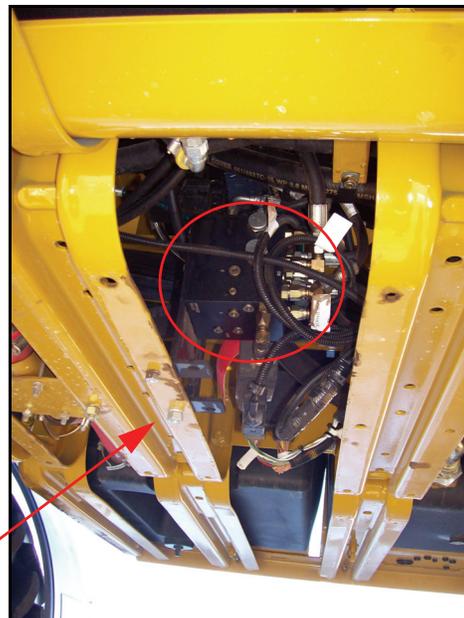

Drill a Second Mounting Hole

CHAPTER

4

***Hydraulic
Connections***



⚠ WARNING

Hydraulics are under pressure. Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when working on a system that has previously been pressurized. When disconnecting or purging hydraulic connections, be aware that hydraulic oil within the system may be extremely hot and under high pressure.



⚠ WARNING

Tampering with hydraulic valves may cause serious injuries or death and will void warranty



⚠ CAUTION

Ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will adversely reduce performance and possibly damage the SmarTrax hydraulic valves.



⚠ CAUTION

Before beginning the SmarTrax hydraulic installation procedure, turn off the machine and relieve hydraulic pressure by turning the wheel left and right.

	NOTICE
	The appearance of the SmarTrax hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.

Installing Hydraulic Hoses

The Ag-Chem RoGator Steering control Unit (SCU) is located in front of the cab.

1. Open the engine bay cover and remove the guards or plates in front of the cab which may hinder access to the steering orbitrol motor.

FIGURE 1. Shield on SS models




Note: *All new hoses will be routed on the inside of the left frame rail back to the SmarTrax hydraulic valve. There may be additional fittings that are not used. These fittings are to accommodate for model year changes.*

Installing the Load Sense Hose

- Remove and discard the existing load sense line running from the 'LS' port on the steering orbitrol to the priority valve.

FIGURE 2. Steering Orbitrol Load Sense Line

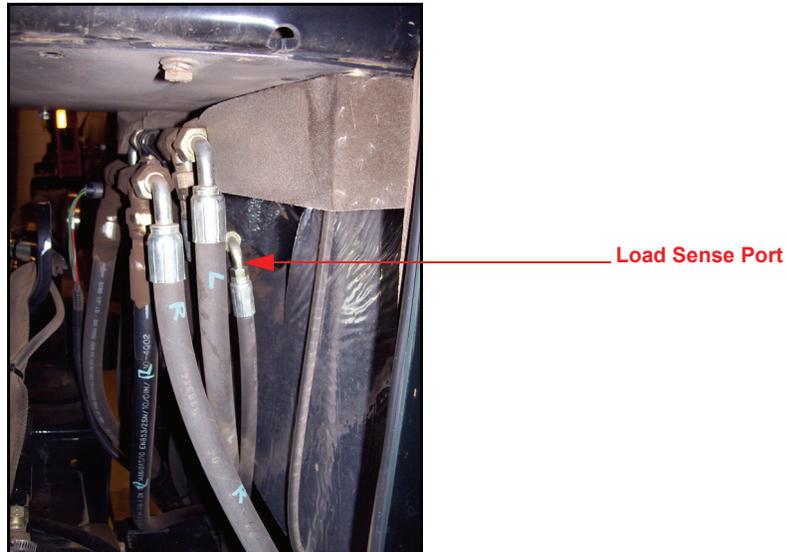


- Connect the supplied 'LS-PV' hose (P/N 214-1000-168) to the priority valve and route to the 'LS-PV' Port on the SmarTrax valve.

Note: The supplied 9/16" JIC 45° elbow and 9/16" JIC 90° elbow fittings (P/N 333-0012-027 or 333-0012-042) may be used to simplify connection to the SmarTrax valve and help with hose routing. Use these fittings to help route hoses away from wear areas or snagging during normal equipment operation.

- Connect the supplied hose (P/N 214-1000-221) to the 'LS-Steer' port on the SmarTrax valve and route this hose to the open load sense port on the steering orbitrol.
- Once these hoses are connected, double check to make sure that all hydraulic hose and fitting connections are tight.


FIGURE 3. SmarTrax Hydraulic Valve

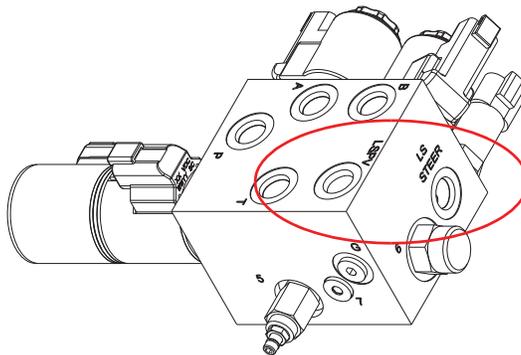

Installing the Pressure and Tank, Left Steer, and Right Steer Hoses

1. Disconnect the existing pressure, tank, left and right hoses from the steering orbitrol.
2. Connect a supplied 3/4" JIC run tee fitting (P/N 333-0012-039) to each of the ports on the steering orbitrol.
3. Reconnect the existing hoses to the installed tee fittings. Be sure to reconnect the hoses to the correct ports as previously labeled.

FIGURE 4. Steering Orbitrol Ports

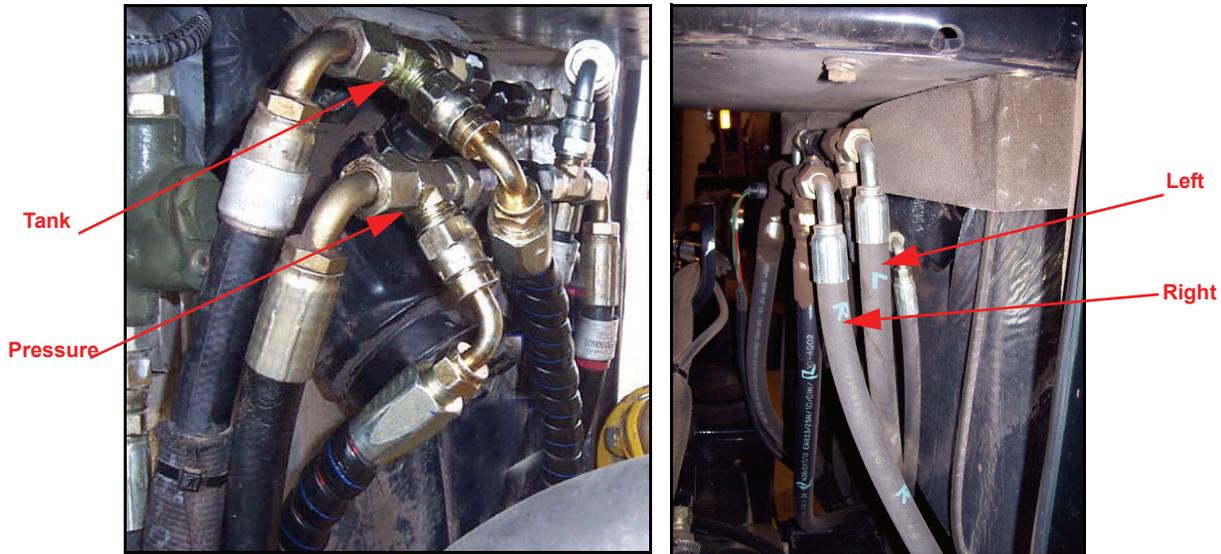


4. Connect the supplied hydraulic hose (P/N 214-1000-219) to the open branch of the tee fittings and route to the SmarTrax hydraulic valve.

Note: Before routing, you may want to label each hose to help identify the SmarTrax valve connections after the hoses have been routed.

5. Connect the supplied hose routed from the steering orbitrol to the corresponding port on the SmarTrax valve block. See the following table for hose and port connections.

Orbitrol Port	SmarTrax Valve Port
Pressure	P
Tank	T
Left	A
Right	B

FIGURE 5. SmarTrax Hydraulic Valve

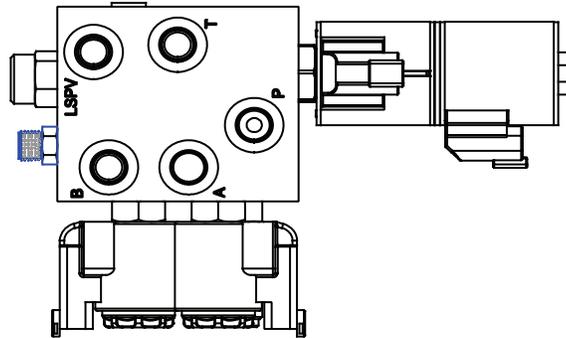


Note: The supplied 9/16" JIC 45° elbow and 9/16" JIC 90° elbow fittings (P/N 333-0012-027 or 333-0012-042) may be used to simplify connection to the SmarTrax valve and help with hose routing. Use these fittings to help route hoses away from wear areas or snagging during normal equipment operation.

6. Once these hoses are connected, double check to make sure that all hydraulic hose and fitting connections are tight.




Hydraulic Connection Diagram

Before Smartrax Installation

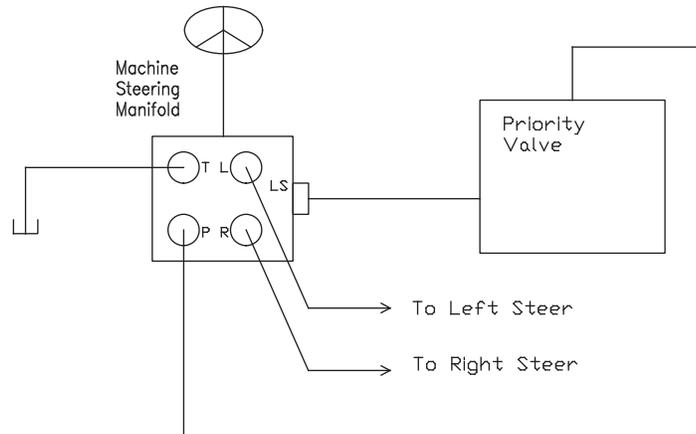


After Smartrax Installation

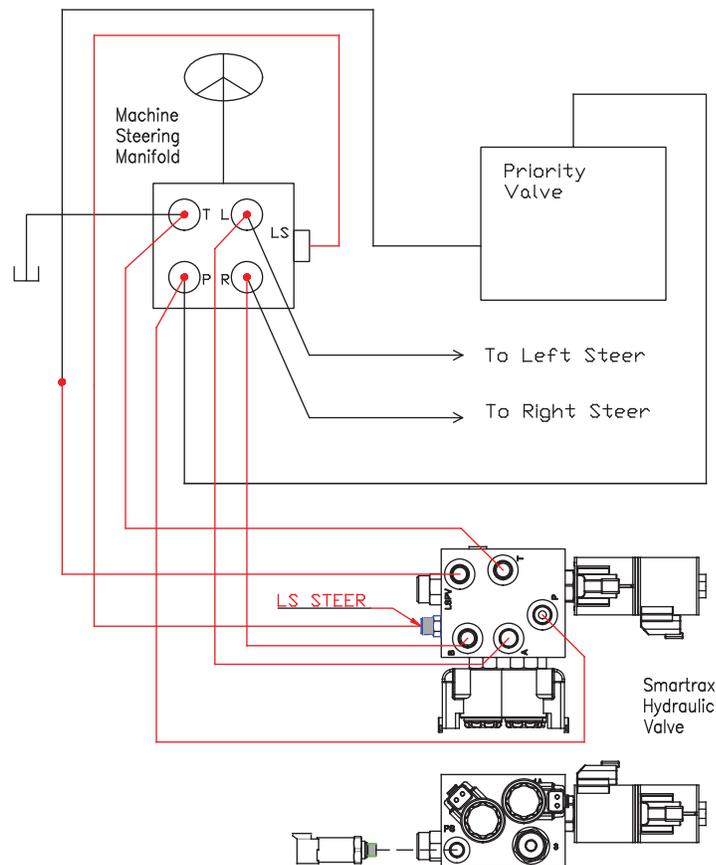

CHAPTER

5

Wiring and Electrical Connections

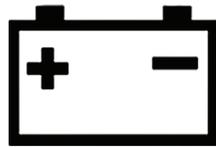

⚠ CAUTION

Ensure that the power cable is the last cable connected.
Do not reverse the power leads. Doing so will cause severe damage to the equipment.
Ensure the leads are connected to the correct polarity.

Connecting the SmarTrax Hydraulic Valve

1. Locate the connector labeled 'LEFT' on the SmarTrax valve cable harness (P/N 115-4001-002).
2. Insert the connector labeled 'LEFT' to the bottom solenoid installed in port '2' on the SmarTrax hydraulic valve. See Figure 4, "Cable Harness Installation Schematic," on page 21.
3. Repeat step 1 and step 2 to connect the 'RIGHT' connector to the top solenoid on port '2'.
4. Locate the connector labeled 'Double Blocker 1 and 2' on the SmarTrax valve cable harness. Insert the connectors into the '1A and 1B' solenoids.

Connecting the Pressure Transducer

1. On the valve cable harness (P/N 115-4001-002), identify the connector labeled 'PSI'.
2. Connect the 'PSI' connector to the pressure transducer using the provided di-electric if necessary.

Route the Valve Cable Harness

Once the SmarTrax hydraulic valve and pressure transducer are connected to the valve cable harness, the remaining connectors must be routed into the cab.

1. Locate an access point through which the valve cable harness (P/N 115-4001-002) may be routed into the cab.
2. Route the cable to the access point and use the provided cable ties to secure the cable to avoid catching or damaging the cable during normal equipment operation.

Note: *When routing the SmarTrax valve cable harness, follow the path of other hoses or cables to avoid potential wear areas.*

3. Feed enough of the cable into the cab to allow each cab control component to be connected.
4. Spool and secure any excess cable.

Install the Foot Switch

1. Select a location for the SmarTrax foot switch (P/N 063-0172-470) within easy reach of the operator to fully press the front of the pedal.
2. Use the SmarTrax foot switch as a template and pre-drill holes in the floor.
3. Secure the foot switch to the floor with four screws or bolts through each of the mounting holes.
4. Locate the connector labeled 'ENABLE' on the SmarTrax node cable harness (P/N 115-4001-011) and connect it to the foot switch cable.

FIGURE 1. Foot Switch Mounting Example




Install the SmarTrax Node

When choosing the location for the SmarTrax node, consider the following points:

- The node is not weatherproof. Mount the SmarTrax node inside the machine's cab or driver's compartment.
- The node mounting location must not create tripping hazards and allow cable routing to avoid crimping or damaging the cables or the node connections.
- Mount the SmarTrax node to a flat surface with two of the arrows on the node parallel to the ground and in a location where it will not be kicked or jarred during normal equipment operation.
- One of the six numbered direction arrows on the node must be oriented in the direction of forward vehicle travel. Note the number of the arrow corresponding to forward travel for SmarTrax calibration. One arrow must also point straight up.
- Mount the node to a flat, level surface.
- Securely fasten the node using bolts or screws through at least two of the three mounting holes. When mounted properly, the node should not become loose or rotate.

FIGURE 2. Node Mounting

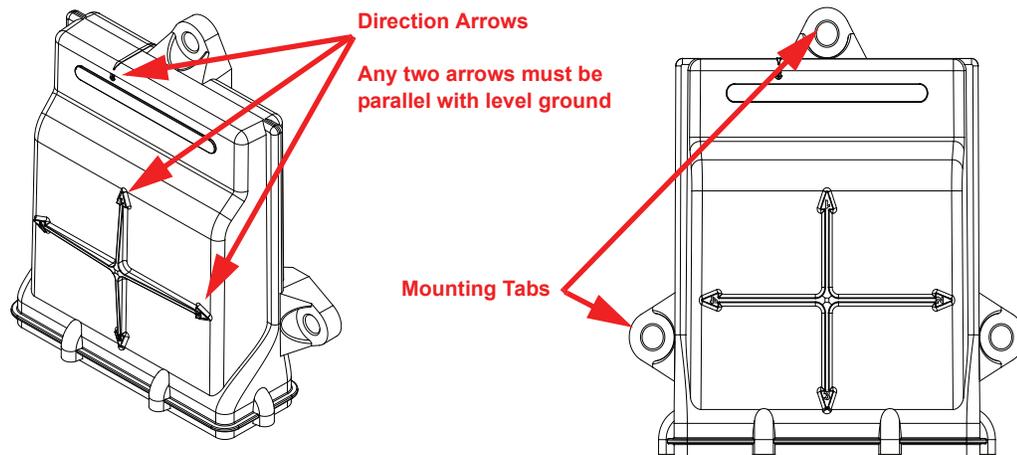


To Install the Node:

1. Select the preferred location for the node. See the recommendations for choosing a mounting location above.

Note: For 07' and newer machines, the suggested location is located in the lower right hand panel. An additional Kit 117-0171-300 is available. Spacers to stack nodes are provided in the kit when Accuboom node is also installed.




FIGURE 3. Node Mounting Location

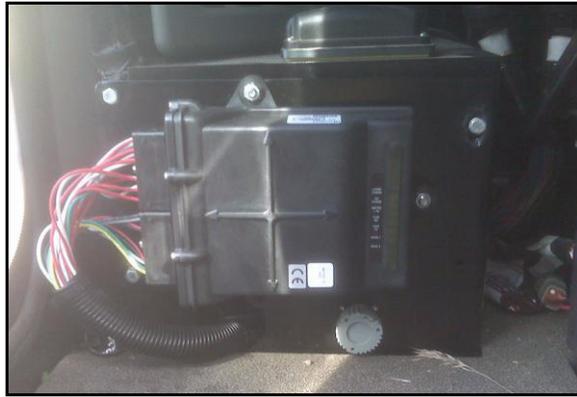

2. Using the mounting tabs on the node as a template, mark and pre-drill holes. Using bolts or self tapping screws (not supplied), secure the node into position.
3. Connect the rectangular 12 pin connectors on the node adapter cable (P/N 115-4001-011) for Viper Pro/Envizio Pro or (P/N 115-4001-013) for Cruizer to the SmarTrax valve cable harness (P/N 115-4001-002).
4. Connect the large, rectangular connectors to the SmarTrax node.
5. Connect your receiver or source of DGPS to the connector labeled 'DGPS' on the node adapter cable.
6. Connect the console providing machine guidance to the remaining DB-9 connector.
7. Connect the 4-pin deutsch plug to the vehicle's CANbus system (Viper Pro/Envizio Pro) or the DB-9 display cable (Cruizer).
8. Electrical hookup is recommended as shown in the *Can Node Wiring Diagram* on page 26.

Note: *High Current Power, which is used to run steering operations, should be connected to a separate power source than Logic Power, which is used to run processing and communication between the node and the guidance console.*

FIGURE 4. Cable Harness Installation Schematic

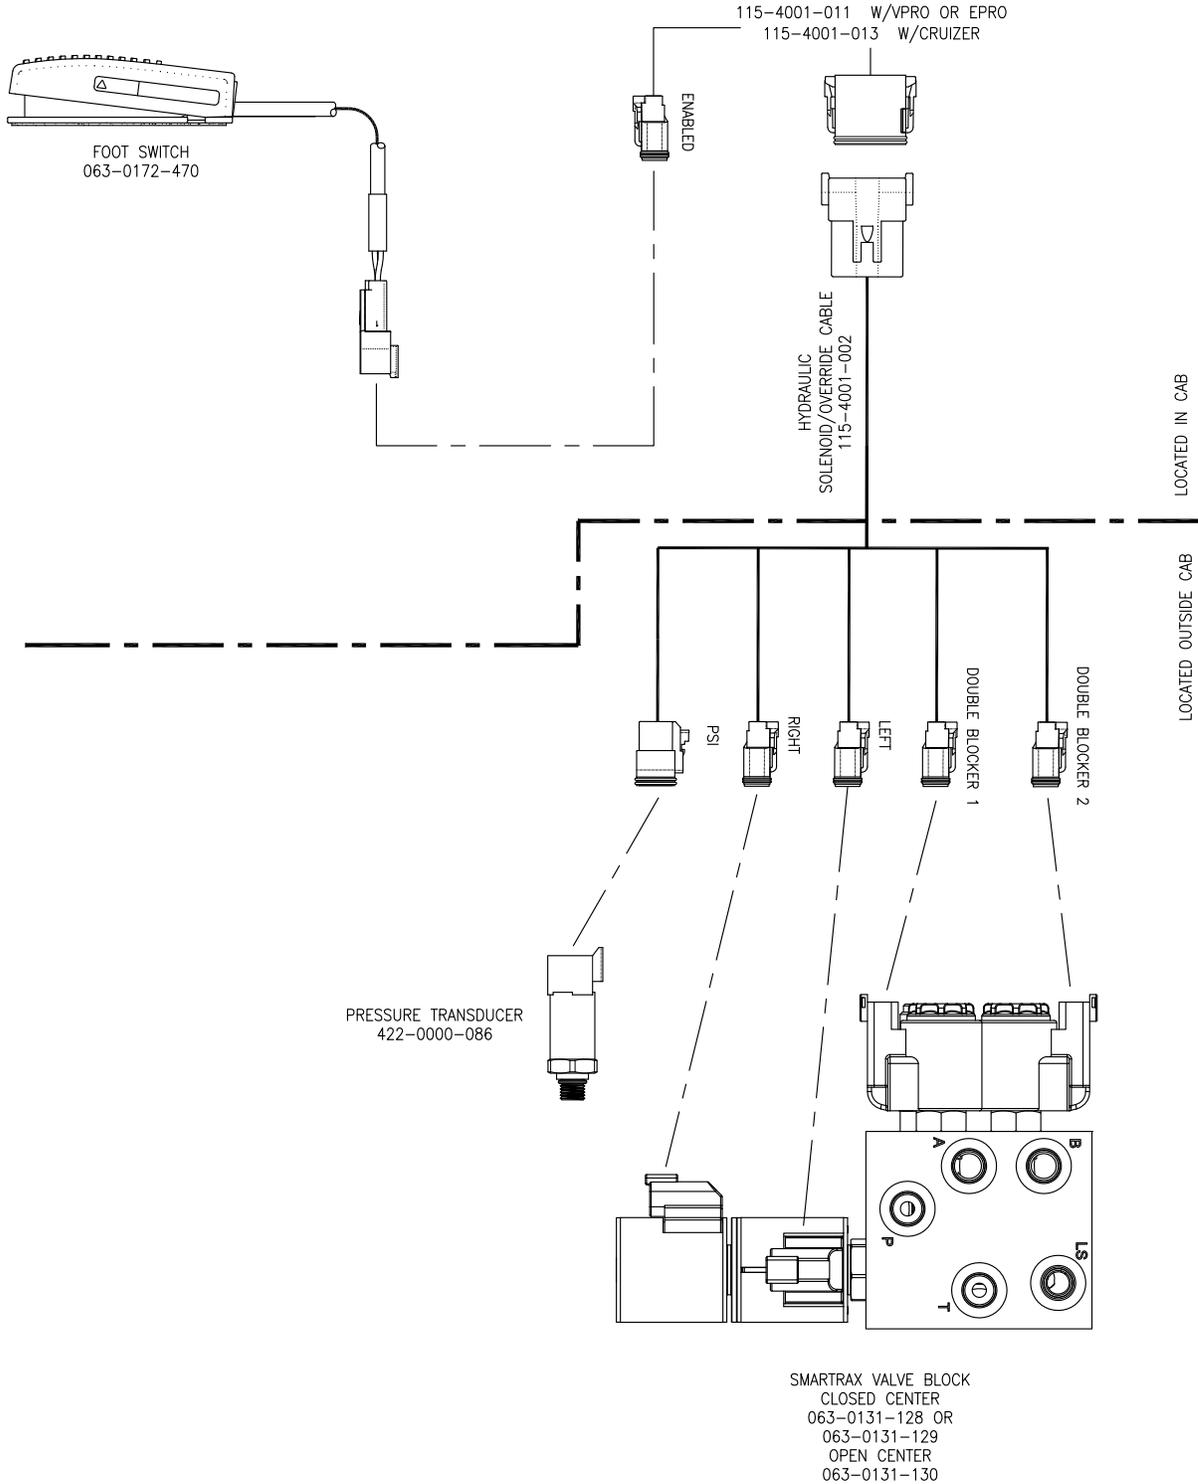

CHAPTER

6

Start-Up Procedures



! WARNING

When starting the machine for the first time, keep the area around the machine clear of people or bystanders in case a fitting or hose has not been fully tightened.



! WARNING

DO NOT use hands to check for leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury or death.

Always wear appropriate protective equipment when working with the hydraulic system.

Remove Air from the Hydraulic System


Anytime a hydraulic system is purged for maintenance, or during the SmarTrax system installation, air is introduced into the hydraulic lines. Anytime the system is purged or fittings are loosened or disconnected, it is important to remove air pockets from the hydraulic system to avoid unwanted operation of the hydraulic system.

To remove air from the hydraulic system, turn the wheels fully from side to side repeatedly. If air pockets are present, the wheels may not move consistently while the steering wheel is operated. Continue turning the wheels until the wheels move steadily and smoothly with the steering wheel.

Verify the SmarTrax Installation

1. Turn on the machine.
2. With the machine running, double-check all fitting and hose connections to ensure that:
 - Hoses are not rubbing or interfering with other moving parts.
 - Hydraulic fluid is not leaking.
3. If there are any problems, shutdown the machine and correct problems immediately.

If you need additional assistance, contact your local Raven dealer or the Raven Customer Support Center at 1-800-243-5435.

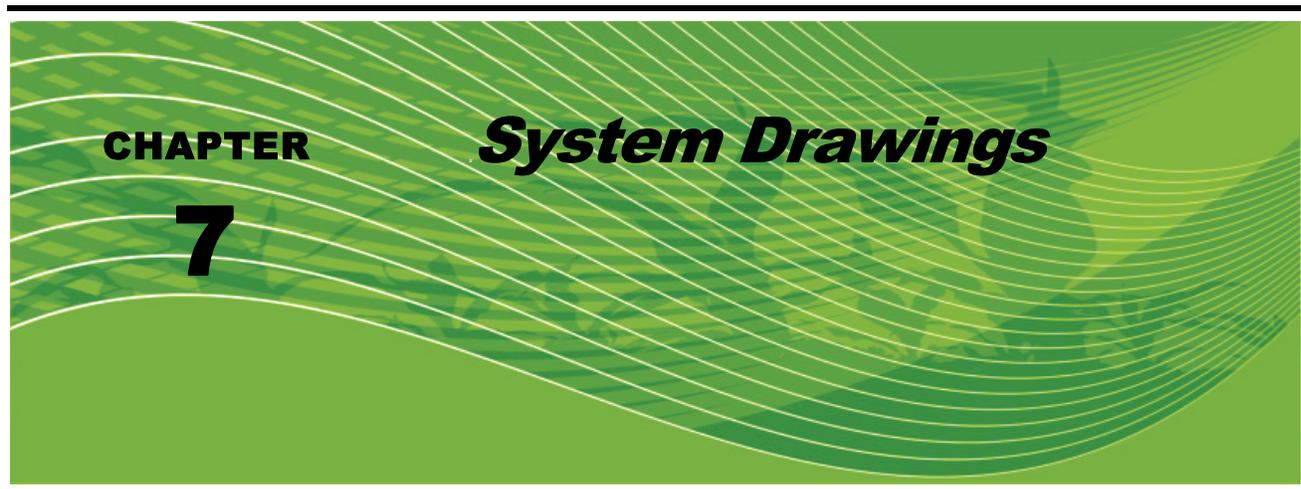The header graphic features a green background with white wavy lines and a faint gear icon. The text 'CHAPTER 7' is on the left and 'System Drawings' is on the right.

CHAPTER 7

System Drawings

The following diagrams may be helpful for installing or troubleshooting the SmarTrax system. The following diagrams may show optional features or components not required for operation and will not apply to your system if the required hardware has not been installed.


Contact your local dealer for purchasing or more information on components shown in the following diagrams.

Additional system diagrams are available from the Raven Industries web site:

<http://www.ravenprecision.com/Support/ApplicationDrawings/index2.jsp>


Can Node Wiring Diagram

CAN NODE WIRING

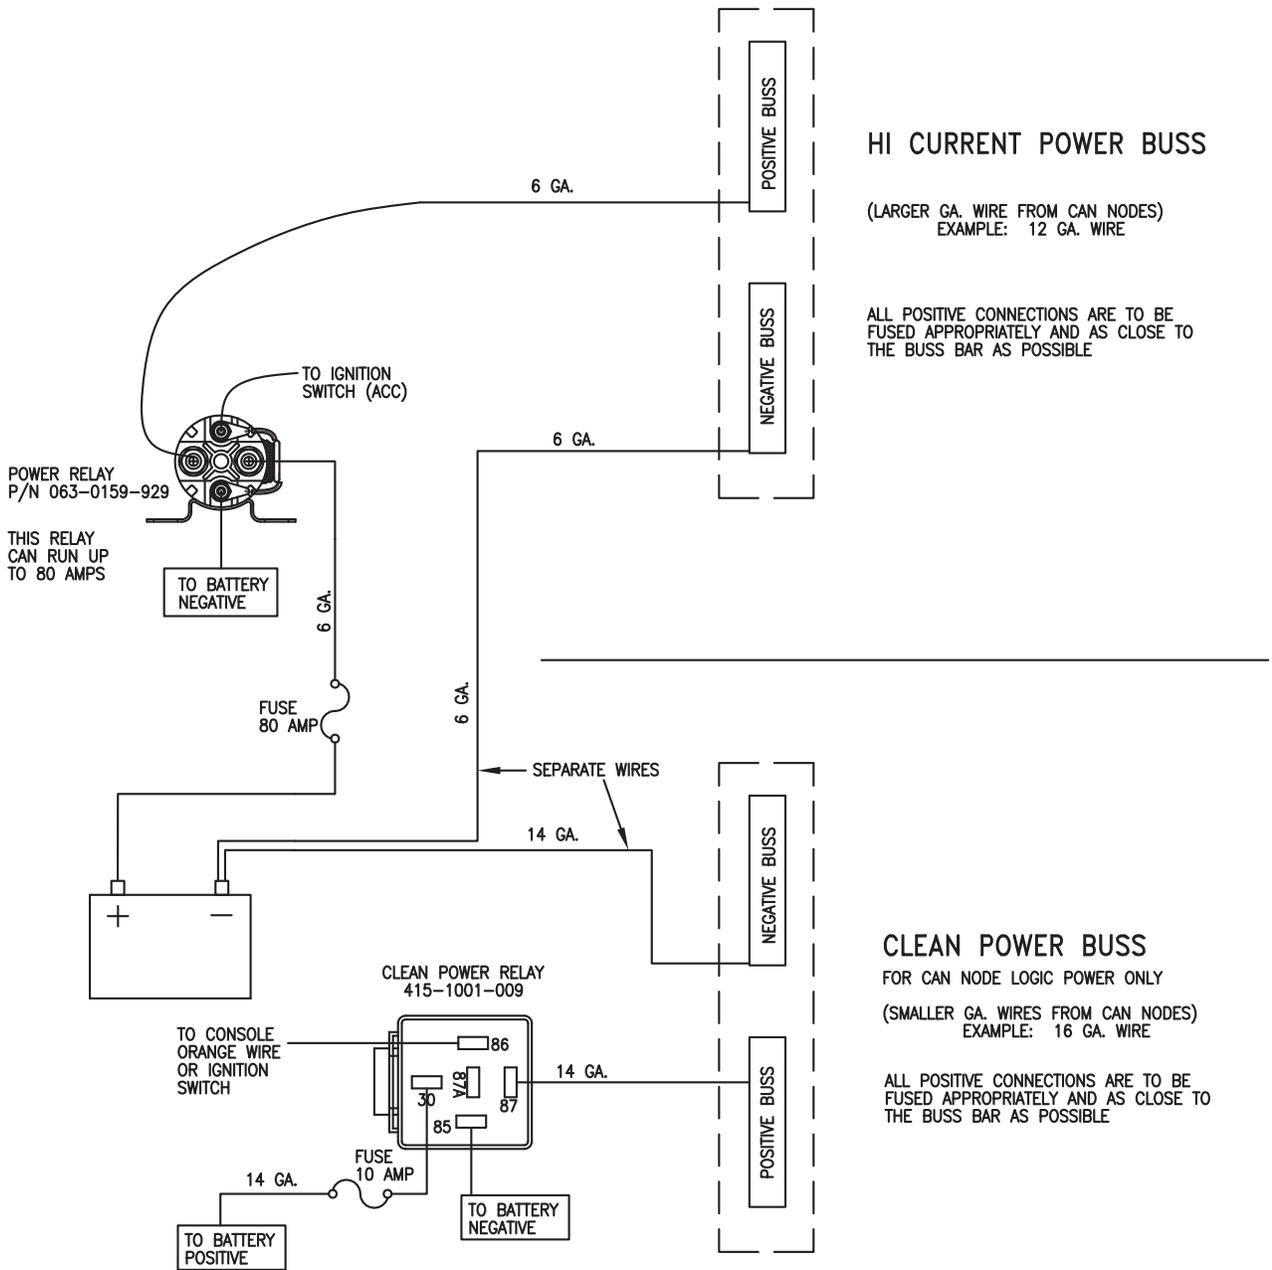


Envizio Pro/ Viper Pro

ENVIZIO PRO/VIPER PRO/SMARTRAX 3D W/PHOENIX 300

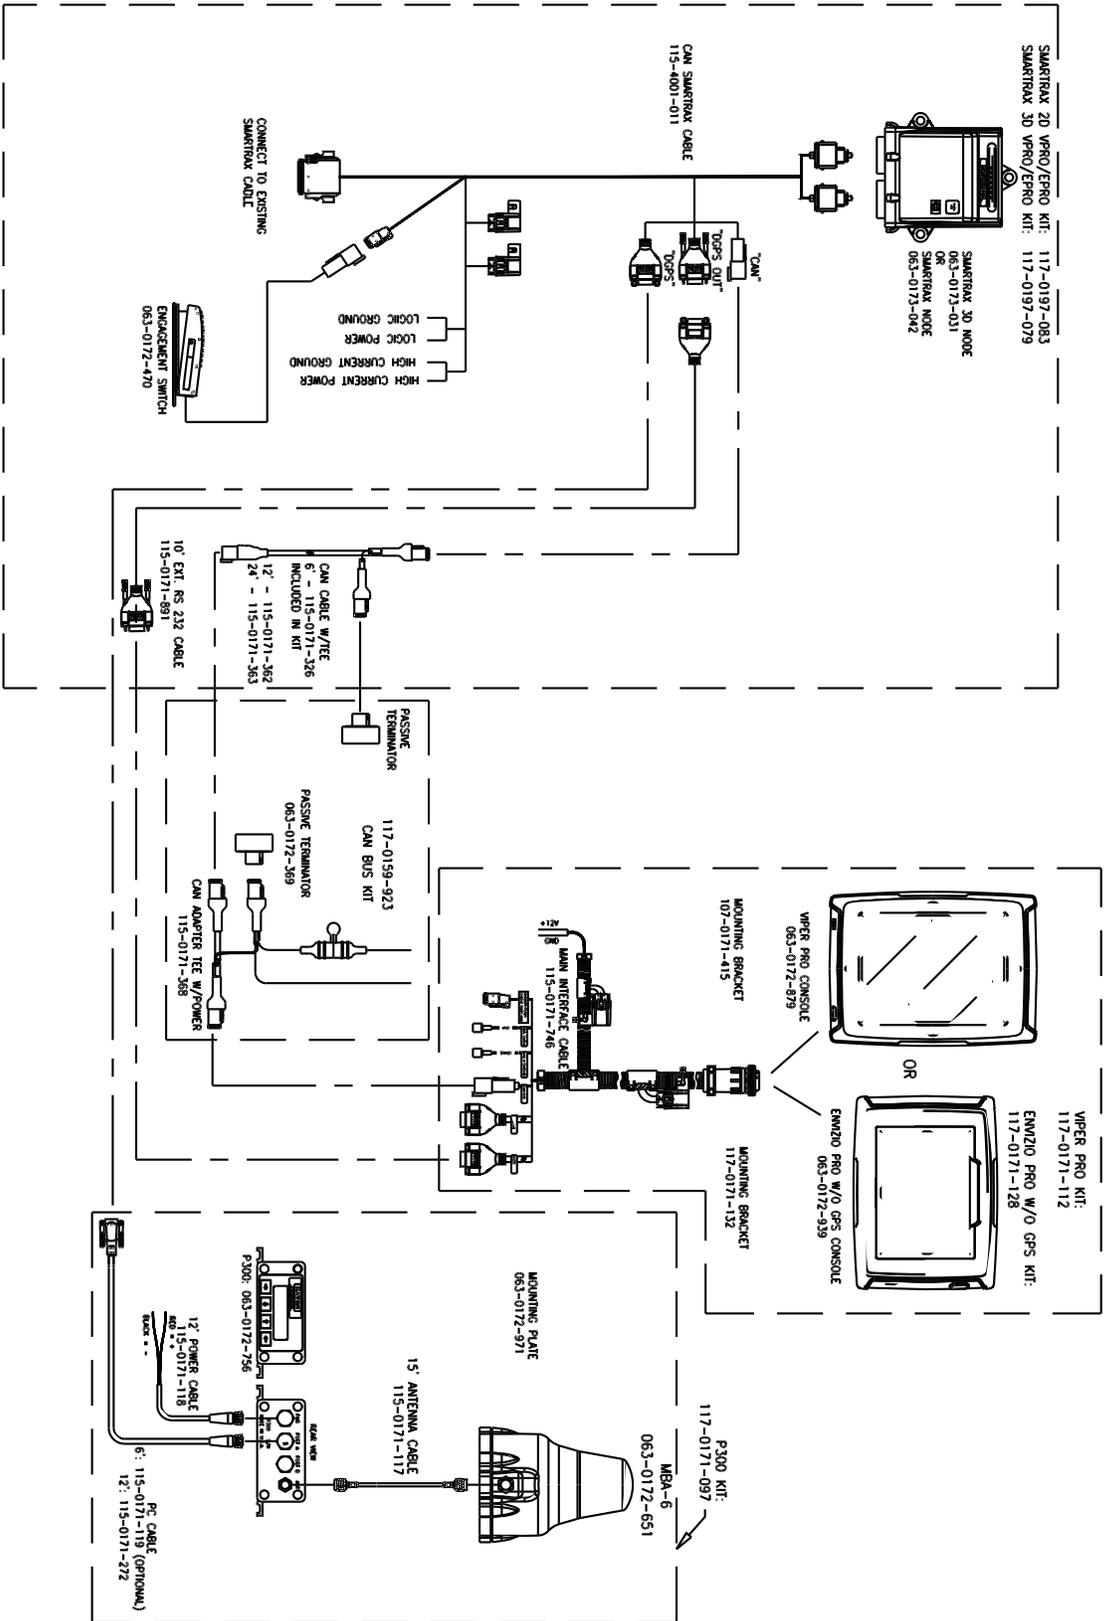

Cruizer

CRUIZER WITH HELIX ANTENNA/SMARTRAX 3D

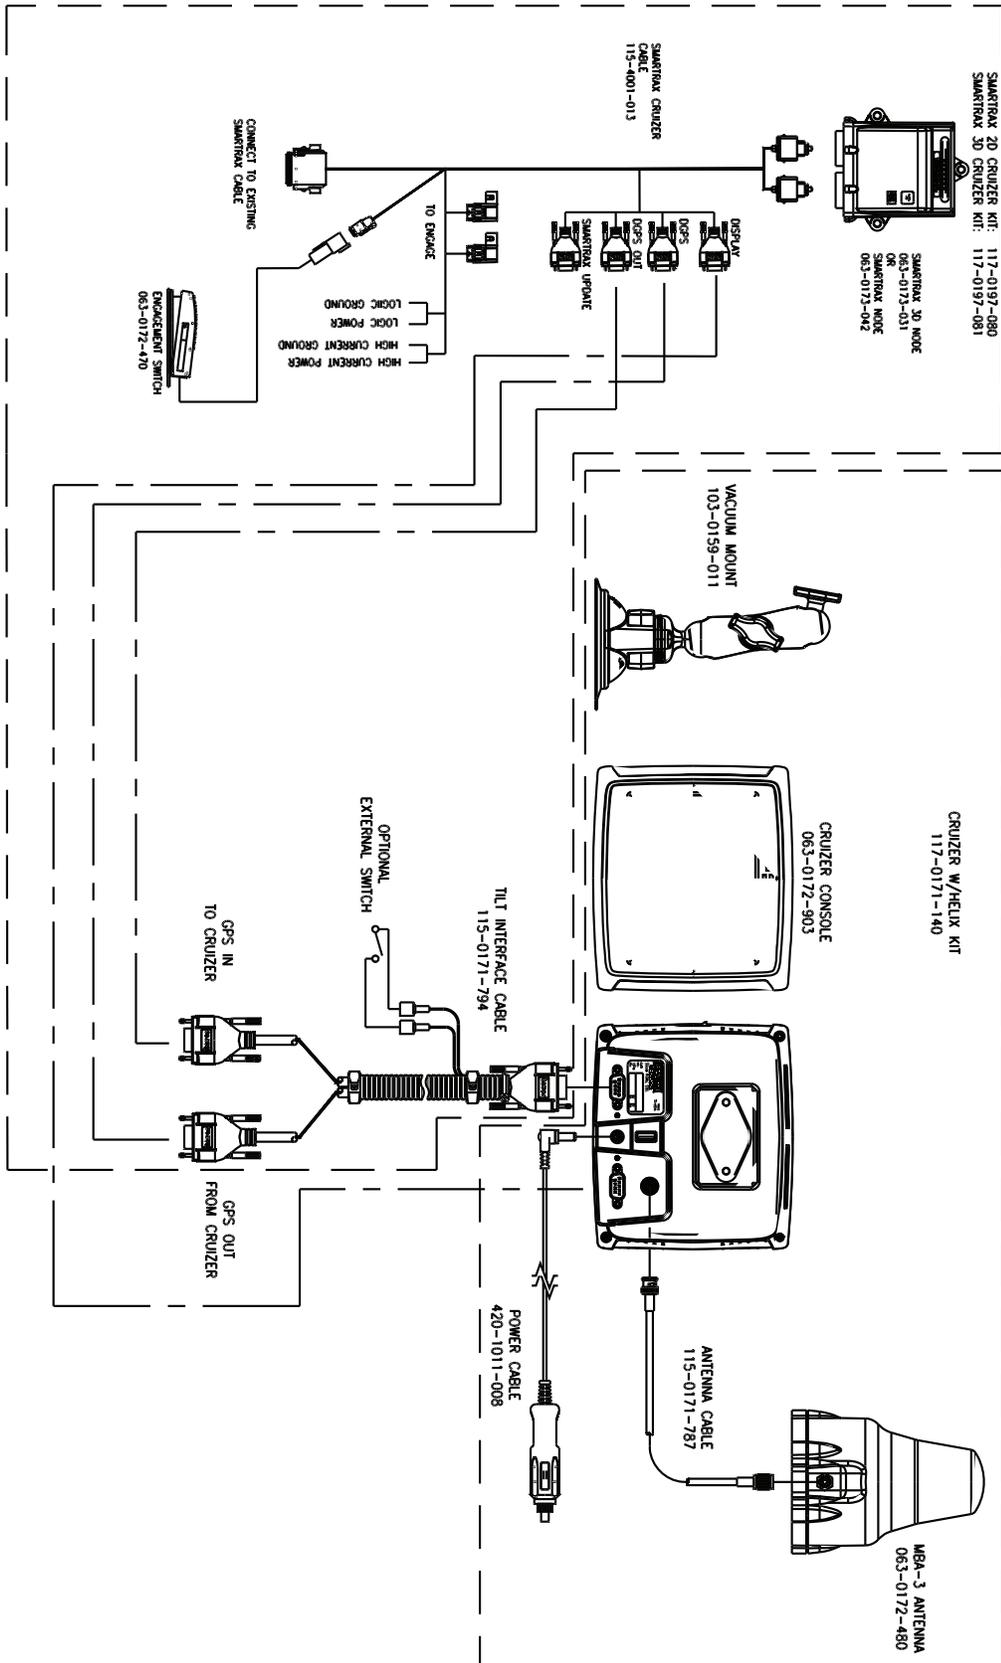

C

- CAN Node Wiring Diagram** 20
- Console Cable Harness Routing** 18

H

- Hydraulic Connections** 11
 - Diagram 16
 - Installing Hydraulic Hoses 12

I

- Important Safety Information** 1
 - Electrical Safety 2
 - Hydraulic Safety 2
- Installation**
 - Foot Switch 18
 - Recommendations
 - SmarTrax Node 19

- Introduction** 3

K

- Kit Contents** 5

L

- Left Steer Hose - Installation** 14
- Load Sense Hose - Installation** 13

M

- Mount the SmarTrax Hydraulic Valve** 9

P

- Preparing for Installation** 4
 - Hydraulic Fittings 5
 - Point of Reference 4
 - Recommendations 4
 - Tools Needed 4
- Pressure Hose - Installation** 14

R

- Right Steer Hose - Installation** 14

S

- Start-Up Procedures**
 - Verify the SmarTrax Installation 24
- System Drawings** 25

T

- Tank Hose - Installation** 14

W

- Wiring & Electrical Connections**
 - Pressure Transducer 17
 - SmarTrax Hydraulic Valve 17
- Wiring and Electrical Connections** 17

RAVEN

RAVEN INDUSTRIES

Limited Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service.

How Long is the Coverage Period?

Raven Applied Technology Division products are covered by this warranty for 12 months after the date of purchase. This warranty coverage applies only to the original owner and is nontransferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If your dealer agrees with the warranty claim, the dealer will send the part and proof of purchase to their distributor or to Raven Industries for final approval.

What Will Raven Industries Do?

Upon confirmation of the warranty claim, Raven Industries will, at our discretion, repair or replace the defective part and pay for return freight.

What is not Covered by this Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.