



**CAN Installation Manual**

**Hagie STS Series 4600 + Viper Consoles**



## CHAPTER

## 1

---

**INTRODUCTION**

Congratulations on your purchase of the Raven AccuBoom system! This system is designed to provide worry-free turn on and turn off of your booms with respect to the as-applied coverage map. The following instructions are designed to assist you in the proper installation of the AccuBoom system. See the Installation and Operation Manual of your particular console for instructions on setting up the software and using the AccuBoom system.

**Basic Kit Contents**

- ◆ AccuBoom CAN Node
- ◆ Machine Specific or Standard Console Cable
- ◆ CAN Tee Cable: 6", 6', 12', 18', or 24' long
- ◆ Install Manual



**Helpful Hint:** If no CAN system currently exists on the machine, an additional CAN Power Tee Kit is required.



**Important!** All boom switches must be in the OFF position while AccuBoom control is in operation! The master switch must be in the ON position while AccuBoom control is in operation!

**Notes:**

## CHAPTER

# 2

## INSTALLATION

---

Use the following procedure to properly install the CAN AccuBoom system.

1. Disconnect 37 pin connector on the SCS 4600 console and tee in the Accuboom harness (115-1001-013).



**Tee into SCS 4600 Console Cable**

2. Open the armrest and locate the 12 pin boom switch connectors. Tee in the Accuboom harness (115-1001-013).




**Tee into boom switch harness**

3. Attach Autoboom Node (063-0172-316) to the Accuboom harness (115-1001-013). Connect the 12 gauge red/white wires to a good source of pwr/gnd.
4. If the remote master switch was connected to the SCS 4600 console cable prior to installing the Accuboom, installation is complete. If the remote master was not connected to the SCS 4600, you will need to connect the remote master switch to the orange/white wire on the Accuboom harness (115-1001-013). Installation is now complete.



**Connect org/wht wire to remote master if not previously wired into the SCS 4600 console.**

# HAGIE STS 4600/VIPER ACCUBOOM INSTALL SCHEMATIC

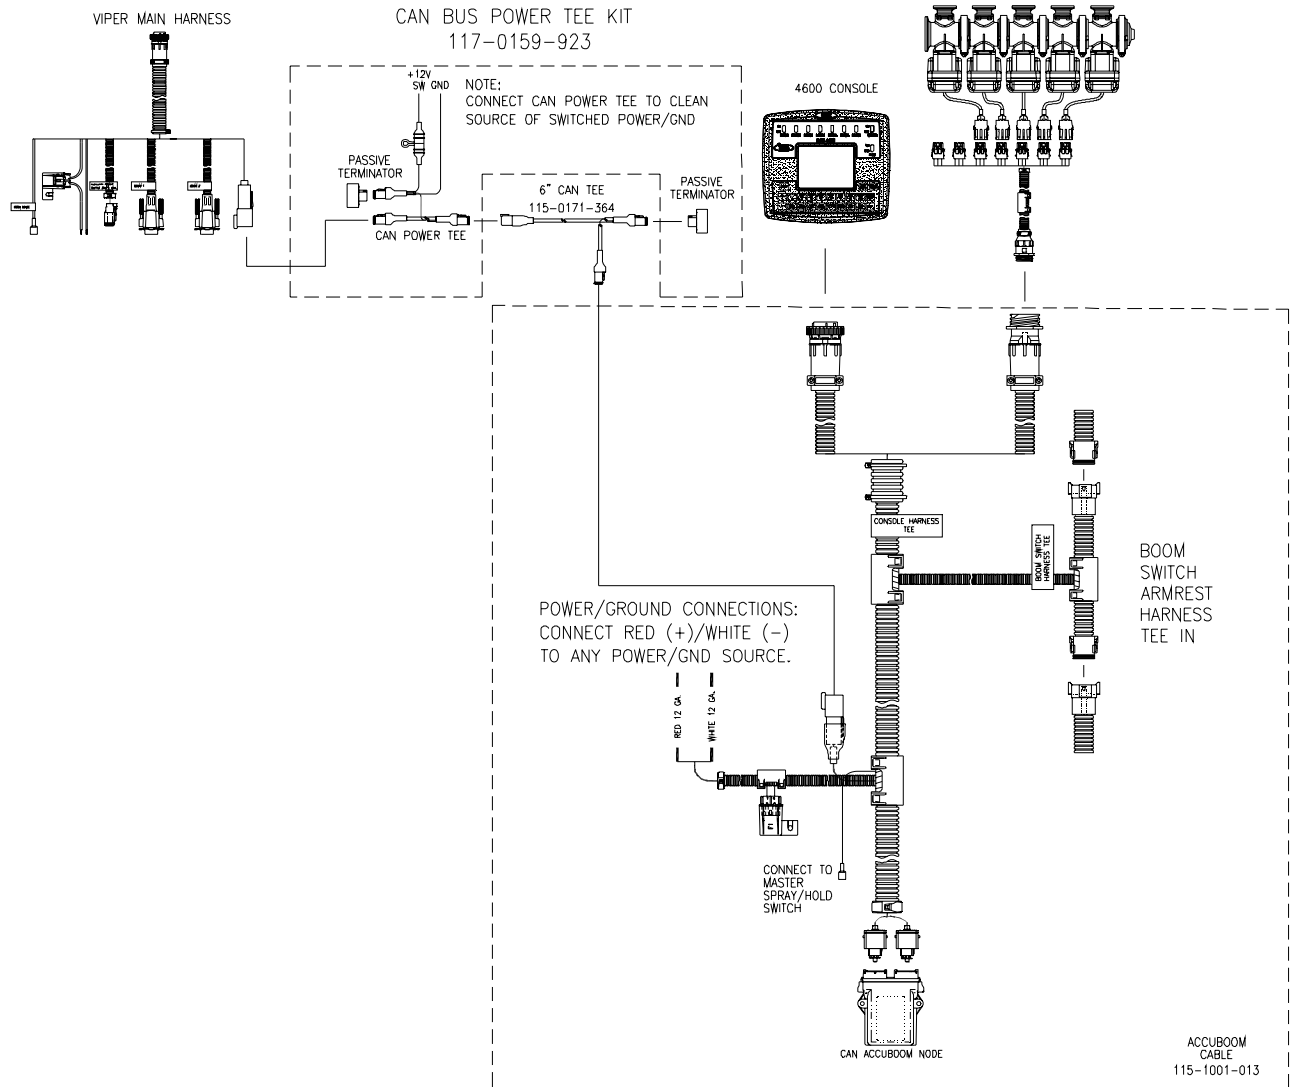

**Notes:**




## CHAPTER

## 3

## DIAGNOSTICS

The CAN AccuBoom Node P/N 063-0172-316 has additional features to allow the user to diagnose the AccuBoom system. The CAN AccuBoom node has a plastic window in the case that allows the user to view green diagnostic lights. The picture below shows the positioning and function of each of the LED lights.

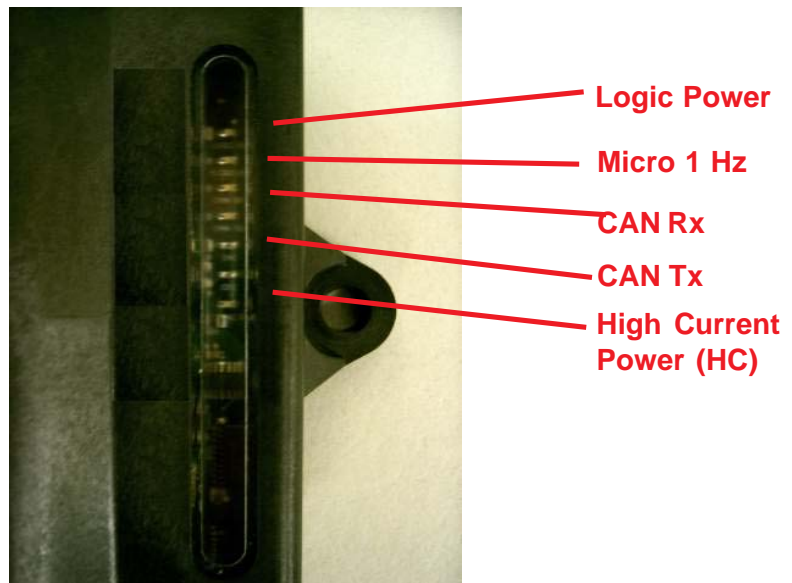

- ◆ **Logic Power:** Lit when 12VDC logic power is available at the node.
- ◆ **Micro 1 Hz:** Flashes at 1 Hz interval when processor is active.
- ◆ **CAN Rx:** Flashes when CAN messages are being received.
- ◆ **CAN Tx:** Flashes when CAN messages are being transmitted.
- ◆ **High Current Power:** Lit when High Current Power is applied to the node.

**Notes:**



# RAVEN INDUSTRIES LIMITED WARRANTY

## **WHAT IS COVERED?**

This warranty covers all defects in workmanship or materials in your Raven Flow Control Product under normal use, maintenance, and service.

## **HOW LONG IS THE COVERAGE PERIOD?**

This warranty coverage runs for 12 months from the purchase date of your Raven Flow Control Product. This warranty coverage applies only to the original owner and is not transferrable.

## **HOW CAN YOU GET SERVICE?**

Bring the defective part, and proof of date of purchase, to your local dealer. If your dealer agrees with the warranty claim, he will send the part, and proof of purchase to his distributor or to Raven for final approval.

## **WHAT WILL RAVEN INDUSTRIES DO?**

When our inspection proves the warranty claim, we will, at our option, repair or replace the defective part and pay for return freight.

## **WHAT DOES THIS WARRANTY NOT COVER?**

Raven Industries will not assume any expense or liability for repairs made outside our plant without written consent. We are not responsible for damage to any associated equipment or product and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person is authorized to assume for us any liability. Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.



Raven Industries  
Flow Controls Division  
P.O. Box 5107  
Sioux Falls, SD 57117-5107

Toll Free 800-243-5435  
Fax 605-331-0426  
[www.ravenprecision.com](http://www.ravenprecision.com)  
[fcinfo@ravenind.com](mailto:fcinfo@ravenind.com)

Notice: This document and the information provided are the property of Raven Industries, Inc. and may only be used as authorized by Raven Industries, Inc. All rights reserved under the copyright laws.