
PowerGlide Plus to UltraGlide Valve Conversion


Square Coil Valves

FIGURE 1. PowerGlide Plus to UltraGlide Valve Conversion

BEFORE CONVERSION

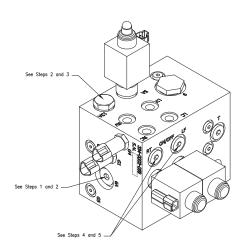

AFTER CONVERSION

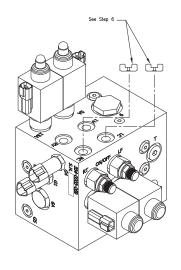

1. Remove the port plug from Port 6A.

Note: Keep the port plug for future use.


- 2. Remove the cavity plug from Port 13A and place it in Port 6A.
- 3. Install the pressure reducing valve (P/N 334-0002-069) in Port 13A.
- 4. Remove the port plugs from Ports RT and LF ON/OFF.

Note: Keep the port plugs for future use.

- 5. Install hydraulic needle valves (P/N 334-0002-071) in Ports RT and LF ON/OFF.
- 6. Loosen the jam nuts on the needle valves.
- 7. Using a hex key wrench, turn the set screws clockwise until they won't turn any further.
- 8. Tighten the jam nuts.
- 9. Install orifices (P/N 333-0002-204) into Ports LC and RC, flat side down.

Round Coil Valves

FIGURE 2. PowerGlide Plus to UltraGlide Valve Conversion

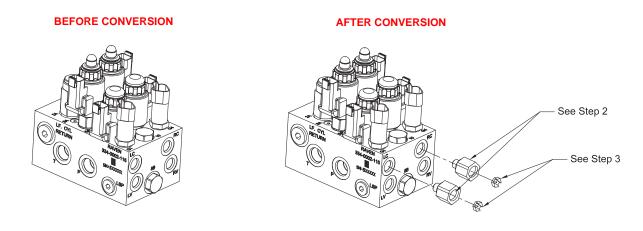

- 1. Remove the fittings from Ports LC and RC.
- 2. Install fittings (P/N 019-0159-504) into Ports LC and RC.
- 3. Install orifices (P/N 333-0002-204) in fittings installed in Ports LC and RC, with the flat side toward the valve.
- 4. Install the fittings removed in step 1 on the installed orifice fittings.