Tank Fill Monitor Quick Reference Guide

Home Screen



- Tank Volume The amount of product currently in the tank.
- Fill Volume Amount of product added to the tank through the fill flow line.

Main Run Screen



- Tank Volume The amount of product currently in the tank.
- Fill Volume Amount of product added to the tank through the fill line. If there is no flow through the fill line for two minutes, the Fill Volume value is changed to zero and the previous value is transferred to the Previous Fill Volume.
- Sparge Pressure Displays the product pump pressure.
- Total Volume The total amount applied. As the Tank Volume value decreases, the Total Volume increases.
- Previous Fill Volume Displays the previous Fill Volume value.



Fill Meter Cal Screen

Screen used to enter the Meter Cal value stamped on the fill flow meter. Use the buttons immediately below the screen to adjust the value.

Information Screen



The Information Screen displays the hardware and software version information.

FIGURE 1. System Diagram

