

DCS 700 REPLACEMENT PARTS

ITEM	DESCRIPTION	RAVEN PART #
1	MASTER Switch/POWER Switch	412-2011-073
2	Blast Button	412-2011-072
3	MANUAL INC/DEC Switch	412-2011-049
4	RATE/SPINNER Knob Assembly	063-0171-802
5	Knob Cap	309-1000-018
6	ALARM light	019-0159-132
7	Mounting Knob	106-0159-438
8	Mounting Bracket	106-0159-437
9	Key Switch	412-8000-005
10	DCS 700 Console	063-0171-711
11	Fuse Holder	510-2001-018
12	Fuse, 15 Amp	510-1003-003
13	World Allison Interface or Speed Sensor Assembly	115-0159-953 063-0171-340
14	Adapter Plug	115-0171-017
15	Dust Cap	063-0171-043
16	Console Cable (31 ft)	115-0159-957
17	Granular Cable (9 ft)	115-0159-956
18	Pre-wet Cable (2ft)	115-0171-011
19	Switch Cover	063-0171-743
20	1-Set Filler Spacers	117-0159-421
21	Face Plate Assembly	063-0171-744
22	Display Board Spacer	107-0159-478
23	LCD Display Board	063-0171-961
24	Processor Board	064-0159-676
25	Connector Plate Assembly	063-0171-742
26	Back Assembly	063-0159-530

Pre-wet Booster (not shown)

063-0171-736

