

SCS 203 LIQUID GAUGE INSTALLATION SHEET

1. Remove SCS-203 Console battery connection (red and white wires).
2. Remove 4 screws from front of SCS-203 Console.
3. Pushing on cable, slide out faceplate assembly from back enclosure.
4. Cut off 1/4" tubing close to plastic pressure gauge fitting.
5. Remove plastic fitting and nut from back of pressure gauge (DO NOT USE).
6. Slide out pressure gauge.
7. Ream pressure gauge stem hole to .562" (9/16") diameter.
8. Install new pressure gauge with affixed o-ring around gauge.
9. Place washer over male threads of gauge then screw on gauge to tubing adapter. Loosen nut on gauge to tubing adapter.
10. Push tubing into gauge to tubing adapter.
11. Tighten gauge to tubing adapter nut.
12. Reassemble faceplate with 4 screws.
13. Reconnect red and white wires to battery.
14. Check for leakage.

