

Simply improving your position.[™]

SmarTrax[™] Installation Manual



Miller Condor G-Series

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be held responsible or liable for the effects of atmospheric conditions and sunspot activity on the performance of our products.

Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of the GPS signal from the U.S. Department of Defense/NAVSTAR GPS satellites, the OmniSTAR correction service or the WAAS correction service.

Raven Industries accepts no responsibility for the use of the signal for other than the stated purpose. Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss or impairment of data arising out of the use, or inability to use, the SmarTrax or any of its components.

Chapter 1	Important Safety Information	1
•	Safety	
Electrical S	Safety	2
Chapter 2	Introduction	3
Preparing for I	Installation	3
Recomme	ndations	4
	ded	
	eference	
	ngs	
	Iraulic Valve Mounting Bracket	
	arTrax Hydraulic Valve	
Smar Irax Tan	npering Warning Label	10
Chapter 4	Hydraulic Connections	11
Install the Pres	ssure Hose	11
Install the Tan	k Hose	13
Install the Left	& Right Steer Hoses	14
Install the Pres	ssure Switch	14
SmarTrax	Hydraulic Installation Schematic	15
Chapter 5	Wiring & Electrical Connections	17
Connect the S	SmarTrax Hydraulic Valve	17
	Pressure Override Switch	
Route the Valv	ve Cable Harness	18
Install the Foo	t Switch	18
Install the Sma	arTrax Node	19
Chapter 6	Start-Up Procedures	21
Remove Air from	om the Hydraulic System	
	arTrax Installation	



NOTICE

Read this manual and the operation and safety instructions included with your implement and/or controller carefully before installing the SmarTrax[™] system.

- Follow all safety information presented within this manual
- If you require assistance with any portion of the installation or service of your Raven equipment, contact your local Raven dealer for support.
- Follow all safety labels affixed to the SmarTrax components. Be sure to keep safety labels in condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact your local Raven dealer.

When operating the machine after installing SmarTrax, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate SmarTrax or any agricultural equipment while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when SmarTrax is engaged.
- Disable SmarTrax when exiting from the operator's seat and machine.
- Do not drive the machine with SmarTrax enabled on any public thorough-fare or main road.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling SmarTrax when the safe working distance has diminished.
- Ensure SmarTrax is disabled prior to starting any maintenance work on SmarTrax or the machine.

Please review the operation and safety instructions included with your implement and/or controller.

A WARNING

- Always wear appropriate protective equipment when working on hydraulics.
- This machine must remain stationary and switched off with the booms unfolded and supported while installation or maintenance is conducted.
- Before starting the hydraulic installation, be sure to bleed pressure from the hydraulic system.
- Hydraulic fluid may be hot or under high pressure. When starting the machine for the first time after
 installing the SmarTrax system, be sure that all persons stand clear of the machine in case a hose or fitting
 has not been completely tightened.

A CAUTION

Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on the hydraulic system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when first opening a system that has previously been pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic oil may be extremely hot and under high pressure. Caution must be exercised.
- Any work carried out on the hydraulic system must be performed in accordance with the machine manufacturers's approved maintenance instructions.
- When installing SmarTrax hydraulics or performing diagnostics, maintenance, or routine service, ensure
 precautions are taken to prevent any foreign material or contaminants from being introduced in the
 machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration
 system will adversely reduce performance and possibly damage the SmarTrax hydraulic valves.

Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.



Congratulations on your purchase of the Raven SmarTrax system. This system is designed to provide cuttingedge, hands-free steering of agricultural equipment via GPS (Global Positioning System) coordinates.

This manual applies to the following machines. For future reference, write your serial number in the space below.

Make: Miller

Model: Condor G-Series

Year:

Serial Number:

FIGURE 1. Miller Condor G-Series Self Propelled Sprayer



Preparing for Installation

Before installing SmarTrax, park the machine where the ground is level, clean, and dry. Be sure to follow proper safety practices and procedures during the SmarTrax installation procedure. Bleed pressure from the hydraulic system and leave the machine turned off for the duration of the installation process. Carefully read and follow the instructions in this manual to properly complete the installation process.

Recommendations

Observe the following recommendations while installing the SmarTrax system:

- Use part numbers to identify parts.
- Do not remove the plastic wrapping from a part until it is necessary for installation.
- Do not remove plastic caps from a part until it is necessary for installation.

Tools Needed

Before beginning the installation process, it is a good idea to gather all the tools that you will need. These tools include the following items:

- · Screwdrivers of various sizes
- SAE Standard-sized wrenches
- Allen wrenches
- Utility knife
- Drill
- Drill bits
- Side Cutters
- Pliers

Point of Reference

The instructions in this manual assume that you are standing behind the machine, looking toward the cab.

Hydraulic Fittings

The following fitting types may be referenced in this manual:

FIGURE 2. Hydraulic Fitting Types





SAE O-Ring Fitting (M)



Kit Contents

This section contains a list of the kit contents that you should have received with this SmarTrax kit. Before you begin assembling the kit, compare the items in your SmarTrax kit with this list. If you have questions about your kit, contact your local Raven dealer or the Raven Customer Support Center.

TABLE 1. Miller Condor G-Series SmarTrax Installation Kit (P/N 117-0295-094)

Picture	Item Description	Part Number	Qty
(No Picture)	Manual - Miller Condor SmarTrax Installation	016-0190-094	1
-63	Cable - SmarTrax Valve Harness	115-4001-023	1
a	Bracket - Hydraulic Valve Mounting	116-0159-527	1
	Switch - SmarTrax Hydraulic Override (with Hardware)	422-0000-074	1
A TOTAL	Valve - SmarTrax Hydraulic	334-0003-064	1
TAMPERING WITH HICHARLE VISUAL SAME SERVING SALUES ON CEAP A SELL VICE SAMEARTY	Label - Tampering Warning	041-0159-689	1
	Bolt - 5/16" Hex Head	311-0052-104	4
	Bolt - 3/8" UNC	311-0054-106	2
	Nut - 3/8" Flanged Lock	312-1001-164	2

TABLE 1. Miller Condor G-Series SmarTrax Installation Kit (P/N 117-0295-094)

Picture	Item Description	Part Number	Qty
	Washer - 5/16" Split Lock	313-1000-019	4
	Washer - 3/8" Flat	313-2300-013	2

TABLE 2. Miller Condor SmarTrax Hydraulic Kit (P/N 117-0194-083)


Picture	Item Description	Part Number	Qty
	Fitting - 13/16" ORFS (M/M/F) Swivel Run Tee	333-0012-028	1
F	Fitting - 9/16" JIC (M/F) 90° Swivel Elbow	333-0012-042	3
	Fitting - 3/4" JIC (M/F) 90° Swivel Elbow	333-0012-064	2
	Fitting - 13/16" ORFS (M/F) 90° Swivel Elbow	333-0012-067	2
	Fitting - 11/16" ORFS (M/M/F) Swivel Run Tee	333-0012-069	2
The state of the s	Fitting - 13/16" ORFS (M/M) Adapter	333-0012-070	1
THE STATE OF THE PARTY OF THE P	Hose - 9/16" ORFS (F) to 3/4" JIC (F), 27"	214-1000-069	2

TABLE 2. Miller Condor SmarTrax Hydraulic Kit (P/N 117-0194-083)

Picture	Item Description	Part Number	Qty
Control of	Hose - 11/16" ORFS 90° (F) to 9/16" JIC (F), 80"	214-1000-485	1
THE REAL PROPERTY.	Hose - 13/16" ORFS (F) to 9/16" JIC (F), 35"	214-1000-595	1
A CONTRACTOR OF THE PARTY OF TH	Hose - 11/16" ORFS (F) 90° to 9/16" JIC (F), 70"	214-1000-487	1

CI	ha	pt	er	2

Notes:

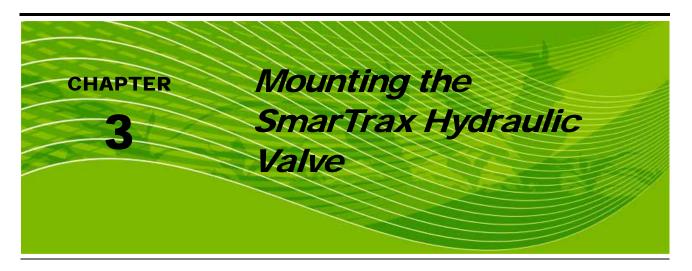

Install the Hydraulic Valve Mounting Bracket

1. The hydraulic valve mounting bracket (P/N 116-0159-527) should be mounted to the cab support on the right side of the machine in front of the hydraulic tank.

FIGURE 1. SmarTrax Hydraulic Valve Mounting Location



SmarTrax Hydraulic Valve Mounting Location



SmarTrax Hydraulic Valve Mounting Location (Right Side of Machine)




2. Use the supplied 3/8" bolts (P/N 311-0054-106), flat washers (P/N 313-2300-013), and lock nuts (P/N 312-1001-164) to secure the mounting bracket to the cab support.

Mount the SmarTrax Hydraulic Valve

Mount the SmarTrax hydraulic valve (P/N 334-0003-064) to the mounting bracket using the supplied 5/16" bolts (P/N 311-0052-104) and lock washers (P/N 311-1000-019). Mount the valve so that the 'PS' port on the SmarTrax valve is pointing to the rear of the machine.

FIGURE 2. Pressure Switch ('PS' Port) Orientation

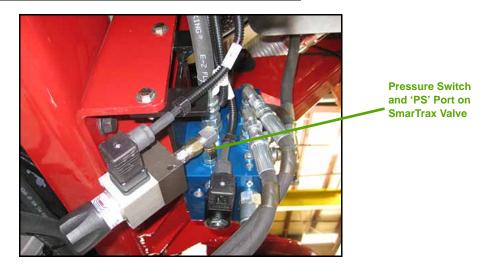

SmarTrax Tampering Warning Label

Raven Industries supplies a tampering warning label (P/N 041-0159-689) with all SmarTrax kits. This label should be applied on or near the SmarTrax hydraulic block or mounting bracket and in a location where anyone working on the machine is able to clearly see and read the label.

- 1. Thoroughly clean and dry the surface to which the label will be affixed.
- 2. Remove the protective backing from the tamper warning label (P/N 041-0159-689).
- Carefully apply the label to the cleaned area and rub with a dry cloth to ensure the label is firmly applied.





WARNING

Hydraulics are under pressure. Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when working on a system that has previously been pressurized. When disconnecting or purging hydraulic connections, be aware that hydraulic oil within the system may be extremely hot and under high pressure.




A CAUTION

Ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will adversely reduce performance and possibly damage the SmarTrax hydraulic valves.

Install the Pressure Hose


 Locate the relief valve mounted on the back side of the cab support to which the SmarTrax Valve is mounted.

FIGURE 1. Existing Relief Valve Location

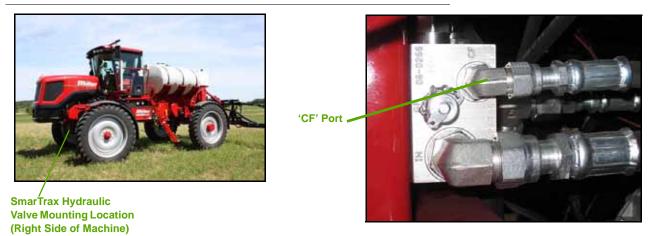

- 2. Disconnect the existing pressure hose from the 'CF' port on the relief valve.
- 3. Install the supplied fitting (P/N 333-0012-070) to the hose disconnected in step 2.
- Connect the supplied hose (P/N 214-1000-069) to the installed fitting and route to the 'EF' port on the SmarTrax valve.

FIGURE 2. SmarTrax Block Hydraulic Connections

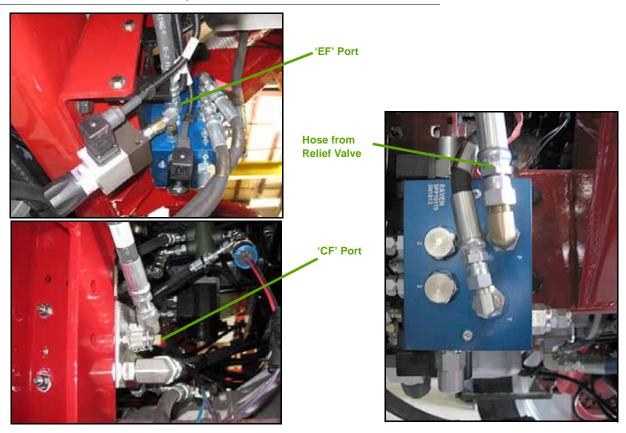

5. Connect the supplied hose (P/N 214-1000-069) to the 'CF' port on the relief valve and route to the 'P' port on the SmarTrax valve. Install the supplied elbow fitting (P/N 333-0012-064) into the 'P' port on SmarTrax valve and connect hose.


Install the Tank Hose

1. Locate the hydraulic reservoir on the right side of the machine and the existing tank line.

FIGURE 3. Hydraulic Reservoir




SmarTrax Hydraulic Valve Mounting Location (Right Side of Machine)

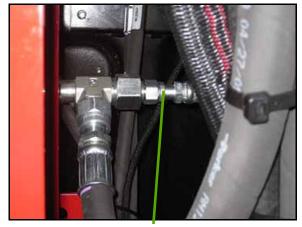

Existing 13/16" ORFS Tank Line

- 2. Disconnect the 13/16" ORFS tank line feeding into the reservoir tee.
- 3. Connect the supplied tee fitting (P/N 333-0012-028) onto the existing line and reconnect the existing machine hose to the installed tee fitting. Use the supplied elbow fitting (P/N 333-0012-067) if necessary to help with hose routing.
- 4. Connect the supplied hose (P/N 214-1000-595) to the remaining connector on the installed tee fitting and route to the 'T' port on the SmarTrax valve block. Install supplied elbow fitting (P/N 333-0012-042) onto the 'T' port on the SmarTrax block and connect hose.

FIGURE 4. SmarTrax Tank Line

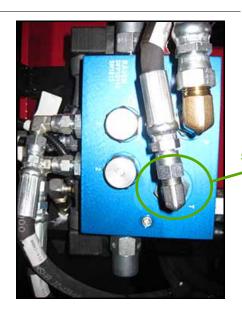


SmarTrax Valve Tank Connection

Install the Left & Right Steer Hoses

- 1. Locate the base end of the left steering cylinder.
- 2. Disconnect the hose connected to the base of the hydraulic steering cylinder.
- 3. Install a supplied tee fitting (P/N 333-0012-069) to the base of the steering cylinder and reconnect the existing hose to the installed tee fitting.

FIGURE 5. Steering Cylinder Connections

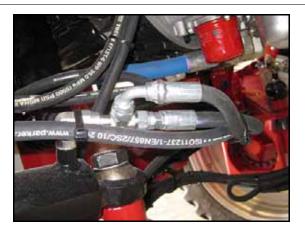



'A' and 'B' Ports

- 4. Connect the supplied hose (P/N 214-1000-487) to the installed tee fitting and route to the 'A' port on the SmarTrax valve. A supplied elbow fitting (P/N 333-0012-042) may be installed on the SmarTrax block for hose routing purposes.
- 5. Repeat step 1 through step 4 to connect the right steering cylinder to port 'B' on the SmarTrax valve using the supplied hose (P/N 214-1000-485).

Install the Pressure Switch


Install the steering override pressure switch (P/N 422-0000-074) on the 'PS' port of the SmarTrax valve.


FIGURE 6. Steering Override Pressure Switch



SmarTrax Hydraulic Installation Schematic

Before Smartrax Installation

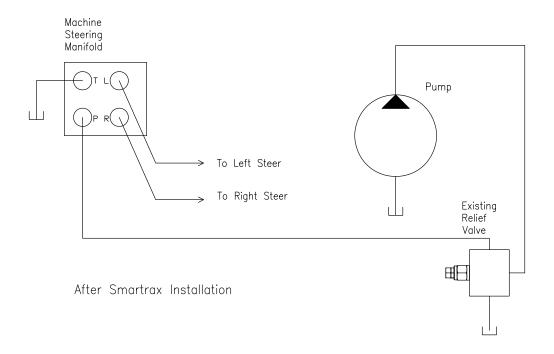


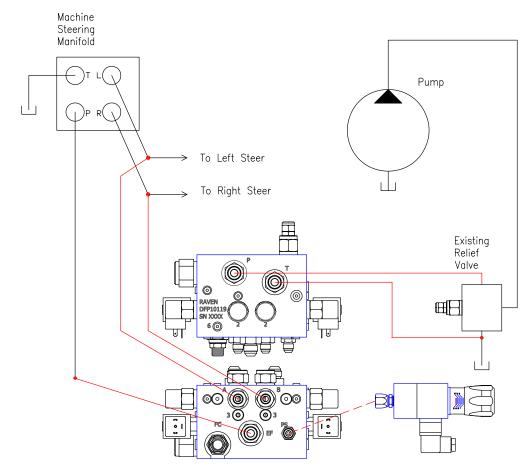

Cha	oter	4
-----	------	---

 Notes:





A CAUTION

Ensure that the power cable is the last cable connected and the leads are connected to the correct polarity.

Do not reverse the power leads. Doing so will cause severe damage to the equipment.

Connect the SmarTrax Hydraulic Valve

- 1. Place a solenoid gasket (included in the packet with the cable harness) on the solenoid installed in port '1A' on the SmarTrax hydraulic valve (P/N 334-0003-064).
- 2. Locate the connector labeled 'LEFT' on the SmarTrax console cable harness (P/N 115-4001-023).
- 3. Insert the connector labeled 'LEFT' to the solenoid installed in port '1A' on the SmarTrax hydraulic valve.
- 4. Tighten the screw on the connector to secure the solenoid connection.
- 5. Repeat step 1 through step 4 to connect the 'RIGHT' connector to the solenoid on port '1B.'

FIGURE 1. Solenoid Connections on the SmarTrax Valve



Connect the Pressure Override Switch

- 1. On the valve cable harness (P/N 115-4001-023), identify the connector labeled 'OVERRIDE.'
- **2.** Connect that 'OVERRIDE' connector to the pressure override switch.
- 3. Tighten the screw on the connector to secure the solenoid connection.

FIGURE 2. Pressure Override Switch Connection



Route the Valve Cable Harness

Once the SmarTrax hydraulic valve and pressure override switch are connected to the console cable harness, the remaining connectors must be routed into the cab.

- 1. Locate the 12-pin Deutsch connector (labeled CD01) on the chassis harness along the right frame rail. The connector should be located near the center (fore/aft) of the machine.
- 2. Remove the dust cap and connect the SmarTrax valve harness (P/N 115-4001-023).

Note: When routing the SmarTrax console cable harness, follow the path of other hoses or cables to avoid potential wear areas.

Install the Foot Switch


- 1. Select a location for the SmarTrax foot switch (P/N 063-0172-470) within easy reach of the operator to fully press the front of the pedal.
- 2. Use the SmarTrax foot switch as a template and pre-drill holes in the floor.
- 3. Secure the foot switch to the floor with four screws or bolts through each of the mounting holes.
- Locate the connector labeled 'ENABLE' on the SmarTrax cab cable harness (P/N 115-4001-016) and connect it to the foot switch cable.

FIGURE 3. Foot Switch Mounting Example



Install the SmarTrax Node

FIGURE 4. Node Mounting

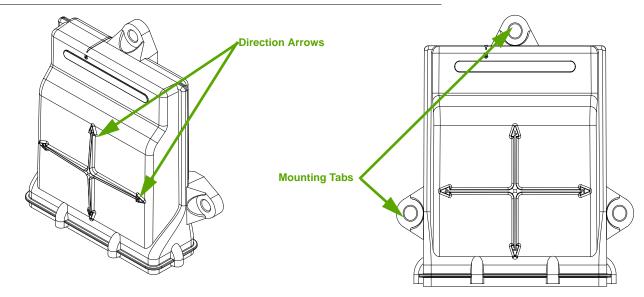

To Install the Node:

- 1. Connect the SmarTrax cab harness (P/N 115-4001-016) to the SmarTrax node.
- 2. Remove the cover plate beneath the window on the right cab wall.
- 3. Mount the SmarTrax node to the three existing studs and secure using the supplied flat washers (P/N 313-2300-011) and nylon lock nuts (P/N 312-4000-059).

FIGURE 5. SmarTrax Node Mounting Location



- 4. Locate the 8-pin Deutsch connector (labeled CD17) on the main cab harness.
- 5. Remove the dust cap and connect to the 8-pin Deutsch connector on the SmarTrax harness.

Note: Power and ground for CANbus logic and high current are connected via the 8-pin Deutsch connector.

- 6. Locate the 12-pin Deutsch connector (labeled CD18) on the main cab harness.
- 7. Remove the dust cap and connect to 12-pin Deutsch connector on SmarTrax cab harness.

Note: This connects the cab harness to the SmarTrax valve harness.

8. Make the necessary GPS connections and neatly secure cabling before replacing the cover plate.

FIGURE 6. Final SmarTrax Node Installation







WARNING

When starting the machine for the first time, keep the area around the machine clear of people or bystanders in case a fitting or hose has not been fully tightened.



WARNING

DO NOT use hands to check for leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury or death.

Always wear appropriate protective equipment when working on the hydraulic system.

Remove Air from the Hydraulic System

Anytime a hydraulic system is purged for maintenance, or during the SmarTrax system installation, air is introduced into the hydraulic lines. Anytime the system is purged or fittings are loosened or disconnected, it is important to remove air pockets from the hydraulic system to avoid unwanted operation of the hydraulic system.

To remove air from the hydraulic system, turn the wheels fully from side to side repeatedly. If air pockets are present, the wheels may not move consistently while the steering wheel is operated. Continue turning the wheels until the wheels move steadily and smoothly with the steering wheel.

Verify the SmarTrax Installation

- 1. Turn on the machine.
- 2. With the machine running, double-check all fitting and hose connections to ensure that:
 - Hoses are not rubbing or interfering with other moving parts.
 - Hydraulic fluid is not leaking.
- 3. If there are any problems, shutdown the machine and correct problems immediately.

If you need additional assistance, contact your local Raven dealer or the Raven Customer Support Center at 1-800-243-5435.

Н

Hydraulic Connections 11

Left & Right Steer Hoses 14
Pressure Hose 11
Pressure Switch 14
Tank Hose 13

K

Kit Contents 5

P

Preparing for Installation 3 Point of Reference 4

Point of Reference 4 Recommendations 4 Tools Needed 4



Safety Information 1

Electrical Safety 2 Hydraulic Safety 2

SmarTrax Hydraulic Installation Schematic 15

Start-Up Procedures 21

Remove Air from the Hydraulic System 21 Verify the SmarTrax Installation 22

W

Wiring & Electrical Connections

Connect the Pressure Override Switch 18 Connect the SmarTrax Hydraulic Valve 17 Install the Foot Switch 18 Install the SmarTrax Node 19 Route the Console Cable Harness 18

R A V E N RAVEN INDUSTRIES

Limited Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Product under normal use, maintenance, and service.

How Long is the Coverage Period?

Raven Applied Technology Products are covered by this warranty for 12 months after the date of purchase. This warranty coverage applies only to the original owner and is nontransferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven Dealer. If your Dealer agrees with the warranty claim, the Dealer will send the part and proof of purchase to their distributor or to Raven Industries for final approval.

What Will Raven Industries Do?

Upon confirmation of the warranty claim, Raven Industries will, at our discretion, repair or replace the defective part and pay for return freight.

What is not Covered by this Warranty?


Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.



Miller Condor G-Series SmarTrax[™] Installation Manual (P/N 016-0190-094 Rev A 7/09)

Simply improving your position.[™]

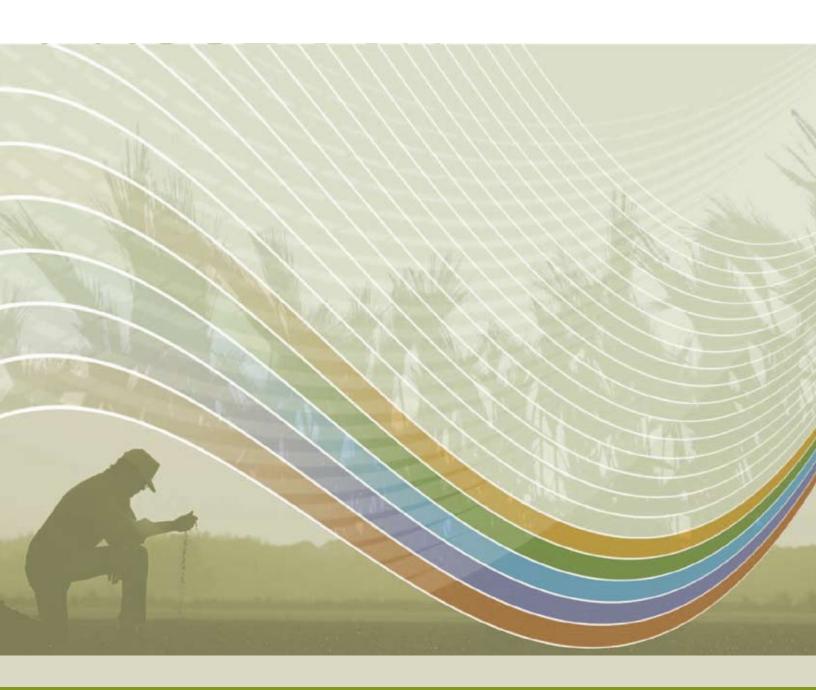

Raven Industries Applied Technology Division P.O. Box 5107 Sioux Falls, SD 57117-5107 Toll Free (U.S. and Canada): (800)-243-5435 or Outside the U.S. :1 605-575-0722 Fax: 605-331-0426 www.ravenprecision.com atdinfo@ravenind.com