

R A V E N

SmarTrax™ Installation Manual



**Valtra BH180, BH 185i, and BH205i
(Model Years 2004-2010)**

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

Chapter 1	<i>Important Safety Information</i>	1
	Hydraulic Safety	2
	Electrical Safety	2
Chapter 2	<i>Introduction</i>	3
	Updates	3
	Preparing for Installation	4
	Recommendations	4
	Point of Reference	4
	Kit Contents	4
Chapter 3	<i>Hydraulic System Installation</i>	9
	Install Fittings in the SmarTrax Valve	10
	Mount the SmarTrax Valve	11
	Install the Left and Right Steering Hoses	11
	Install the Pressure Hoses	13
	Install the Tank Hose	15
	Tighten the Connections to the SmarTrax Valve	16
	Hydraulic Diagram	17
Chapter 4	<i>Wheel Angle Sensor Installation</i>	19
	Assemble the Wheel Angle Sensor (WAS)	19
	Mount the WAS	20
Chapter 5	<i>Cab Component Installation</i>	23
	Install the SmarTrax Node	23
	Mount the SmarTrax Node	23
	Node Mounting Locations	24
	Install the Foot Switch	24
	Install the Valve Harness	25
	Install the Chassis Cable - SmarTrax-Only Systems (If Applicable)	28
	Connect SmarTrax to an Existing Chassis Cable (If Applicable)	28
	System Diagrams	29
Chapter 6	<i>Startup Procedures</i>	33
	Verify the SmarTrax System Installation	33
	Calibrate the SmarTrax System	34

CHAPTER

1

Important Safety Information

NOTICE

Read this manual and the operation and safety instructions included with your implement and/or controller carefully before installing the SmarTrax™ system.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your Raven equipment, contact your local Raven dealer for support.
- Follow all safety labels affixed to the SmarTrax system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact your local Raven dealer.

When operating the machine after installing SmarTrax, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate SmarTrax or any agricultural equipment while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when SmarTrax is engaged.
- Disable SmarTrax when exiting the operator's seat and machine.
- Do not drive the machine with SmarTrax enabled on any public road.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling SmarTrax when the safe working distance has diminished.
- Ensure SmarTrax is disabled prior to starting any maintenance work on SmarTrax or the machine.

WARNING

- When starting the machine for the first time after installing SmarTrax, be sure that all persons stand clear in case a hose has not been properly tightened.
- The machine must remain stationary and switched off during SmarTrax installation or maintenance.

 **CAUTION**

Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on the hydraulic system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when opening a system that has been previously pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic fluid may be extremely hot and under high pressure. Caution must be exercised.
- Any work performed on the hydraulic system must be done in accordance with the machine manufacturer's approved maintenance instructions.
- When installing SmarTrax hydraulics or performing diagnostics, maintenance, or routine service, ensure that precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the SmarTrax valve.

Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.

CHAPTER

2

Introduction

Congratulations on your purchase of the SmarTrax system! This system is designed to provide cutting-edge, hands-free steering of the machine via Global Positioning System (GPS) coordinates.

This manual applies to the following machines:

MAKE: Valtra

MODEL: BH180, BH185i, and BH205i

YEAR: 2004 - 2010

FIGURE 1. Valtra BH185i



Updates

Software and manual updates are available on the Raven Applied Technology website:

<http://www.ravenhelp.com>

Preparing for Installation

Before installing the SmarTrax system, park the machine where the ground is level, clean, and dry. Turn off the machine and leave it turned off for the duration of the installation process. Bleed pressure from the hydraulic system by loosening the hydraulic fittings slowly, where applicable.

During the installation process, follow good safety practices. Be sure to carefully read the instructions in this manual as you complete the installation process.

Recommendations

Raven Industries recommends the following best practices when installing or operating the SmarTrax system for the first time, at the start of the season, or when moving the SmarTrax system to another machine:

- Ensure the machine's hydraulic filters have been recently changed and there are no issues with the machine's hydraulic system (e.g., pump issues, faulty hydraulic motors, fine metal deposits in the hydraulic hoses, etc.).
- Ensure the machine's hydraulic valve is using fresh oil and debris is flushed from the hydraulic hoses, valves, and filters.

Raven Industries recommends the following best practices when installing the SmarTrax system:

- Use part numbers to identify the parts.
- Do not remove the plastic wrap from a part until it is necessary for installation.
- Do not remove plastic caps from a part until it is necessary for installation.

Point of Reference

The instructions in this manual assume that you are standing behind the machine, looking toward the cab.

Kit Contents

This section contains a list of the components that are included in the SmarTrax kit. Before beginning the SmarTrax installation, compare the items in the kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

TABLE 1. SmarTrax Installation Kit (P/N 117-5033-100)

Picture	Item Description	Part Number	Qty.
Not Pictured	Manual - Valtra BH SmarTrax Installation	016-5033-100	1
	Valve - SmarTrax Hydraulic	334-0003-090	1

TABLE 1. SmarTrax Installation Kit (P/N 117-5033-100)

Picture	Item Description	Part Number	Qty.
	Bracket - Valtra SmarTrax Valve	107-0172-078	1
	Bracket - Node Mounting	107-0172-084	1
	Cable - SmarTrax Valve Harness	115-4001-093	1
	Transducer - 0-300 PSI 4-20mA Pressure	422-0000-086	1
	Screw - #8 x 3/4" L Self-Tapping	310-1002-070	4
	Bolt - 5/16"-18 x 7/8" Hex	311-0052-104	4
	Bolt - M8 x 1.25 x 15mm Hex Head	311-0070-015	4
	Nut - 3/8" Nyloc	312-4000-061	3
	Washer - 5/16" Lock	313-1000-019	4
	Washer - M8 Lock	313-1000-042	4

TABLE 2. Hydraulic Kit (P/N 117-0199-111)

Picture	Item Description	Part Number	Qty.
	Fitting - -8 JIC M/M/F Swivel Run Tee Adapter	333-0012-039	3
	Fitting - -8 JIC (M) to -10 SAE O-Ring (M) Straight Adapter	333-0012-056	1
	Fitting - -8 JIC M/F 90° Swivel Elbow	333-0012-064	5
	Fitting - -6 JIC (M) to -10 SAE O-Ring (M) Straight Adapter	333-0012-106	4
	Hydraulic Hose - -6 JIC (F) 90° to -8 JIC (F) - 180"	214-1000-813	2
	Hydraulic Hose - -6 JIC (F) 90° to -8 JIC (F) - 136"	214-1000-815	1
	Hydraulic Hose - -6 JIC (F) 90° to -8 JIC (F) - 60"	214-1000-816	1
	Hydraulic Hose - -8 JIC (F) 90° to -8 JIC (M) - 132"	214-1000-856	1

TABLE 3. Wheel Angle Sensor Kit (P/N 117-0192-037)

Picture	Item Description	Part Number	Qty.
	Sensor - 250 mm Non-Contact Linear Wheel Angle Sensor	063-0181-017	1
	Bracket - Rod-Mounting Wheel Angle Sensor	107-0172-030	1

TABLE 3. Wheel Angle Sensor Kit (P/N 117-0192-037)

Picture	Item Description	Part Number	Qty.
	Bracket - Base-Mounting Wheel Angle Sensor	107-0172-077	1
	Clamp - 1-3/8" Chrome Muffler	435-3003-054	1
	Mount - M10 Ball Linear Sensor	103-0001-029	1
	Mount - M10 Stud Linear Sensor	103-0001-030	1
	Bolt - M10 x 1.5 x 40mm Metric Hex	311-0070-039	1
	Spacer - 3/8" ID x 3/4" OD x 3/8" Long Steel	107-0172-103	1
	Nut - 5/16"-18 x Nylon Insert Thin Lock	312-4001-107	2
	Nut - M10 x 1.5 Pitch x 5mm Thick Jam	312-1002-035	2
	Nut - M10 x 1.5 Nylon Insert Lock	312-4000-208	2
	Washer - .406 ID x .812 OD x .065 Thick	313-2300-014	2

TABLE 4. Node Installation Kit (P/N 117-5030-005)

Picture	Item Description	Part Number	Qty.
Not Pictured	Manual - SmarTrax and SmartSteer Calibration & Operation	016-0171-277	1
	Node - SmarTrax 3D CAN Control	063-0173-228	1
	Cable - SmarTrax Sauer Valve Node	115-4001-109	1
	Assembly - SmarTrax Enable Foot Switch	063-0172-470	1

Note: The node installation kit is sold separately.

CHAPTER

3

*Hydraulic System
Installation*



⚠ WARNING

Hydraulics are under pressure. Care should always be taken with a system that has been pressurized.

Before beginning the SmarTrax hydraulic installation, turn off the machine and relieve pressure by turning the steering wheel left and right.

Never work on a hot machine. Always allow it to cool before performing diagnostics, maintenance, or routine service.

When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.

Tampering with hydraulic valves may cause serious injury or death, and will void the warranty.



⚠ CAUTION

When installing SmarTrax hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.


Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the SmarTrax hydraulic valve.

	NOTICE
<p>The appearance of the SmarTrax hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.</p>	

Install Fittings in the SmarTrax Valve

Before mounting the SmarTrax valve (P/N 334-0000-090) on the machine, install the proper fittings in the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure.

FIGURE 1. Fittings Installed in the SmarTrax Valve

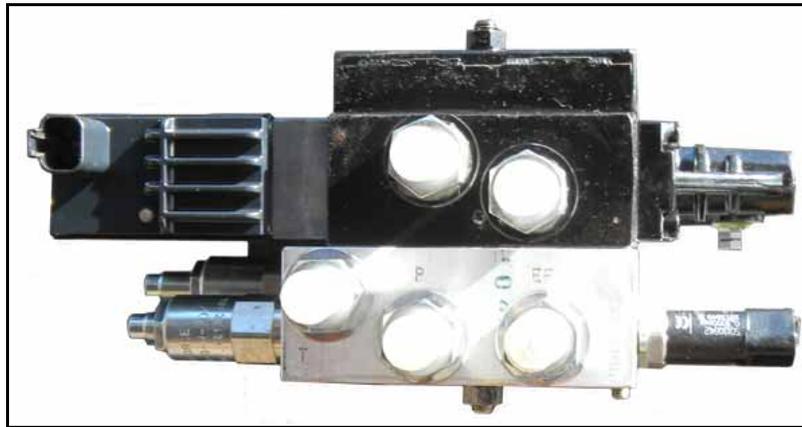

Fitting	Part Number	Port
Fitting - -6 JIC (M) to -10 SAE O-ring (M) Straight Adapter	333-0012-106	A, B P, T
Fitting - -8 JIC (M) to -10 SAE O-Ring (M) Straight Adapter	333-0012-056	EF
Transducer - 0-3000 PSI Pressure	422-0000-086	PS

Mount the SmarTrax Valve

FIGURE 2. SmarTrax Valve Mounting Location



1. Mount the SmarTrax valve mounting bracket (P/N 107-0172-078) to the machine's existing mounting holes using four M8 x 1.25 x 15mm hex bolts (P/N 311-0070-015) and four M8 lock washers (P/N 313-1000-042).

FIGURE 3. SmarTrax Valve Installed



2. Install the SmarTrax hydraulic valve (P/N 334-0003-090) to the mounting bracket using four 5/16"-18 x 7/8" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

Install the Left and Right Steering Hoses

Note: Loosely install the connections to the SmarTrax valve. Do not tighten the connections until instructed to do so.

FIGURE 4. Machine's Existing Right Steering Hose



1. Locate the machine's existing right steering hose on the steering cylinder on the front axle.

FIGURE 5. Tee Fitting Installed in Steering Cylinder



2. Disconnect the machine's right steering hose from the steering cylinder.
3. Install -8 JIC M/M/F swivel run tee adapter fitting (P/N 333-0012-039) in the open cylinder port.
4. Connect the machine's right steering hose to the opposite end of the installed tee fitting.
5. Install the straight end of the supplied hydraulic hose (P/N 214-1000-813) to the 90° end of the installed tee fitting.
6. Route the installed hydraulic hose along the right of the machine toward the SmarTrax valve (P/N 334-0003-090).
7. Connect the 90° end of the installed hydraulic hose to the fitting installed in Port A of the SmarTrax valve.

Note: *It may be necessary to install a -8 JIC M/F 90° swivel elbow fitting (P/N 333-0012-064) on the fitting installed in the SmarTrax valve to achieve the connection.*

8. Disconnect the machine's left steering hose from the steering cylinder.
9. Install a -8 JIC M/M/F swivel run tee adapter fitting (P/N 333-0012-039) in the open cylinder port.
10. Connect the machine's left steering hose to the opposite end of the installed tee fitting.
11. Install the straight end of the supplied hydraulic hose (P/N 214-1000-813) to the 90° end of the installed tee fitting.
12. Route the installed hydraulic hose along the right of the machine toward the SmarTrax valve.

13. Connect the 90° end of the installed hydraulic hose to the fitting installed in Port B of the SmarTrax valve.

Note: It may be necessary to install a -8 JIC M/F 90° swivel elbow fitting (P/N 333-0012-064) on the fitting installed in the SmarTrax valve to achieve the connection.

Install the Pressure Hoses

Note: Loosely install the connections to the SmarTrax valve. Do not tighten the connections until instructed to do so.

FIGURE 6. Steering Pump Location



1. Locate the steering pump to the right of the machine's engine.

FIGURE 7. Machine's Pressure Supply Hose




2. Locate the pressure supply hose on the left side of the steering pump.

FIGURE 8. Pressure Supply Hose Disconnected



3. Disconnect the pressure supply hose from the steering pump.


FIGURE 9. Hydraulic Hose Installed on Pressure Supply Hose

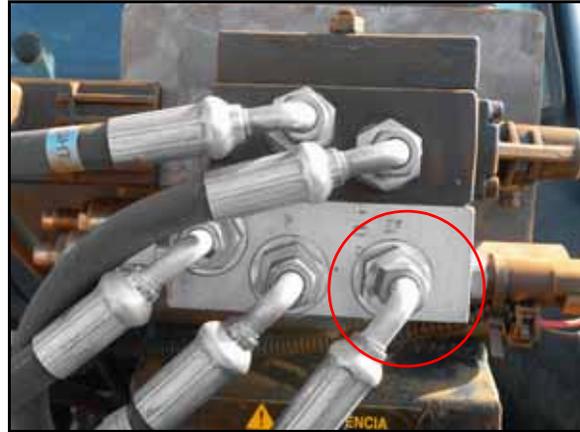

4. Install the male end of the supplied hydraulic hose (P/N 214-1000-856) to the machine's pressure supply hose.
5. Route the installed hydraulic hose along the right side of the tractor and connect it to Port EF of the SmarTrax valve.

Note: It may be necessary to install a -8 JIC M/F 90° swivel elbow fitting (P/N 333-0012-064) on the fitting installed in the SmarTrax valve to achieve the connection.

FIGURE 10. Hydraulic Hose Installed on Steering Pump

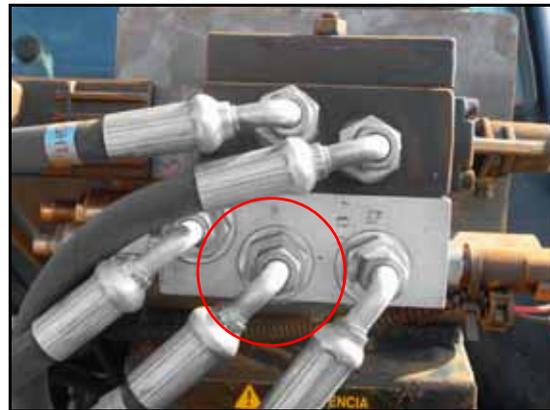


6. Install the straight end of the supplied hydraulic hose (P/N 214-1000-815) on the open steering pump port.
7. Route the installed hydraulic hose along the right side of the tractor and connect it to the fitting installed in Port P of the SmarTrax valve.

Note: It may be necessary to install a -8 JIC M/F 90° swivel elbow fitting (P/N 333-0012-064) on the fitting installed in the SmarTrax valve to achieve the connection.

Install the Tank Hose

Note: Loosely install the connections to the SmarTrax valve. Do not tighten the connections until instructed to do so.

FIGURE 11. Tank Hose Installed

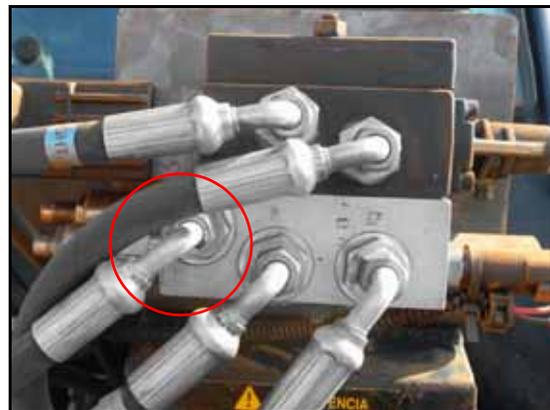

1. Locate and disconnect the machine's tank port from one of the 3-point raise/lower cylinders at the rear of the machine.
2. Install a -8 JIC M/M/F swivel run tee adapter fitting (P/N 333-0012-039) on the machine's open tank port.
3. Connect the machine's tank hose to the opposite end of the installed tee fitting.

Chapter 3

4. Install the straight end of the supplied hydraulic hose (P/N 214-1000-816) to the 90° end of the installed tee fitting.

Note: *It may be necessary to install a -8 JIC M/F 90° swivel elbow fitting (P/N 333-0012-064) on the fitting to achieve the connection.*

5. Route and connect the 90° end of the installed hydraulic hose to the fitting installed in Port T of the SmarTrax valve.

Tighten the Connections to the SmarTrax Valve


FIGURE 12. SmarTrax Valve Connections Installed




1. Ensure the hose ends installed on the SmarTrax valve (P/N 334-0003-090) do not touch each other as shown in Figure 12 above.
2. Tighten the hose connections on the SmarTrax valve.

Hydraulic Diagram

Before SmarTrax Installation

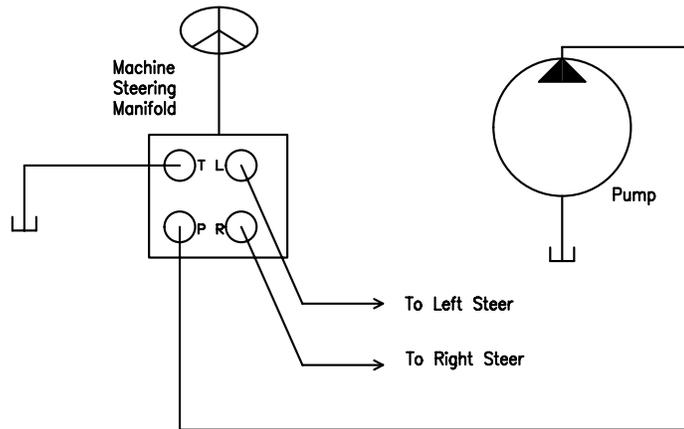

After SmarTrax Installation

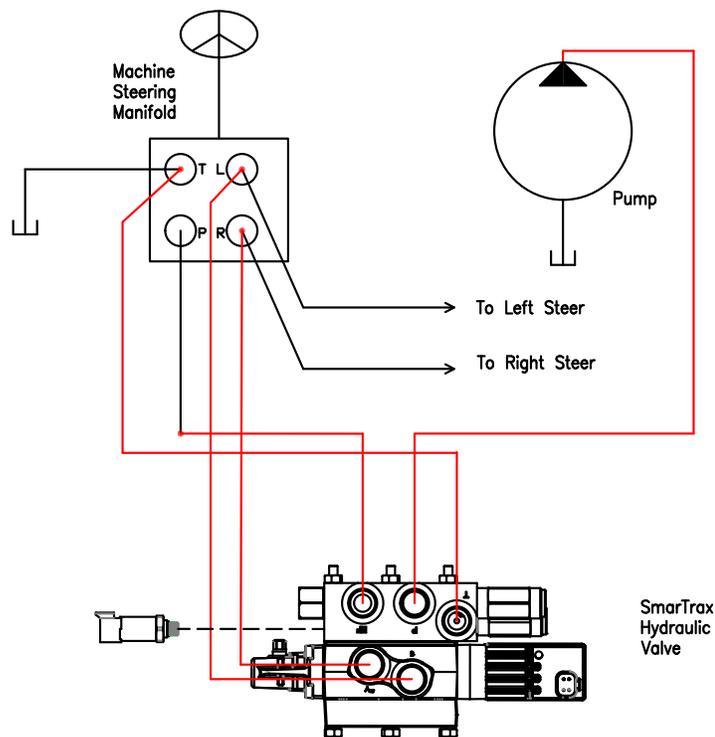


CHAPTER

4

*Wheel Angle Sensor
Installation*

Assemble the Wheel Angle Sensor (WAS)

FIGURE 1. WAS Assembly

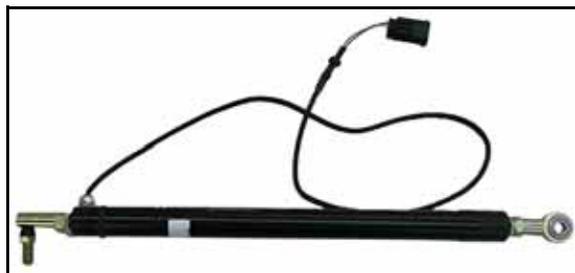

1. Install the M10 stud linear sensor mount (P/N 103-0001-030) and M10 jam nut (P/N 312-1001-035) on the base-end (where the cable is connected) of the 250 mm non-contact linear wheel angle sensor (WAS) (P/N 063-0181-017).
2. Install the M10 ball linear sensor mount (P/N 103-0001-029) on the rod-end of the WAS using the remaining M10 jam nut.

Mount the WAS

FIGURE 2. Bolt Removed from Cylinder End Cap

3-Bolt Triangular Pattern



4-Bolt Rectangular Pattern



1. Turn the machine's wheels to the right to access the left front wheel axle.
2. Remove the appropriate bolt from the cylinder end cap, depending on the machine's configuration.

FIGURE 3. Base Mounting Bracket Installed



3. Align the base mounting bracket (P/N 107-0172-077) over the hole and replace the bolt.

FIGURE 4. Base-End of Sensor Installed on Machine



4. Secure the base-end of the WAS (P/N 107-0181-017) to the bottom of the base mounting bracket using one washer (P/N 313-2300-014) and one M10 x 1.5 nylon insert lock nut (P/N 312-4000-208).

Note: The rod-end of the sensor should point toward the left tire.

FIGURE 5. M10 Bolt Inserted into Rod Mounting Bracket



5. Insert the M10 x 1.5 x 40mm metric hex bolt (P/N 311-0070-039) into the rod mounting bracket (P/N 107-0172-030).

FIGURE 6. Muffler Clamp Installed



6. Remove the nuts and clamp from the 1-3/8" muffler clamp (P/N 435-3003-054) and install the U-bolt around the left side of the tie rod with the U-bolt pointing down.
7. Install the clamp as shown in Figure 6 above using the 5/16" nuts that came with the clamp.

Note: Do not tighten the nut to allow for adjustment later in the procedure.

8. Install the rod mounting bracket and M10 bolt on the muffler clamp using two 5/16" nylon insert thin lock nuts (P/N 312-4001-107).

Note: The M10 bolt should be pointing down.

FIGURE 7. Rod-End of Sensor Installed on Machine



9. Install the rod-end of the WAS to the end of the installed M10 bolt using one steel spacer (P/N 107-0172-103), one washer (P/N 313-2300-014) and one M10 x 1.5 nylon insert lock nut (P/N 312-4000-208).

Important: *Verify that the WAS cannot be overextended or compressed when the wheels are turned to their extremes. Also verify that the sensor moves freely and is not being damaged within its range of motion.*

Install the SmarTrax Node

Mount the SmarTrax Node

FIGURE 1. SmarTrax Node Installed




Note: *These instructions assume that you are standing behind the machine, looking toward the cab.*

1. Mount the node (P/N 063-0173-228) to the node mounting bracket (P/N 107-0172-084) using three 3/8"-16 nyloc nuts (P/N 312-4000-061).
2. Install the two large, rectangular connectors of the node harness (P/N 115-4001-109) into the correct ports of the node.
3. Tighten the bolts on the harness connectors to secure the connections.
4. Mount the node mounting plate to the lower-right corner of the cab behind the operator's seat using four #8 x 3/4" long self-tapping screws (P/N 310-1002-070).

Node Mounting Locations

FIGURE 2. Node Mounting

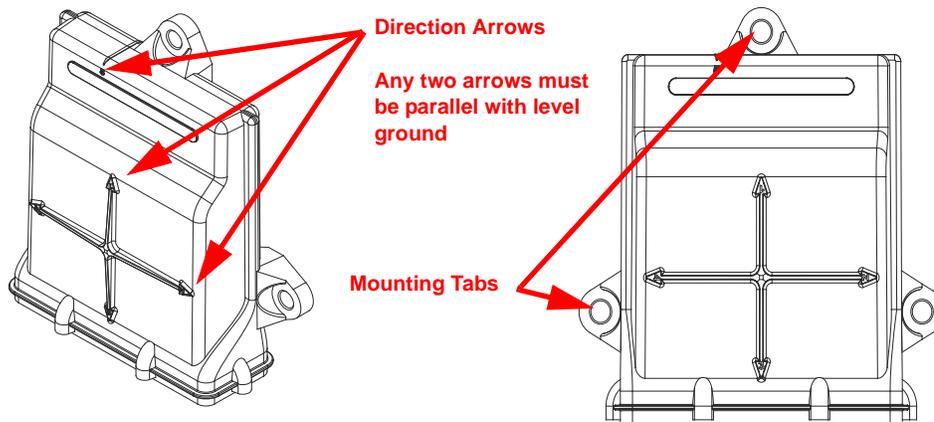

When choosing the location for the SmarTrax node, consider the following points:

- Mount the SmarTrax node inside the machine's cab on a flat, level surface for proper performance and cable connection.
- One of the six numbered direction arrows on the node must be oriented in the direction of forward vehicle travel, one arrow pointing straight up, and two of the arrows parallel to the ground.

Note: Make a note of the number of the arrow that is oriented in the direction of forward vehicle travel. This number will be needed during the SmarTrax calibration process.

- The node mounting location must not create tripping hazards.
- Mount the node in a location where it will not be kicked or jarred during normal equipment operation.
- The location must allow cable routing to avoid crimping or damaging the cables or the node connections.
- Securely fasten the node using bolts or screws through at least two of the three mounting holes. When mounted properly, the node should not become loose or rotate.

Install the Foot Switch

FIGURE 3. Foot Switch Installed



1. Select a suitable location for the foot switch (P/N 063-0172-470) to be installed.

Note: *The foot switch should be installed in a location where the operator has easy access to it and is able to fully press the pedal.*

2. Using the holes in the foot switch as a template, drill holes in the floor of the cab.
3. Secure the foot switch to the floor by installing the supplied screws in each of the mounting holes.
4. Locate the ENABLE connector on the node harness (P/N 115-4001-109) and connect it to the foot switch cable connector.

Install the Valve Harness

FIGURE 4. Valve Harness Connected to Node Harness




1. Connect the CHASSIS connector of the valve harness (P/N 115-4001-093) into the mating connector of the node harness (P/N 115-4001-109).

FIGURE 5. Valve Harness Routed Out Window



2. Route the valve harness cable out the lower rear window as shown in Figure 5 and to the SmarTrax valve (P/N 334-0003-090).
3. Connect the TRANSDUCER connector to the pressure transducer (P/N 422-0000-086) installed in Port PS of the SmarTrax valve.


FIGURE 6. VALVE Connector Connected to PVE Port

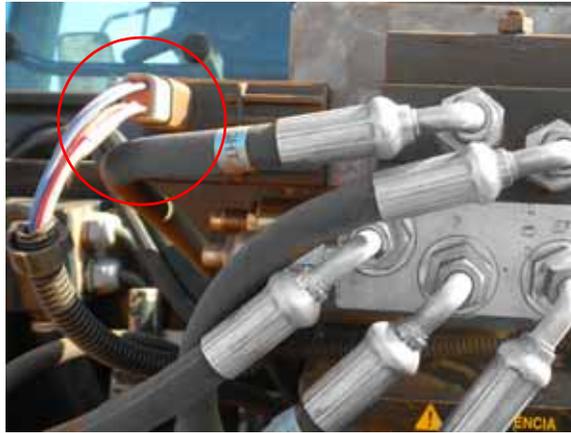

4. Connect the VALVE connector to the open PVE port of the SmarTrax valve.
5. Route and connect the WAS connector to the cable of the installed WAS (P/N 063-0181-017).

Note: *Secure excess cable with plastic cable ties.*

FIGURE 7. Valve Harness Wiring Diagram

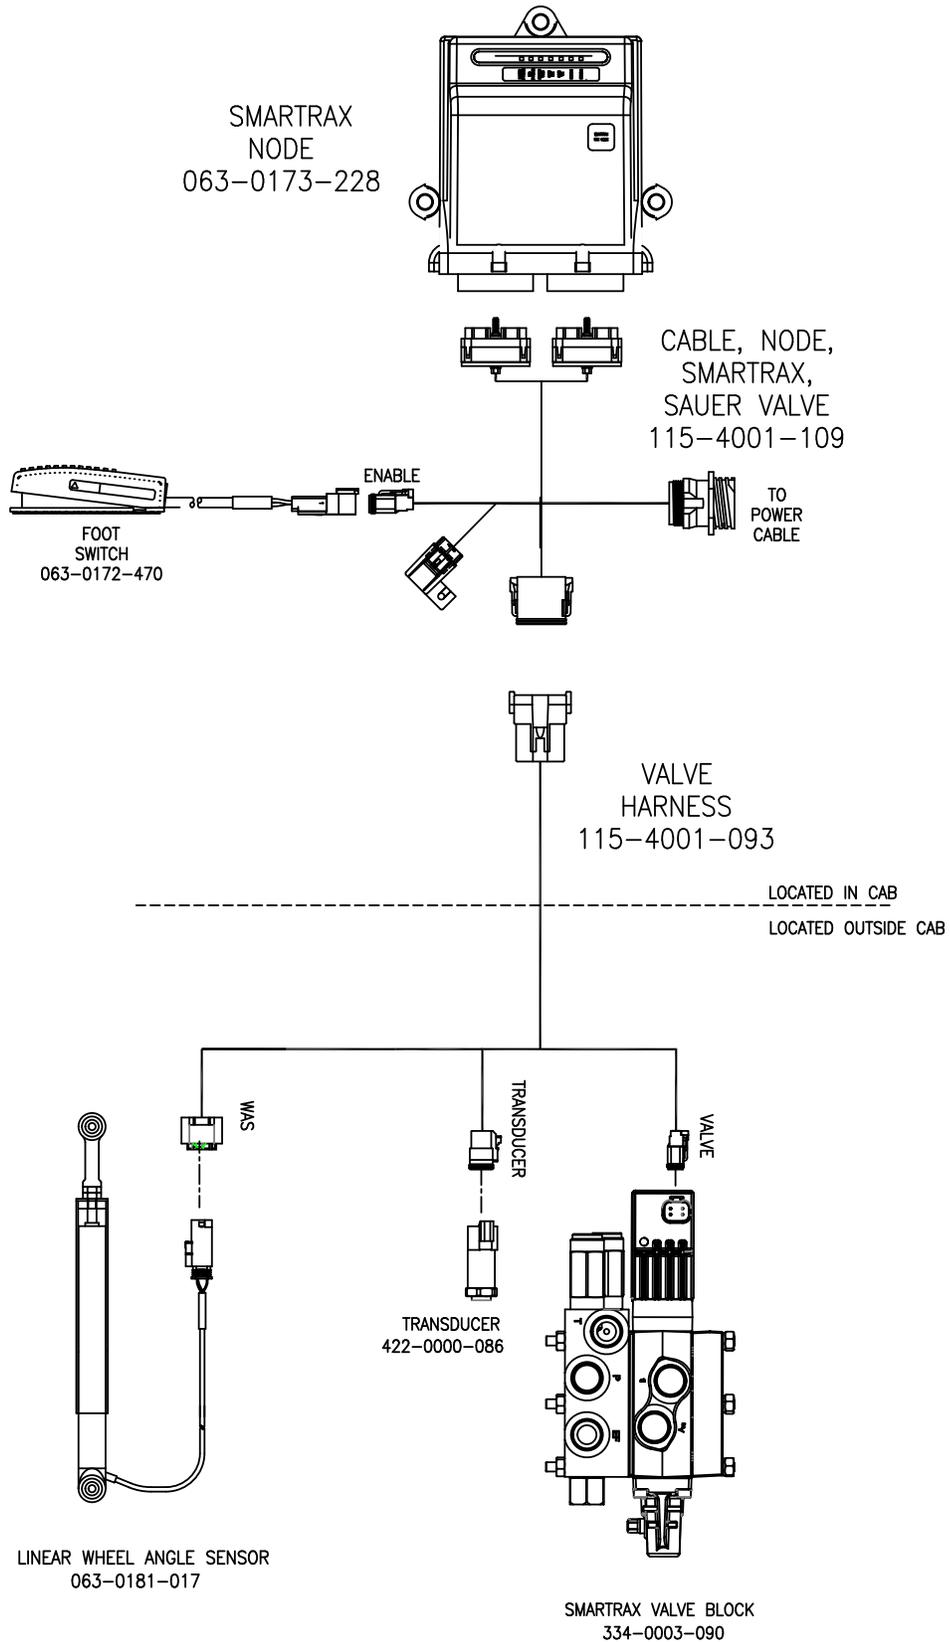

Install the Chassis Cable - SmarTrax-Only Systems (If Applicable)

If the machine does not contain an existing chassis power system (such as AutoBoom, product control, etc.), it is necessary to install the chassis power cable to operate the SmarTrax system. If a CAN system already exists on the machine, refer to *Connect SmarTrax to an Existing Chassis Cable (If Applicable)* below to connect the power to the SmarTrax system.

Note: *The chassis cable is sold separately. Contact your local Raven dealer for ordering information.*

1. Locate the SmarTrax chassis cable (P/N 115-4001-085).
2. Connect the TO SMARTRAX NODE connector from the chassis cable to the round 16-pin connector on the node harness (P/N 115-4001-109).
3. Connect the TO CONSOLE CABLE connector to the Raven console cable.
4. Install a terminator (P/N 063-0172-369) on the CAN cable connector.
5. Loop and tie-off the REMOTE SWITCH cable connection, securing it with plastic cable ties as necessary.

Note: *The REMOTE SWITCH connector is not used in the SmarTrax system. Ensure the cable is secured away from moving parts and heat sources.*

6. Connect the ring terminals to the battery.

Note: *The positive connectors are fused.*


Connect SmarTrax to an Existing Chassis Cable (If Applicable)

Note: *The SmarTrax interface tee is sold separately. Contact your local Raven dealer for ordering information.*

1. Locate and disconnect the connection between the Raven console cable and chassis cable on the machine's existing CAN system.
2. Install the SmarTrax interface tee cable (P/N 115-4001-070 or 115-4001-071) between the chassis and Raven console harness.
3. Connect the SmarTrax node cable (P/N 115-4001-109) to the remaining SmarTrax interface tee.

System Diagrams

FIGURE 8. Existing Chassis System Wiring Diagram

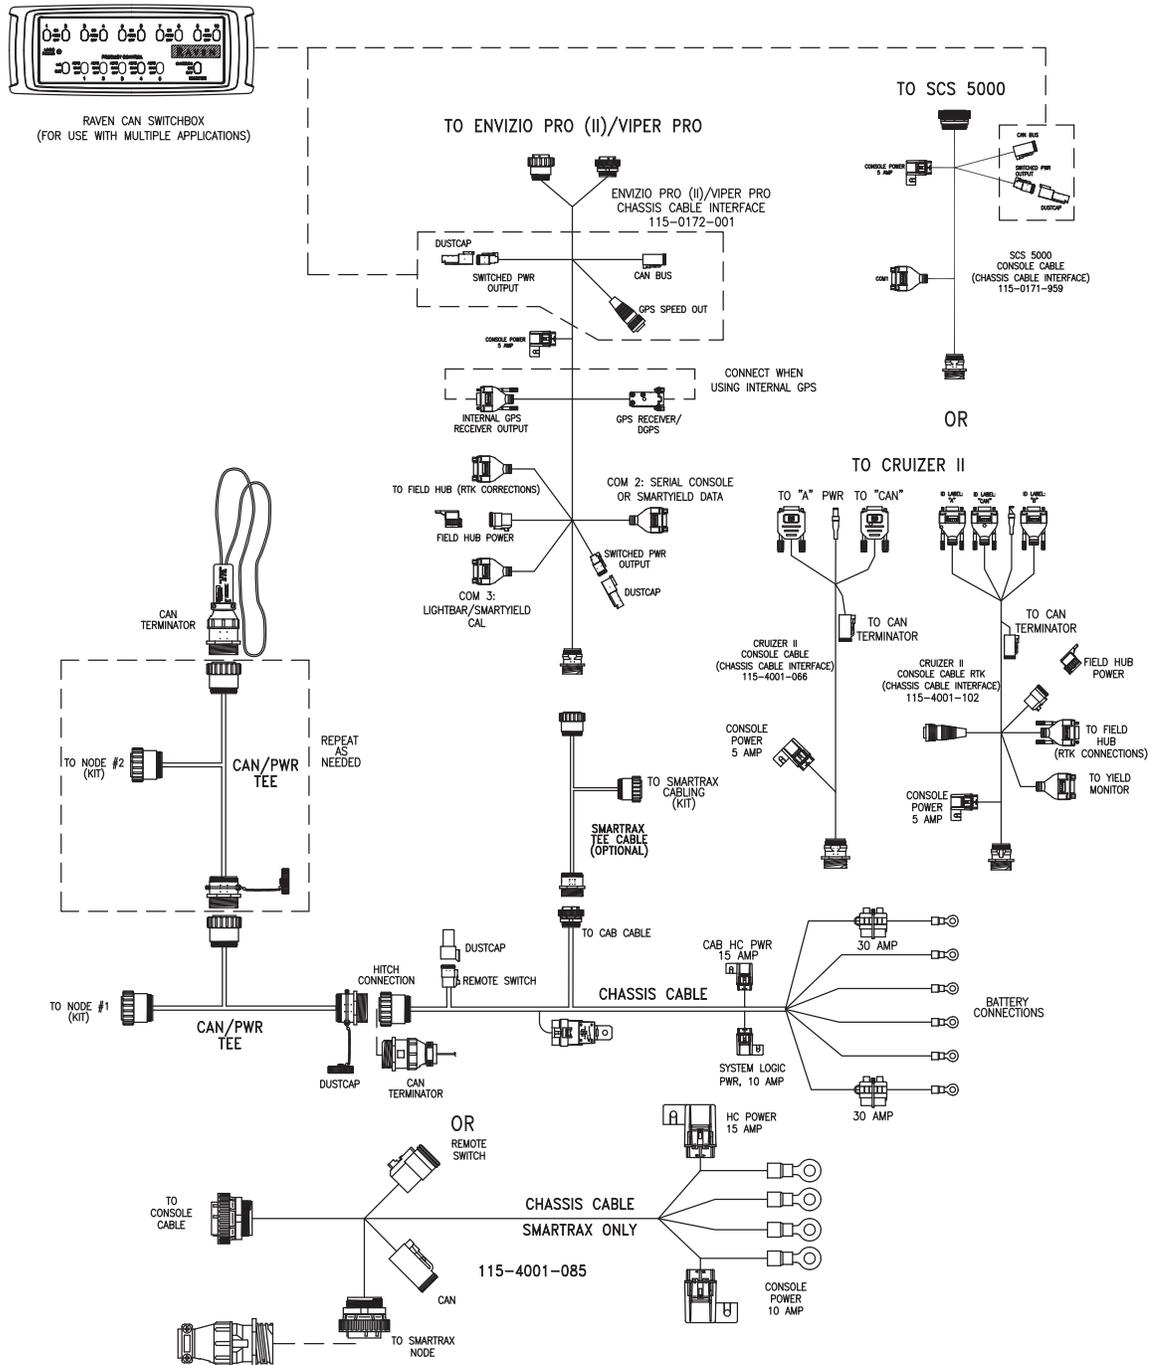

**WARNING**

When starting the machine for the first time after installing SmarTrax, be sure that all persons stand clear in case a hose has not been properly tightened.

**WARNING**

Do not use hands to check for leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury or death.

Verify the SmarTrax System Installation

1. Turn on the machine.
2. Double-check all fitting and hose connections to ensure that:
 - Hoses are not rubbing on or interfering with moving parts.
 - Hydraulic fluid is not leaking from the system.
3. Turn the machine's wheels fully from side to side repeatedly to remove air from the hydraulic system.

Note: *During the SmarTrax system installation, whenever the hydraulic system is purged for maintenance, or when fittings are loosened or disconnected, air is introduced into the lines of the hydraulic system. If air pockets are present, the wheels may not move consistently when the steering wheel is turned.*

4. Continue turning the wheels until they move steadily and smoothly when the steering wheel is turned.

5. Access the System Diagnostic screen by selecting the MACHINE TEST option on the Machine Type screen and turn the wheels using the Raven console.

Note: *If there are issues with the SmarTrax system, turn off the machine and correct them immediately. For additional assistance, refer to the SmarTrax and SmartSteer Calibration & Operation Manual (P/N 016-0171-277) or contact your local Raven dealer.*

Calibrate the SmarTrax System

Refer to the SmarTrax & SmartSteer Calibration & Operation Manual (P/N 016-0171-277) for instructions on calibrating the SmarTrax system, adjusting system settings, and system operation.

C

Cab Component Installation

- Connecting SmarTrax to an Existing Chassis Cable 28
- Installing the Chassis Cable - SmarTrax-Only Systems 28
- Installing the Foot Switch 24
- Installing the SmarTrax Node 23
 - Node Mounting Locations 24
- Installing the Valve Harness 25
- Mounting the SmarTrax Node 23
- System Diagrams 29

H

Hydraulic System Installation

- Hydraulic Diagram 17
- Installing Fittings in the SmarTrax Valve 10
- Installing the Left and Right Steering Hoses 11
- Installing the Pressure Hoses 13
- Installing the Tank Hose 15
- Mounting the SmarTrax Valve 11
- Tightening the SmarTrax Valve Connections 16

I

Introduction

- Kit Contents 4
- Preparing for Installation 4
 - Point of Reference 4
 - Recommendations 4
- Updates 3

K

Kit Contents 4

S

Startup Procedures

- Calibrating the SmarTrax System 34
- Verifying the SmarTrax System Installation 33

W

Wheel Angle Sensor

- Assembling the WAS 19
- Mounting the WAS 20

RAVEN

RAVEN INDUSTRIES

Limited Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service.

How Long is the Coverage Period?

Raven Applied Technology Division products are covered by this warranty for 12 months after the date of purchase. This warranty coverage applies only to the original owner and is nontransferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If your dealer agrees with the warranty claim, the dealer will send the part and proof of purchase to their distributor or to Raven Industries for final approval.

What Will Raven Industries Do?

Upon confirmation of the warranty claim, Raven Industries will, at our discretion, repair or replace the defective part and pay for return freight.

What is not Covered by this Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

RAVEN

Valtra BH180, BH185i, and BH205i
Model Years 2004-2010
SmarTrax™ Installation Manual
(P/N 016-5033-100 Rev A 10/11 E18553)



Raven Industries

Applied Technology Division
P.O. Box 5107
Sioux Falls, SD 57117-5107
www.ravenprecision.com

Toll Free (U.S. and Canada): (800)-243-5435
or Outside the U.S. :1 605-575-0722
Fax: 605-331-0426
www.ravenhelp.com

Notice: This document and the information provided are the property of Raven Industries, Inc. and may only be used as authorized by Raven Industries, Inc. All rights reserved under copyright laws.