


INSTALLATION SHEET HARDI/RFM 60P RETROFIT KIT

117-0159-794

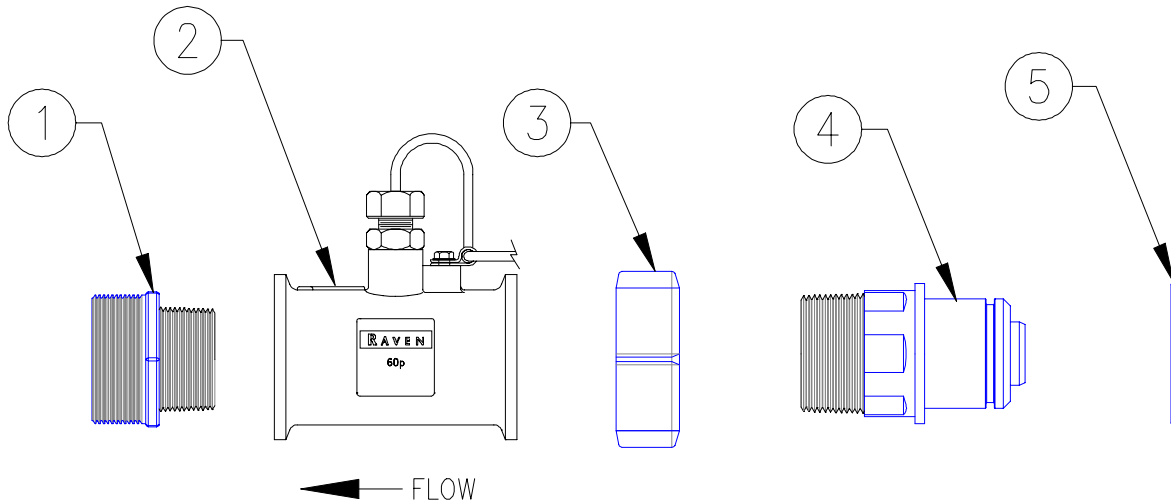

ITEM	DESCRIPTION	RAVEN PART #
1	Adapter, Female to 1 1/2" MNPT	107-0171-379
2	Flowmeter, RFM 60P (NOT INCLUDED IN KIT - MUST BE PURCHASED SEPERATELY)	063-0171-793
3	Nut, Adapter, Hardi	333-0009-094
4	Adapter, Male to 1 1/2" MNPT	107-0171-380
5	O-Ring, Viton	219-0000-107

NOTES:

1. Assemble o-ring (item 5) to adapter (item 4).
2. Slide nut (item 3) onto adapter (item 4) until wrench flats on adapter are visible (see figure 1).
3. Thread items in step 2 onto the flowmeter (item 2) on the inlet side. Use thread sealant on threads.
4. Thread adapter (item 1) into the outlet side of flowmeter. Use thread sealant on threads.

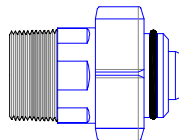


FIGURE 1