


Mag Flow Meter Installation Instructions

1. Note the arrow indicating the direction of flow. Reversing flow through the meter will affect the calibration. Refer to illustration below.
2. Plumb the flow meter so there is a minimum straight run of pipe or hose 24 inches before and 12 inches after the flow meter. Refer to illustration below.
3. There shall be no elbows or change in size of plumbing with in the limits set in step 1. Avoid plumbing that will result in turbulent flow.
4. Secure the flow meter to a solid support.
5. Flow meter requires adapter cables.
 - a. 510-2001-056
 - b. 115-0171-750

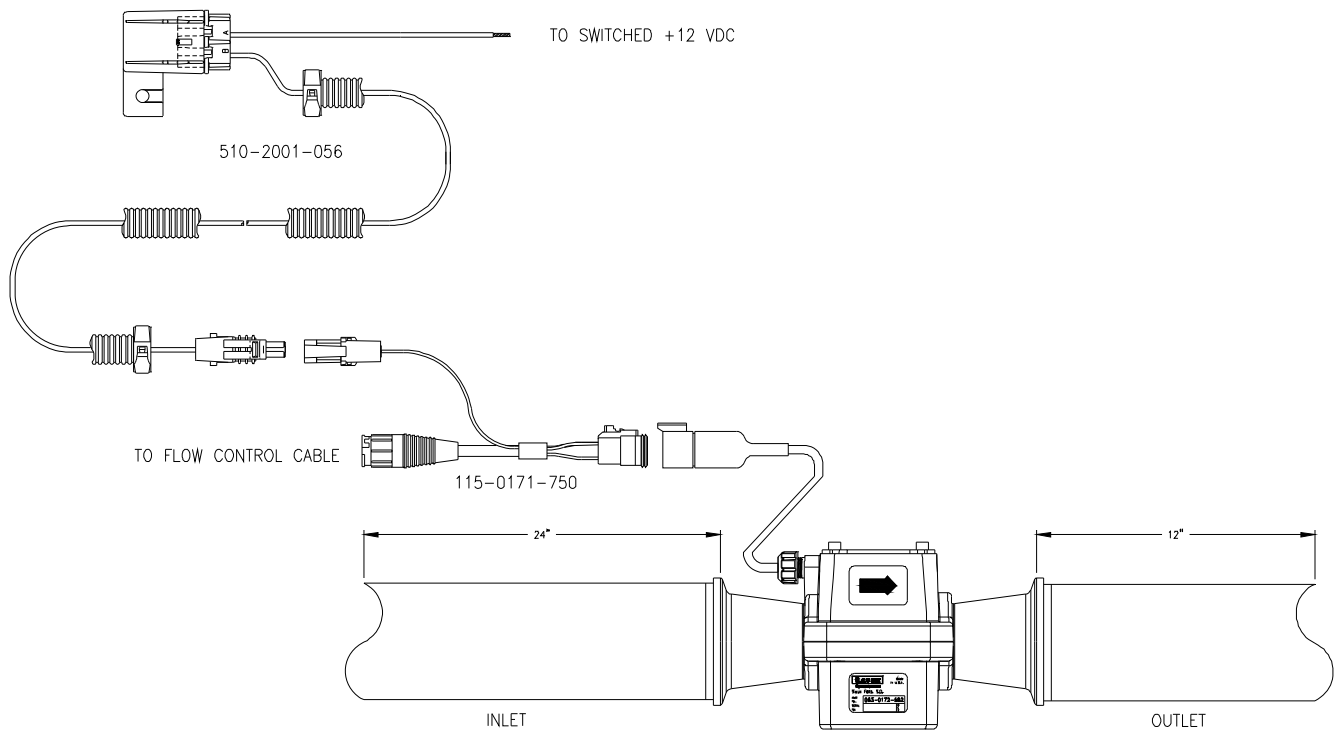

NOTE:

Flowmeter is calibrated for water. Calibration may change slightly with other materials.