


- Install hydraulic motors on right hand end of the meter roller shaft, where the current ground or electric/hydraulic drive mounts.
- Remove the existing ground drive or electric and hydraulic drive configuration from the cart. Remove roll pins from the ends of the meter roller shafts.



- Attach bracket to mounting tabs on cart frame as shown.

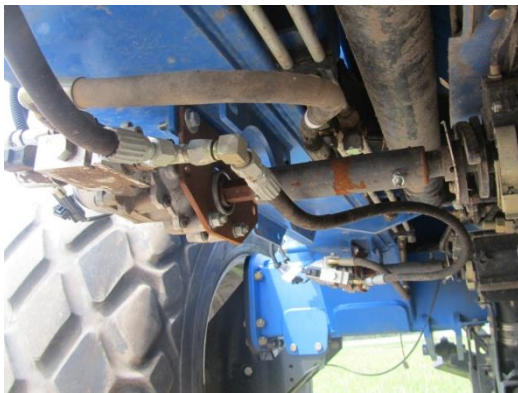

- Loosely mount hyd motor to bracket. Motor can be mounted in either the top or bottom mounting holes to turn the motor 180°.
- Insert hex adapter into motor and coupler between adapter and the meter shaft. Attach using the supplied cotter pins.
- Tighten motor so that hex shaft adapter and meter roller shaft is aligned.
- Mount pwm valve to bottom of bracket.