
Refrigerant Line Y-Strainer Installation

Completely discharge all anhydrous ammonia from the system before starting. Refer to the AccuFlow™ Manual for complete discharge instructions.




Installation

1. Remove the 3/8" hose from the hose barb.

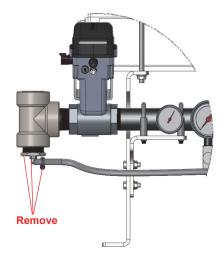


- 2. Remove the 1-1/2" bushing and the hose barb fitting.
- 3. Apply thread sealant to the male threads of the new 1-1/2" x 1/2" reducer and 1/2" elbow.

4. Install the 1-1/2" x 1/2" reducer and 1/2" elbow into the tee.

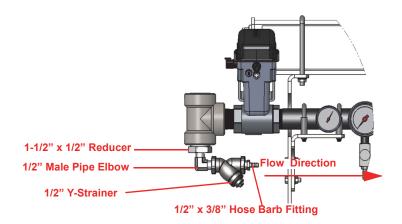

- 5. Attach the Y-strainer assembly to the elbow. Make sure the strainer flow direction is oriented in the direction shown in the above.
- 6. Reassemble the 3/8" hose and secure with a hose clamp. Shorten the hose as needed.

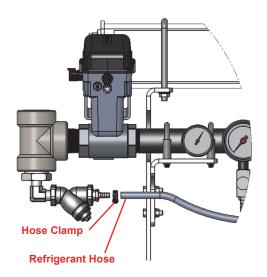

Replacement Parts

| Description | Part Number | Number Reference |
|------------------------------|--------------|---------------------|
| 1/2" Y-Strainer with Magnets | 063-0173-897 | 1 |
| Replacement 40 Mesh Screen | 333-9000-076 | 2 |
| Replacement Gasket | 219-0000-167 | 3 |
| Magnet, Round | 418-0000-010 | 4 |

