

**Case IH Viper Pro™
Quick Reference Guide**

P/N016-0171-155 Rev. D 06/15 E17142

Copyright 2011

Basic Startup

1. Touch the Power button to turn on the Viper Pro system.




2. Allow the Viper Pro field computer to power up.
3. If the Program Selection Menu displays, touch the **Sprayer/Spreader** option to begin the application management system.
Note: Refer to the *Installation and Operation Manual* for information about the other options available in the Program Selection Menu.
4. If the Viper Pro is configured as the CANbus controller, verify that the appropriate product nodes or control channels are displayed on the CAN Initialization Results screen and touch the **Start Viper** button to launch the Viper Pro precision management system.



Viper Pro Do's and Don'ts

1. **Do** have the Viper Pro serial number and firmware revision available when calling for technical assistance. It is best if the user is in the machine and in front of the Viper Pro when calling for tech support.
2. **Do** review the manual in its entirety before operating Viper Pro.
3. **Do** power the DGPS receiver and the Raven console or CANBus system before powering Viper Pro.
4. **Don't** turn Viper Pro off when in a job, without properly closing the job first. If the field computer loses power when in a job, part of the information within the job files will not be saved and the associated files may become corrupt.

Backlight Adjustment

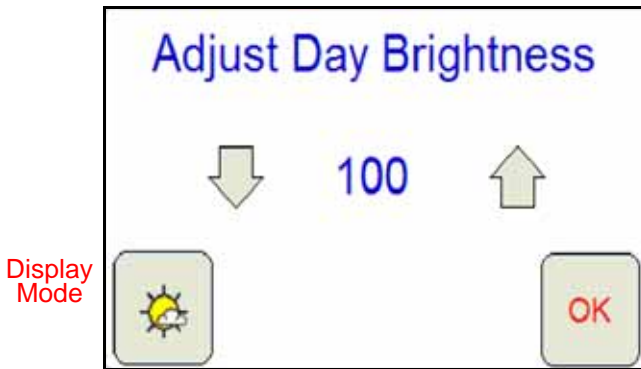1. Touch **Menu / About / Adjust Brightness**.



2. Touch the display mode button to toggle the day or night modes for the Viper Pro display.
3. Touch  to increase screen intensity or touch  to decrease screen intensity.

Main Screen Areas

See the screen below and the corresponding numbers on the next page for a description of each screen area.

1 Profile: Flex-Air 3

Map labels: 252nd St, Norway St, 253rd St, 254th St, Meadowland St, 255th St, State Highway 115, 476th Ave, 477th Ave, Ditch Rd, Etchewald.

Map scale: 1/2 mile

2 000 °

3 0.0 CAN mph

4 0 BmP

5 0 Spg

Fan rpm 0

Main

Guide

Rx+Cov +Scout

Rx

Cov

Scout

Accu Boom

6 **7** **14** **15**

Application Rates

| | R _T | R _A | |
|----------------|----------------|----------------|-----------|
| m _A | 825 | Off | 9 |
| c _A | 1.25 | Off | 12 |
| s _A | 2.58 | Off | 10 |
| l _A | 10.0 | Off | 11 |

Booms: **12**

Augers: **10** **11**

GPS **12**

Product Control **13**

Menu **16**

1. **Profile** - The machine profile contains configuration settings for specific vehicles, when created by the user.
2. **Current Heading** - The current heading of the vehicle in compass degrees.
3. **Speed** - The current speed of the vehicle (CAN or GPS).
4. **BmP and Spg** - The current boom pressure and sparge pressure is displayed if so equipped. If equipped, touch within this area to adjust sparge pressure.
5. **Fan RPM** - The current speed of the fan is monitored and displayed.
6. **Map Area** - Displays guidance and coverage information associated with the selected tab.
7. **Tabs** - Used to access available features, functions and screen displays during a job. The Main tab is available only if a job is not in progress.
8. **Application Rates** - Target rate (R_T) and actual rate (R_A). Touch in this area to set or change rates (Available for CAN or serial systems only).
9. **Booms** - The Booms area displays the status of boom or implement sections. A section display character will display green when on, grey when off. Touch in this area to configure the optional AccuBoom system.
Note: Boom sections controlled by the optional AccuBoom system will display with a blue background.
10. **Augers** - The current status of the system augers is displayed. Press the area to access the Augers Control screen.
11. **Fan Control** - The status of the fan is displayed. Touch within this area to access the Fan Control screen.
12. **GPS Status Indicator** - Status of DGPS messages and the current source of GPS corrections are displayed in this area. Touch this area for additional GPS information.
13. **Product Control Status** - Product Control Status of a Raven serial console or a Raven CAN system displays in this area. Touch this area to view or modify Product Control settings.
14. **Display Data** - Touch the 'DD' icon to view the status of CAN Tally Registers. Touch the 'DD' icon again to hide the data.
15. **Wireless Status** - If a Slingshot Field Hub™ is connected to the Viper Pro field computer, the status of wireless communications is accessible by touching the wireless communication status indicator.
16. **SmarTrax Status Display** - If an optional SmarTrax system is installed with the Viper Pro, this area displays the status of SmarTrax system.

CAN Controller Status Screen Areas

See the screen below and the corresponding sections on the next page for a description of the CAN Controller Status screen.

| CAN Controller Status | | | |
|---|-------|-------------------|--------------------|
| Boom Cals | | Miscellaneous | |
| 1 | 709 | Speed Sensor | Wheel |
| 2 | 709 | Speed Cal | 1000 |
| | | Self Test | 0.00 |
| | | Fan RPM | 0 |
| | | Speed | 0.0 |
| | | Units | US |
| Node <input checked="" type="radio"/> mn <input type="radio"/> co <input type="radio"/> su <input type="radio"/> lq | | | |
| Dual Flow % | 50 | Flow/Shaft Alarm | Off Smoothing On |
| Off Rate % | 30 | Vac/Bin Alarm | Off Agitator Off |
| Low Tank | 0.0 | Decimal Shift | Off |
| Low Limit | 0.0 | Zero Shutoff | Off |
| Tank Vol | 832.0 | Spreader | 0 Pre Set Pw 0 |
| Area/Hour | 0.0 | Valve Cal | 2123 Pw Freq 122 |
| Vol/Min | 0.0 | Valve Cal | 20 Ratio Rate 0.00 |
| Rate Cal | 15.0 | Fan Cal | 0 Valve Delay 0.0 |
| Rate +/- | 2.0 | Min Pw | 0 PWM 0 |
| Density | 700.0 | Max Pw | 253 Max psi 150 |
| Boom Pr. | 100 | Application Gran1 | |
| Sparge Pr. | 100 | Standard Valve | |
| Tally Registers | | Current Alarms | OK |








Note: The CAN Controller Status screen shown above is only displayed if the Viper Pro is configured as the CANbus control console. Review the *Viper Pro Installation and Operation Manual* for information on configuring the field computer.

1. **Boom Cals Area** - Current booms that have been configured. Touch in this area to assign booms to products using the Boom Select screen.
2. **Miscellaneous Area** - Various system settings and actual system readouts. Touch in this area to change the displayed settings.
3. **Feature Settings Area** - The upper portion of the Feature Settings area displays the selected product node or control channel. Touch the indicators to display the current settings for each node.




The lower portion of the Feature Settings area displays the current alarm and feature setting selections. Touch in this area to access the feature and alarm settings.
4. **Product Control Settings Area** - Displays the current product control settings for the selected product node or control channel. Touch in this area to configure product control for the selected node or channel.
5. **Pressure Area** - Dual pressure readouts for two different systems. Touch in this area to calibrate pressure readouts.
6. **Application Area** - Valve and application types used to apply the product. Touch in this area to select a different valve type and/or application type.
7. **Tally Registers** - Touch this button to access the tally registers. Also displays the distance traveled by the vehicle. All values can be reset to zero, when not in a job.
8. **Current Alarms** - Touch this button to view any current system alarms.

Screen Icons & Symbols

Map Symbols




| Icon Name | Description |
|---|--|
|  | When the Cursor Lock icon is active, Viper will automatically pan the display to keep the vehicle indicator on screen. Select this mode when running a job. |
|  | The Information icon is available on the Main tab when a job is not in progress, or on the Scout tab during an active job. Select this icon and touch the map area to view map information. |
|  | The Prescription icon is only available on the Rx tab (if a prescription map had been previously loaded) or the Cov tab. |
|  | The Pan icon is used to manually pan the map information up/down or left/right. |
|  | Touch the Zoom Out icon and then select the map area to view a larger area on the map. |
|  | Touch the Zoom In icon and then select the map area to view a more detailed area on the map. |
|  | The Zoom Extents icon allows you to quickly bring all map information back onto the display. |

Status Symbols

| Icon Name | Description |
|---|---|
|  | Thumbs Up: System is normal and all operating conditions are met. |
|  | Caution: There is a system alert. User should investigate cause of condition and correct it. |
|  | Red 'X': The system is down and requires immediate attention. This problem must be corrected before proceeding with application. |

Setting Application Rates

1. Touch the **Application Rates Area**.
2. Touch the desired **Node** or **Channel** to set/change.
3. Enter **Target Rate**. Touch **Next** to change other Nodes or **OK** to save changes and close.
4. Touch the **Enable Product Node Control Switches** option to display product node switches on the Main screen of the Viper Pro.

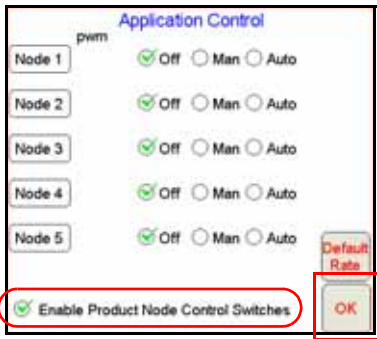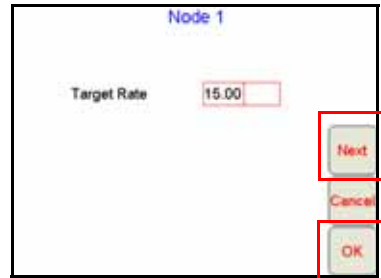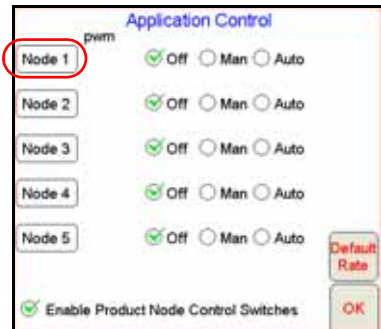


Note: Application Rates may only be modified on the Viper Pro if the field computer is set as the CANbus controller. Product density and spreader constant may also be modified when controlling a granular application system.

5. Touch the **Default Rate** button to set a default rate for each product used with a prescription map. The default rate will be applied to areas without prescription information (i.e. outside of the prescription map area).


Profiles

Saving a Profile

1. Select **Menu**, then **Setup**, **Local**, **Profile**, and **Save Profile**.

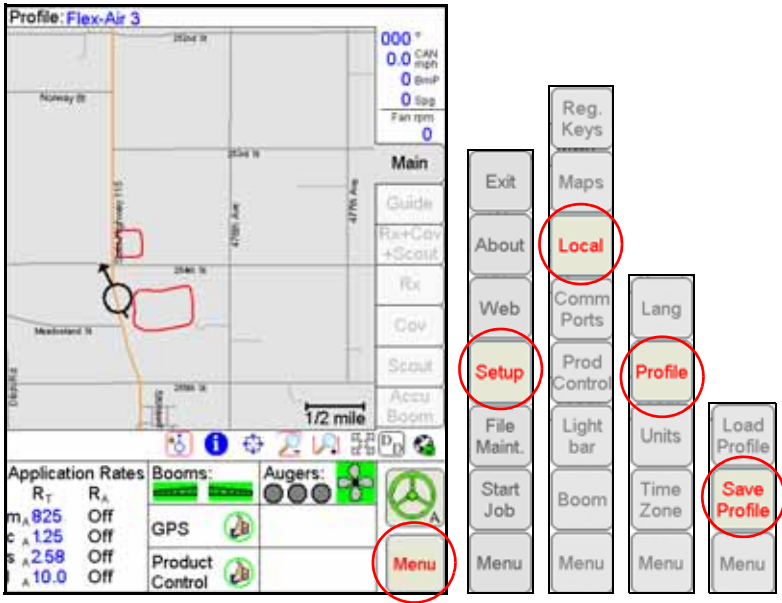


2. Type a **profile name** and touch **OK**.

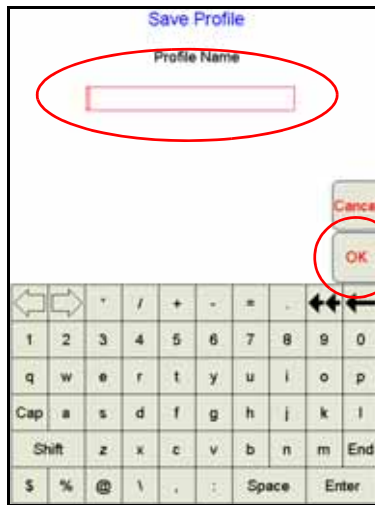


Loading a Saved Profile

1. Select **Menu**, then **Setup**, **Local**, **Profile**, and **Load Profile**.

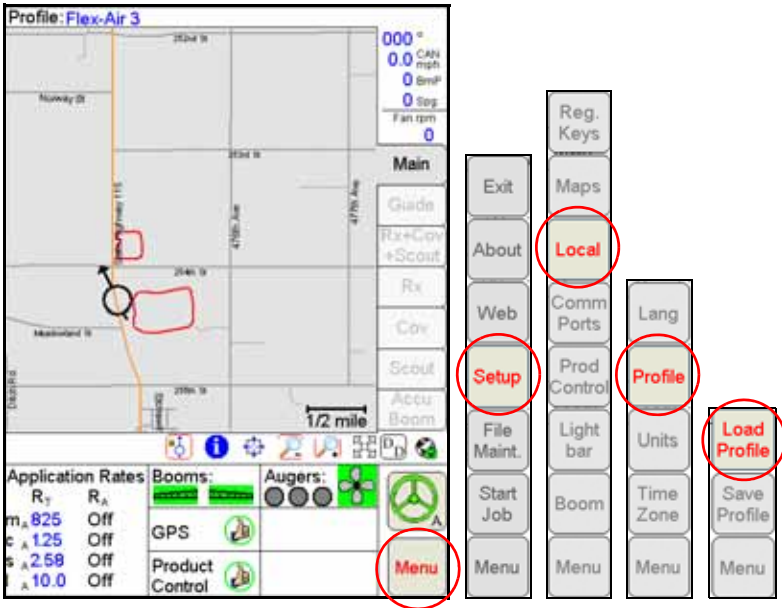


2. Select a profile from the list and touch **OK**.

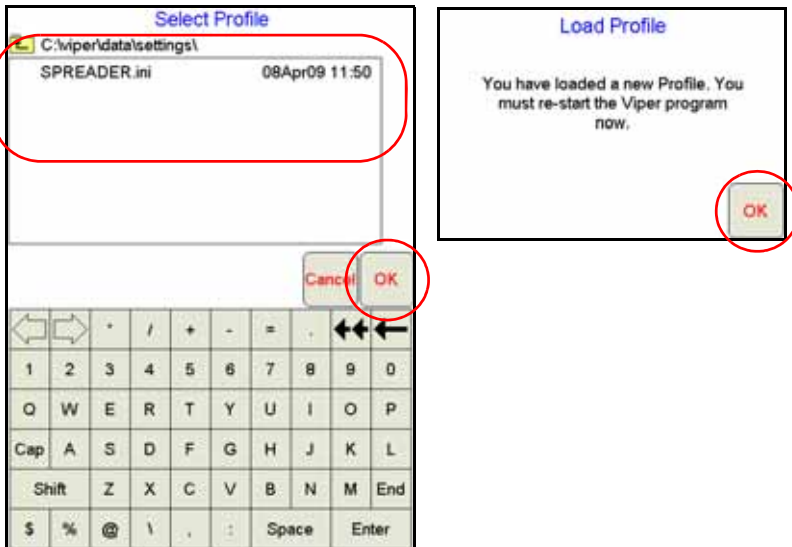


Starting a New Standard Job

1. Select **Menu**, **Start Job**, then **New Job**.

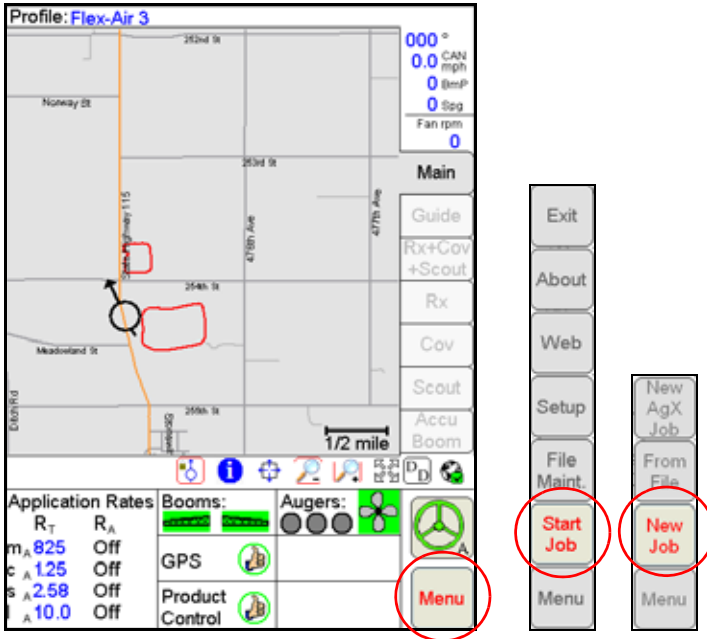


2. Type in a **Job Name**, and enable appropriate application options to use during the job. Select a **Swath Pattern**, and **enter the number of products**.

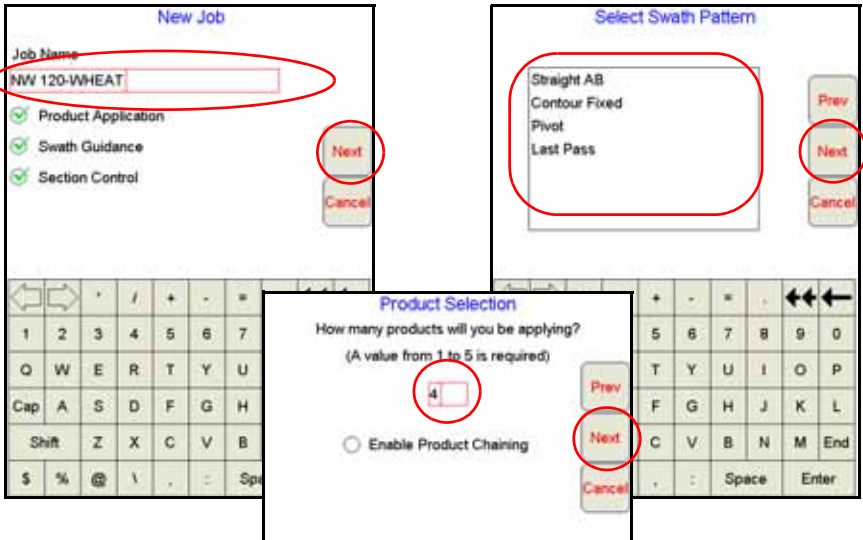

3. If products should be applied using a product chain, select the **Enable Product Chaining** option (see the Installation and Operation Manual for more information on setting up and using the product chaining feature).

4. Select an existing product name or use the on-screen keyboard to enter a new product name.

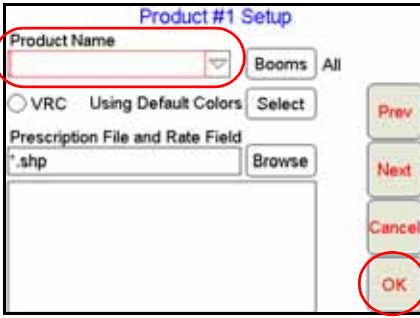


Product #1 Setup

Product Name Booms All

VRC Using Default Colors Select

Prescription File and Rate Field
 *.shp Browse

Prev
Next
Cancel
OK

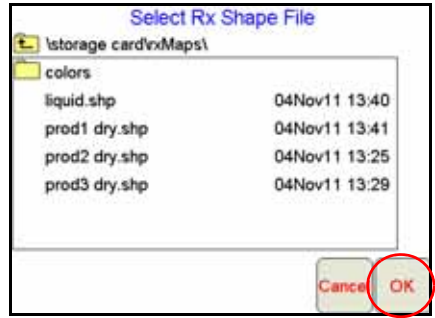


Select Rx Shape File

!storage card\rxMaps\

| | |
|---------------|---------------|
| colors | |
| liquid.shp | 04Nov11 13:40 |
| prod1 dry.shp | 04Nov11 13:41 |
| prod2 dry.shp | 04Nov11 13:25 |
| prod3 dry.shp | 04Nov11 13:29 |

Cancel OK

5. If a Variable Rate map will be used, select **VRC** and proceed with the steps below. Otherwise, touch **OK**.
- Touch **Browse** to find an Rx Map file.
 - Select the desired map file and touch **OK**.
 - Select the column heading from the .dbf file to use for rate information.
 - Touch the **Next** button.
 - Type in a **Rate Conversion** (if necessary) and touch **OK**.

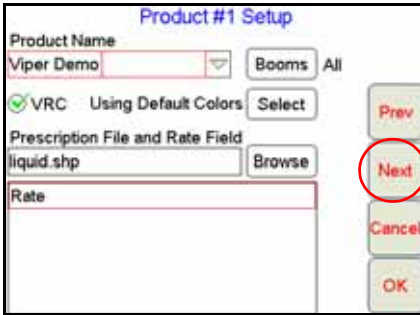

Product #1 Setup


Product Name
Viper Demo Booms All

VRC Using Default Colors Select

Prescription File and Rate Field
liquid.shp Browse

Rate

Prev
Next
Cancel
OK

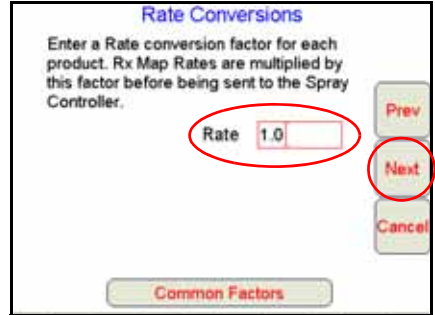

Rate Conversions

Enter a Rate conversion factor for each product. Rx Map Rates are multiplied by this factor before being sent to the Spray Controller.

Rate 1.0

Prev
Next
Cancel

Common Factors

3. Touch the **Next** button.

Assign Recommendation to Channel

Chain Profile

Select Channel to Configure

1 2 3 4 5

Recommendations Operation

Fert Rec ✓

Preview

18-46-0 DAP
Min Rate: 100.00 lb/ac
Max Rate: 100.00 lb/ac
Average Rate: 100.00 lb/ac
Total Product: 14922.38 lb
Coverage Area: 149.22 lb/ac
Season: 2010

Booms All Default Rate Conv. Factor Prev Next Cancel

4. Touch an available control channel and select a recommendation from the list to assign prepopulated job information to the selected control channel.

Note: Any channel selected on this screen must have a recommendation assigned before the job may be started. Touch the selected channel again to deselect the channel for the job setup process.

5. Touch the **Default Rate** button and enter the default rate for each control channel outside of the prepopulated prescription map.


6. A **Conversion Factor** may be entered to adjust rate zones within the prepopulated prescription map.

7. Touch **Next** and enter the name for the job, select the guidance pattern to use during the job and enable the AccuBoom feature if applicable.


8. Touch the **OK** button to begin the job.

Adding to Existing Jobs

1. Select **Menu, Start Job, From File**, then **Add to Job**.

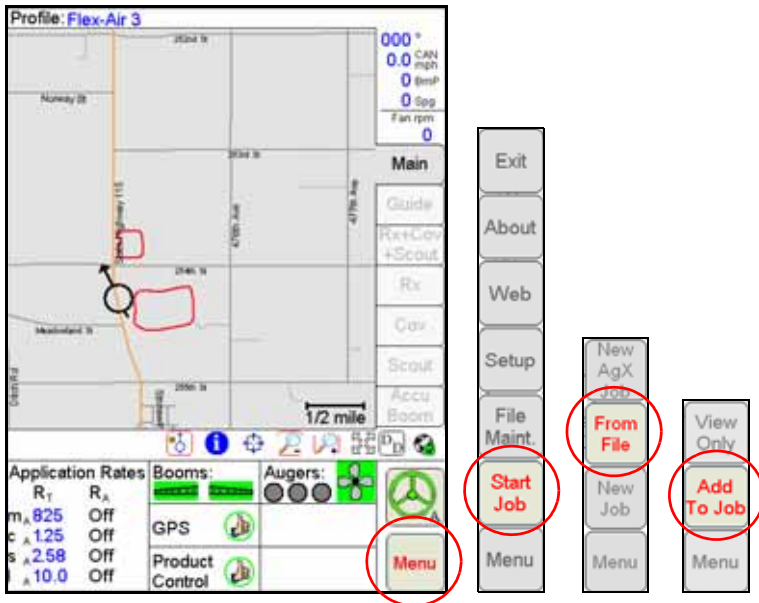

2. Select an **Existing Job** and touch **OK**. Then touch **Menu** and the **Cont. Job** button to resume application within the job.

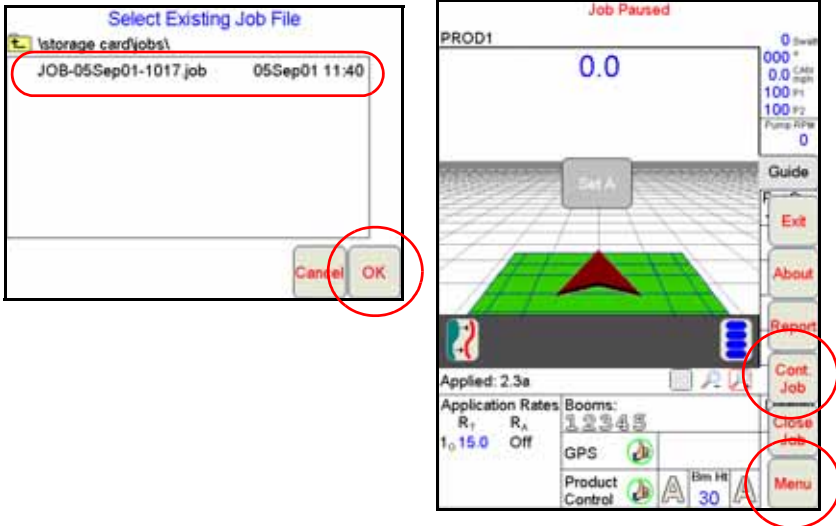

Note: The Viper Pro will not log application or location information until the **Cont. Job** button is selected.

Setting, Saving, and Loading A-B Lines

When a Job with Straight Line (A-B) guidance has been opened and the Guide tab is selected, use the following steps to set an A-B Line.


1. With the Guide tab selected, touch the **Set A** button.



2. When the **Set B** button appears, touch the button to set the B point of the A-B Line. The set A-B Line appears on the screen in blue.

To save the currently displayed A-B Line:

1. With the Guide tab selected, touch the Menu icon.

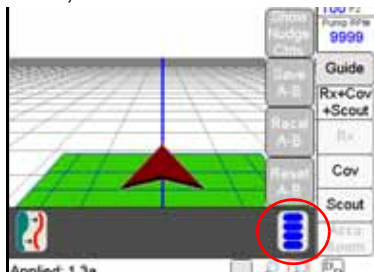

2. Touch the **Save A-B** button and follow the on-screen instructions to save the displayed Guidance path.

To load a saved A-B Line:

1. Reset any currently displayed Guidance paths.
2. With the Guide tab selected, touch the Menu icon.
3. Touch the **Load A-B** button and follow the on-screen instructions to load a selected Guidance path.


Resetting Tank Volume

1. Touch **Product Control**.



2. Touch **Tally Registers**.

3. To reset all tank volumes to the previously entered values, touch **Reset** above Tnk Vol.

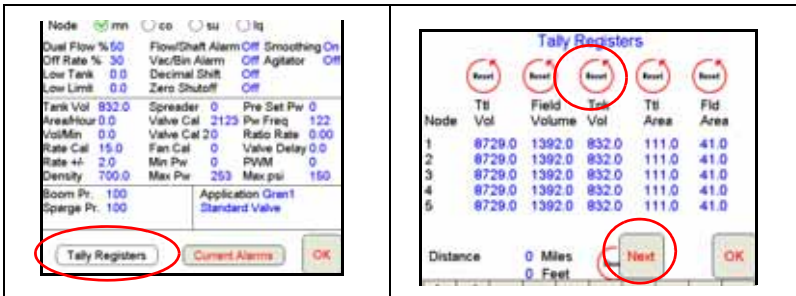


4. To reset individual nodes, touch **Next**.

5. On the Odometer screen, touch **Next**.

6. Type in a value for the **Tank Volume** and then touch **Set**.



7. Touch **Next**. Do the same process for all nodes, if needed, and touch **OK** when finished.

8. Touch **OK** again to exit the Product Control screen.

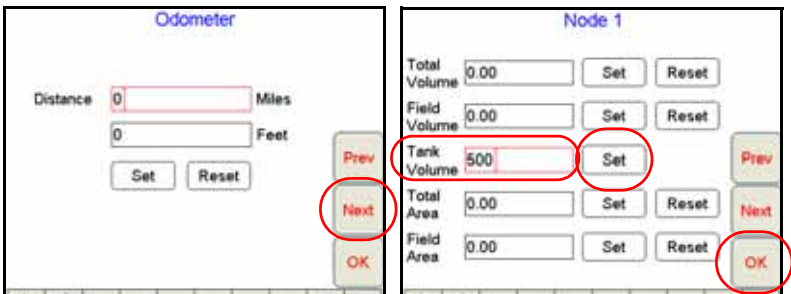

Marking a Field Boundary

1. Touch the **Scout** tab and then the **Record** button.
2. Select **Zone** from the list of features.
3. The Record Field Feature screen displays. Select **Field Boundary** and select the point entry and offset your **options**, and touch **OK**.

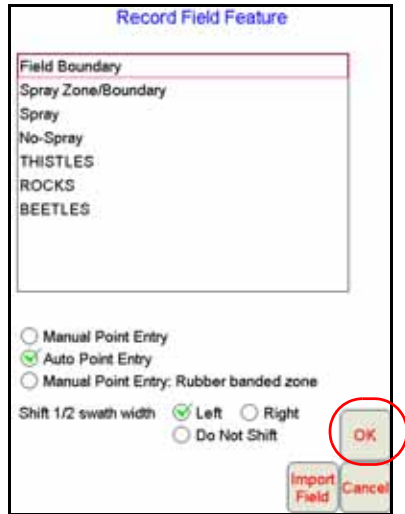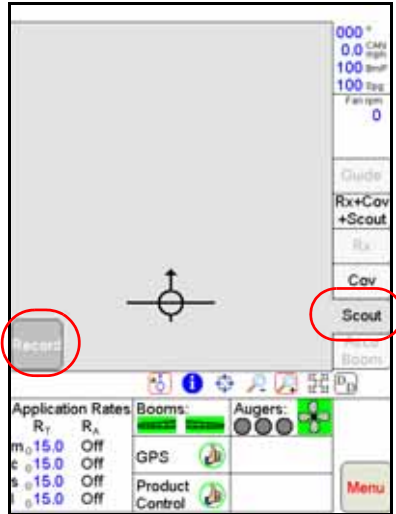

Note: The Field Boundary will automatically close if the machine comes within one boom width of the starting point. To manually close the boundary, touch the **Finish** button in the Map area and select the zone or feature to close.


GPS

1. Select **Menu**, **Setup**, and **Comm Ports**.


2. Select the appropriate GPS setting.

- Select **Raven GPS** when connected to all Raven GPS receivers, except for the RPR 400, RPR 410, and the Phoenix 300, or when not using the guidance in the Viper Pro to control a SmarTrax/SmartSteer system.
- Select **Generic GPS**, when connected to a Raven RPR 400, RPR 410, Phoenix 300, Non-Raven GPS receivers or when the Viper Pro is providing guidance to a SmarTrax/SmartSteer system.

3. Touch **OK**.

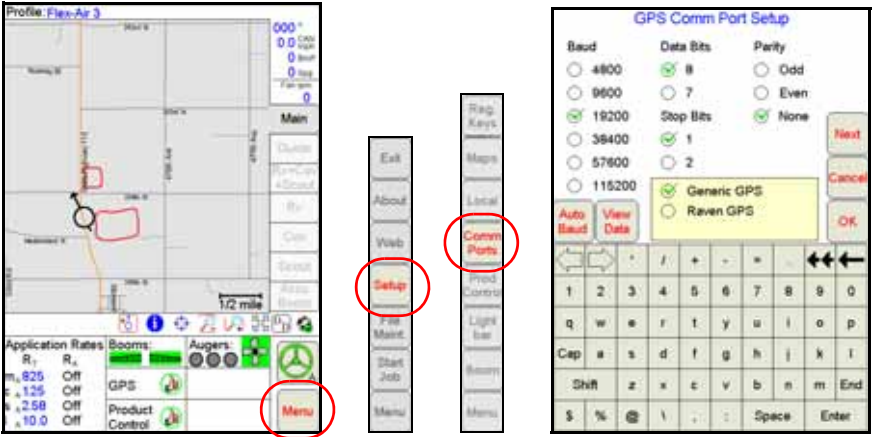


CAN Startup

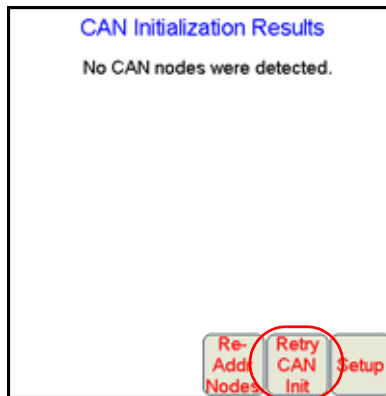

If no CAN nodes are detected on the CANbus when the Viper Pro is powered on, touch the **Retry CAN Init** button. If you still have CAN issues, see the Viper Pro Installation & Operation Manual for more information.

AccuBoom Setup



1. Touch the **Booms Area**.
2. Enter **Look-Ahead** values and touch **Next**.
3. Select the **booms** for AccuBoom automatic boom section control and touch **Next**.
4. Select the desired aggressiveness setting and touch **OK**.

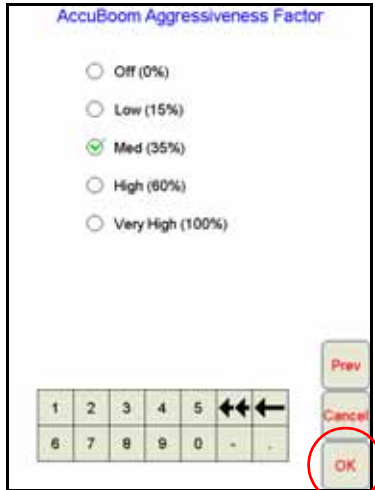


Note: The aggressiveness factor setting uses a percentage of the look-ahead times to adjust the responsiveness of the AccuBoom system.

On-Screen Lightbar

1. Touch **Menu**, **Setup**, then **Lightbar**.
2. Select a **Lightbar** to use.
3. Select **Send Guidance Message**, when using the Viper Pro to provide guidance information to a SmartTrax/SmartSteer system.
4. Touch **Next** to set it up.
5. Touch **OK** when finished.

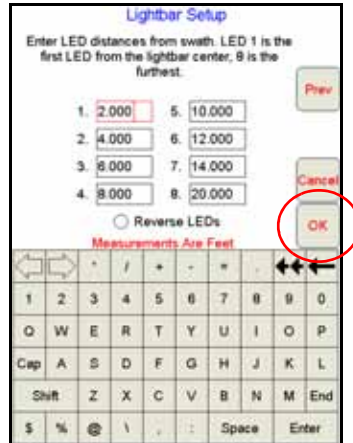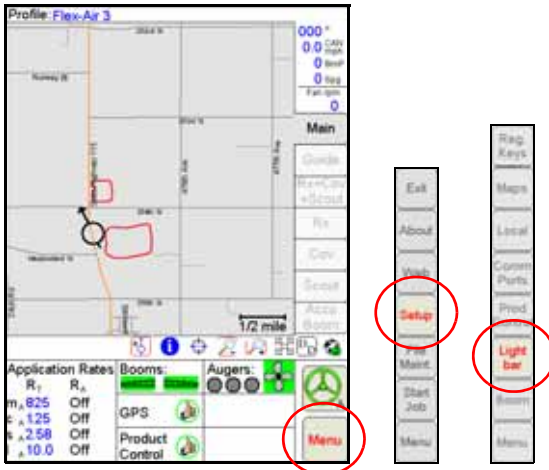

Viper Pro Menu Structure

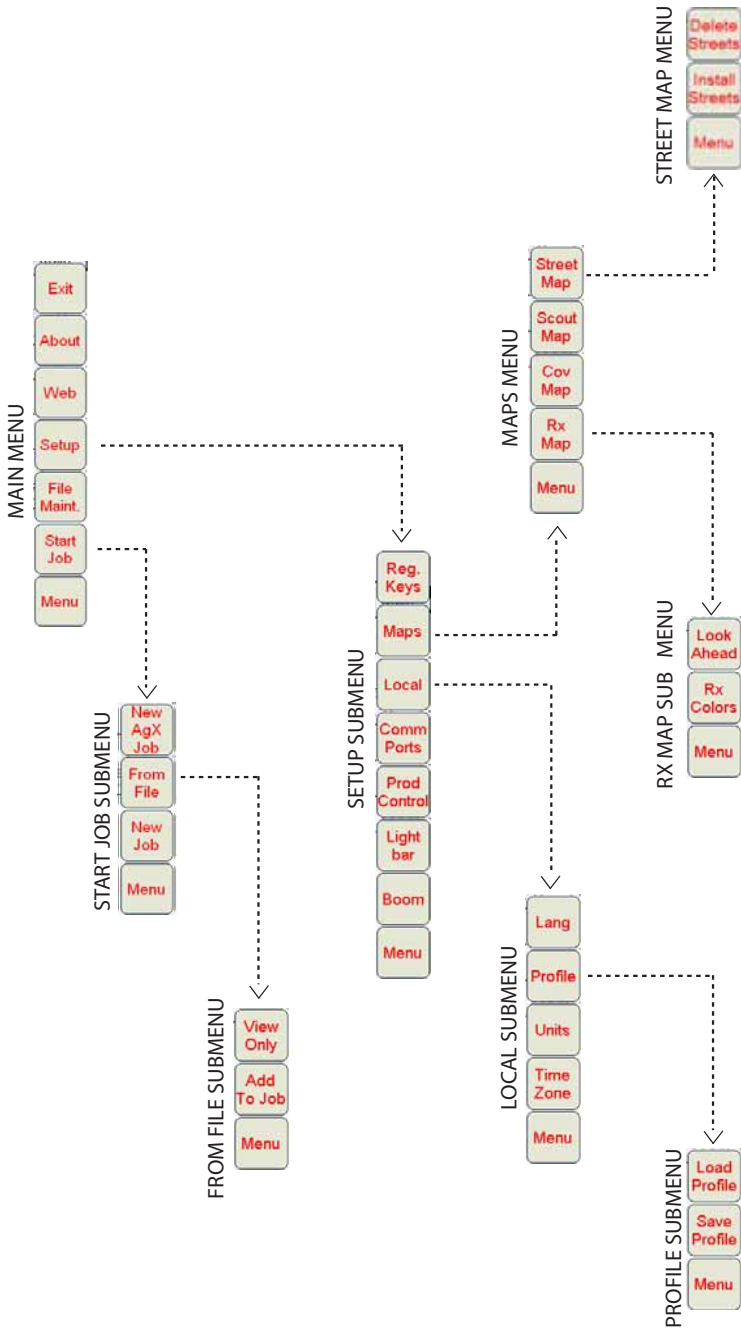

* Buttons with arrows go to sub-menus. Buttons without arrows go directly to selection screens.