

RAVEN

Simply improving your position.SM

OmniRow™ Installation Manual



Kinze Individual Row Control

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

Chapter 1	<i>Important Safety Information</i>	1
	Hydraulic Safety	2
	Electrical Safety	2
Chapter 2	<i>Introduction</i>	3
	Introduction	3
	Recommendations	3
	Tools Needed	3
	Preparing for Installation	3
	Point of Reference	4
	Hydraulic Fittings	4
Chapter 3	<i>Hydraulics</i>	5
	Preparing for Installation	5
	Disassemble the Planter's Drive System	6
	Adjust the Air Bag Connecting Bracket	8
	Install the OmniRow Hydraulic Motors	9
	Install the Fittings on the OmniRow Hydraulic Motors	9
	Mount the OmniRow Hydraulic Motors	10
	Install the PWM Valve Assemblies	11
	Install the PWM Valve Assembly - End Row Units	11
	Install the PWM Valve Assembly - Middle Row Units	13
	Install the Open Center Pressure-Reducing Valve	14
	Install the Fittings on the Valve	14
	Hydraulic Hose Installation	16
	Install the OmniRow Hydraulic Motor Pressure and Tank Hoses	16
	Install the Planter Row Unit Pressure and Tank Hoses	17
	Install the Open Center Pressure-Reducing Valve Pressure and Tank Hoses	17
Chapter 4	<i>Wiring</i>	19
	Install the Tractor Cables	19
	Install the OmniRow Harness Cables	19
	Install the Proximity Switch	21
	Install the OmniRow Nodes	21

CHAPTER

1

Important Safety Information

NOTICE

Read this manual and the operation and safety instructions included with your implement and/or controller carefully before installing the OmniRow™ system.


- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your Raven equipment, contact your local Raven dealer for support.
- Follow all safety labels affixed to the OmniRow system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact your local Raven dealer.

When operating the machine after installing OmniRow, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate OmniRow or any agricultural equipment while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when OmniRow is engaged.
- Disable OmniRow when exiting from the operator's seat and machine.
- Do not drive the machine with OmniRow enabled on any public road.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling OmniRow when the safe working distance has been diminished.
- Ensure OmniRow is disabled prior to starting any maintenance work on OmniRow or the machine.

WARNING

- When starting the machine for the first time after installing OmniRow, be sure that all persons stand clear, in case a hose has not been properly tightened.
- Install the enclosed warning labels in a highly-visible area of the planter's tool bar.

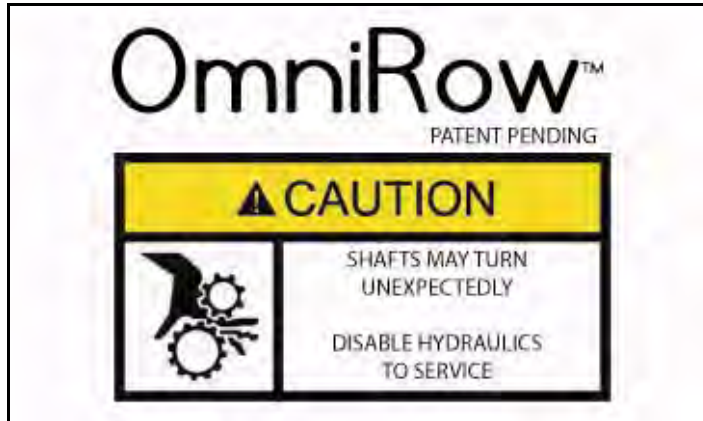

CAUTION

Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on the hydraulic system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when opening a system that has been previously pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic fluid may be extremely hot and under high pressure. Caution must be exercised.
- Any work performed on the hydraulic system must be done in accordance with the machine manufacturer's approved maintenance instructions.
- When installing OmniRow hydraulics or performing diagnostics, maintenance, or routine service, ensure that precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the hydraulic valves.

Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.

Introduction

Congratulations on your purchase of the Raven OmniRow system! This system is designed to allow you to manage variable-rate seeding, automatic on/off planter control, and real-time seed monitoring, eliminating costly skips, doubles, and over-plants.

This manual applies to various Kinze planters equipped with standard Kinze row units and options.

Recommendations

Raven Industries recommends the following best practices when installing the OmniRow system:

- Use part numbers to identify the parts.
- Do not remove the plastic wrap from a part until it is necessary for installation.
- Do not remove plastic caps from a part until it is necessary for installation.

Tools Needed

The following tools are recommended for installation of the OmniRow system:

- SAE standard-sized wrenches
- Cable ties
- Set of tools
- Allen wrenches

Preparing for Installation

Before installing OmniRow, park the machine on a level, clean, and dry surface. Leave the machine turned off for the duration of the installation process.

During the installation process, follow good safety practices. Be sure to carefully read the instructions in this manual as you complete the installation process.

Point of Reference

The instructions in this manual assume that you are standing behind the planter, looking toward the planter’s hitch or tractor. The planter row units referenced in the manual are numbered from left to right, with the left row unit being #1.

Hydraulic Fittings

This manual may reference the following types of hydraulic fittings:

- SAE O-Ring fittings
- ORFS (O-Ring Face Seal) fittings
- JIC fittings

SAE O-ring fitting



ORFS fitting



JIC fitting (M)



TABLE 1. Hydraulic Fitting Conversion Chart

Dash Size	JIC and UNO	SAE	ORFS	NPT	BSP
04			9/16"	1/4"	1/4"
06	3/8"	3/8"	11/16"	3/8"	3/8"
08	1/2"	1/2"	13/16"	1/2"	1/2"
10		5/8"	1"		5/8"
12	3/4"	3/4"	1-3/16"	3/4"	3/4"
16			1-7/16"	1"	1"


CHAPTER 3 *Hydraulics*

Preparing for Installation

Important: Refer to the implement's operation manual before changing the connection or configuration of any of the existing hydraulic hoses.

For the OmniRow system to function properly, its hydraulic tank line must connect to a low pressure return connection on the tractor that prohibits the tank pressure from exceeding 200 psi. A motor return connection is the ideal connection for the OmniRow system because it prevents the pressure from being reversed to the system. The vacuum fan motor on the planter is often installed on this connection. If this is the case, it is likely that the fan return line can be connected to the SCV return port next to the fan pressure line. If there is no available return connection, one will have to be added to the tractor. Contact your local tractor service provider for more information.


FIGURE 1. Low Pressure Motor Returns

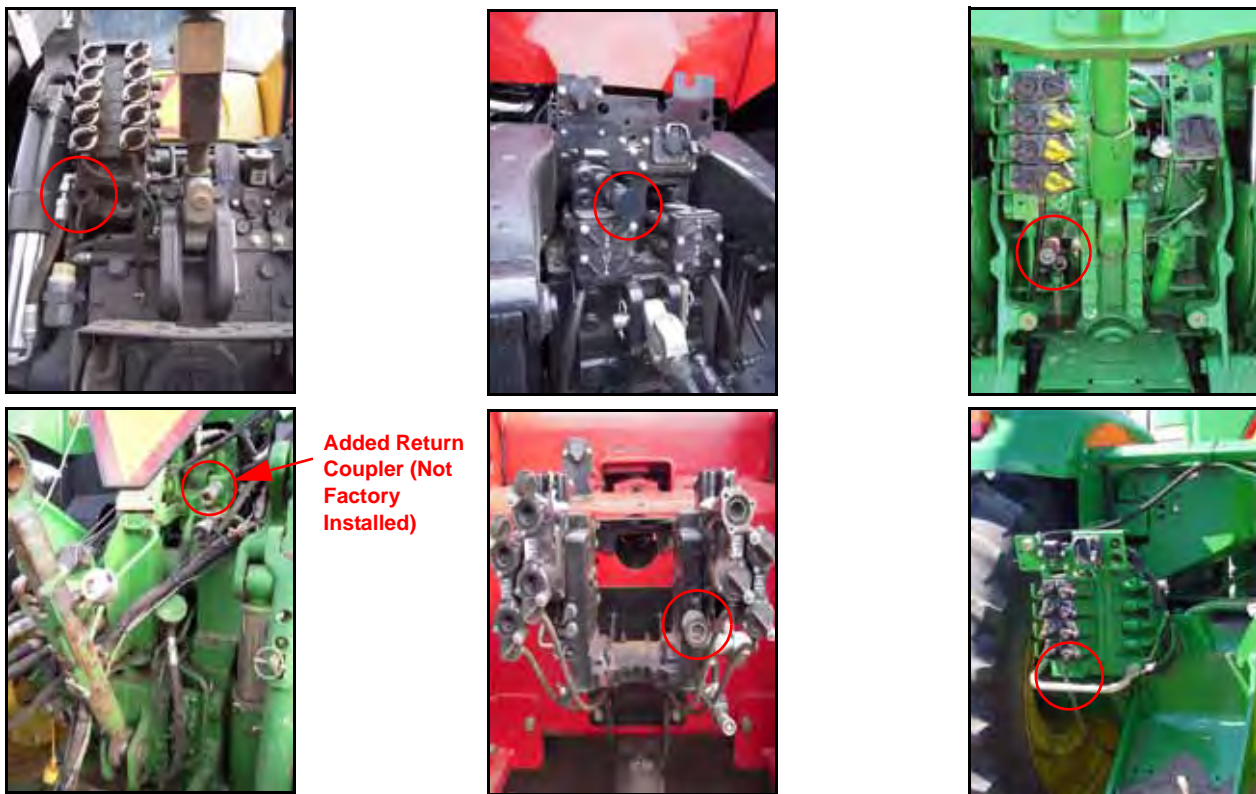

Disassemble the Planter's Drive System

Note: The planter's existing drive system is not required for operation once the OmniRow system is installed. Although it is not required for the entire existing ground drive or hydraulic transmission(s) to be removed from the planter, it is recommended to do so to help prevent any interference between the existing planter drive system and the OmniRow system.


FIGURE 2. Machine's Existing Hex Shaft

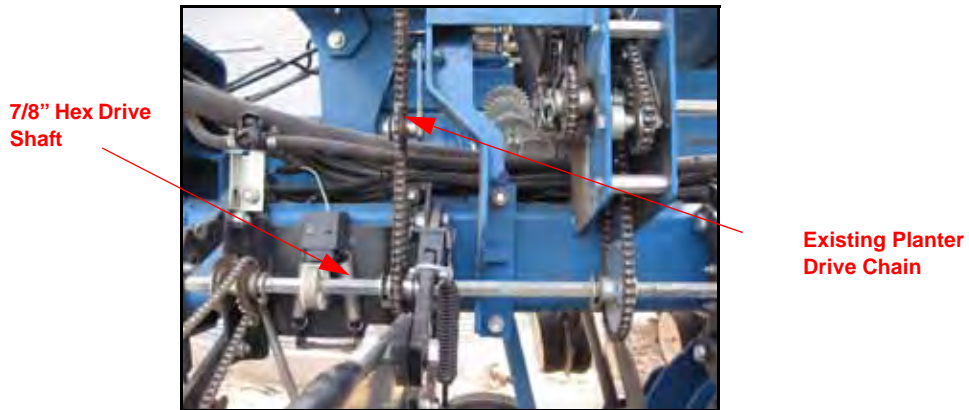

1. Remove all sections of the 7/8" hex shaft that drive the row units.

Important: Leave the existing sprocket on the left side of the row unit. The OmniRow system will utilize it and the existing drive chain to drive the seed meter.


FIGURE 3. Machine's Supplemental Support Bearings

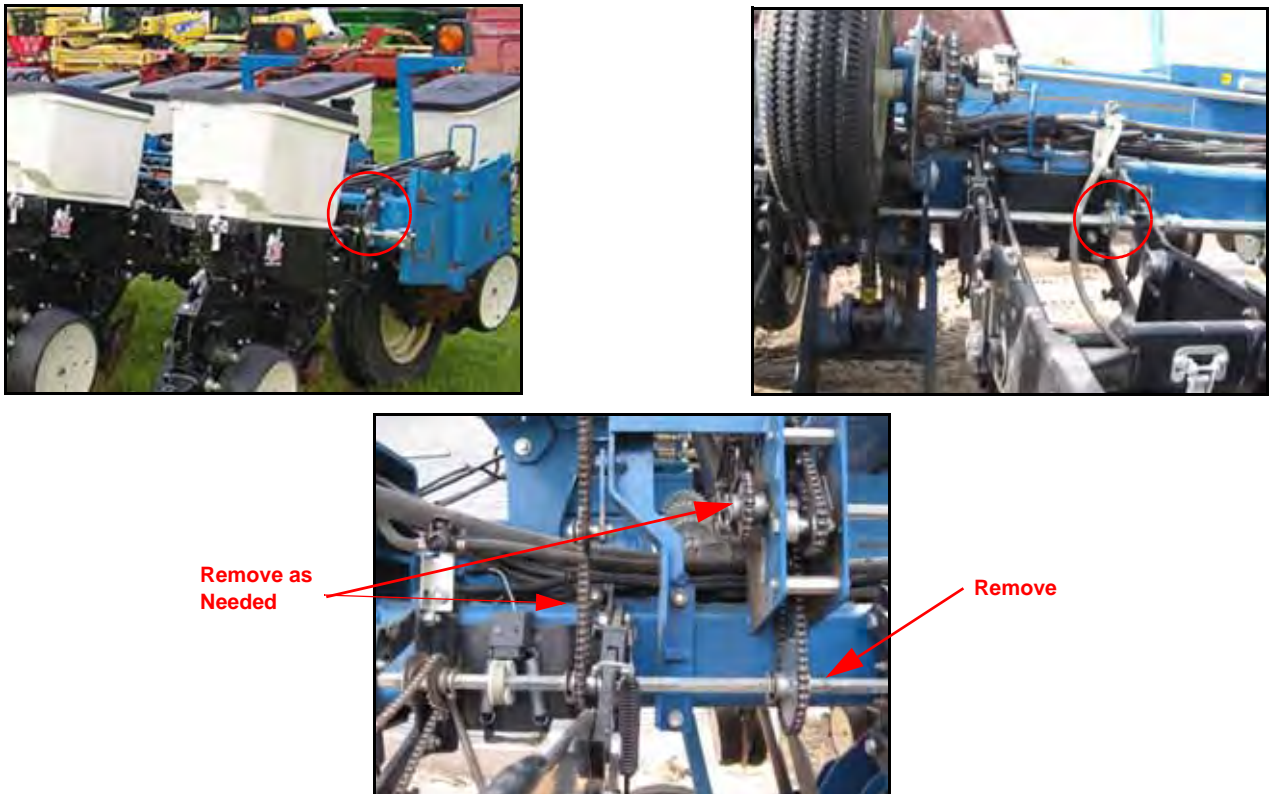

2. Remove all supplemental support bearings from the right side of the planter row units, opposite the seed meter drive sprocket.

Note: Supplemental support bearings are generally located next to folding or flex points, or where drive chains from the transmission attach to the main hex shaft.


FIGURE 4. Components to be Removed as Needed

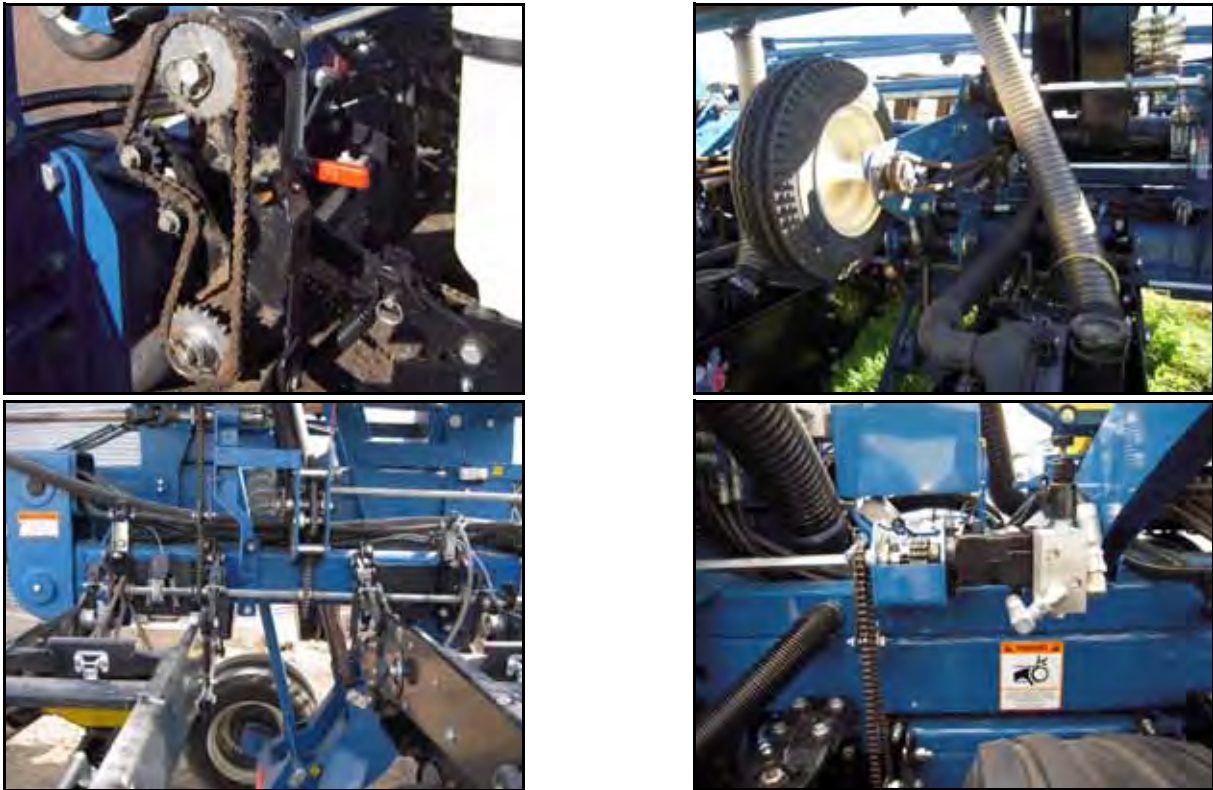

3. Remaining jack shafts, transmissions, and/or OEM hydraulic motors can be removed as needed if they interfere with the OmniRow installation.

Adjust the Air Bag Connecting Bracket

FIGURE 5. Machine's Air Bag Mounting Bracket

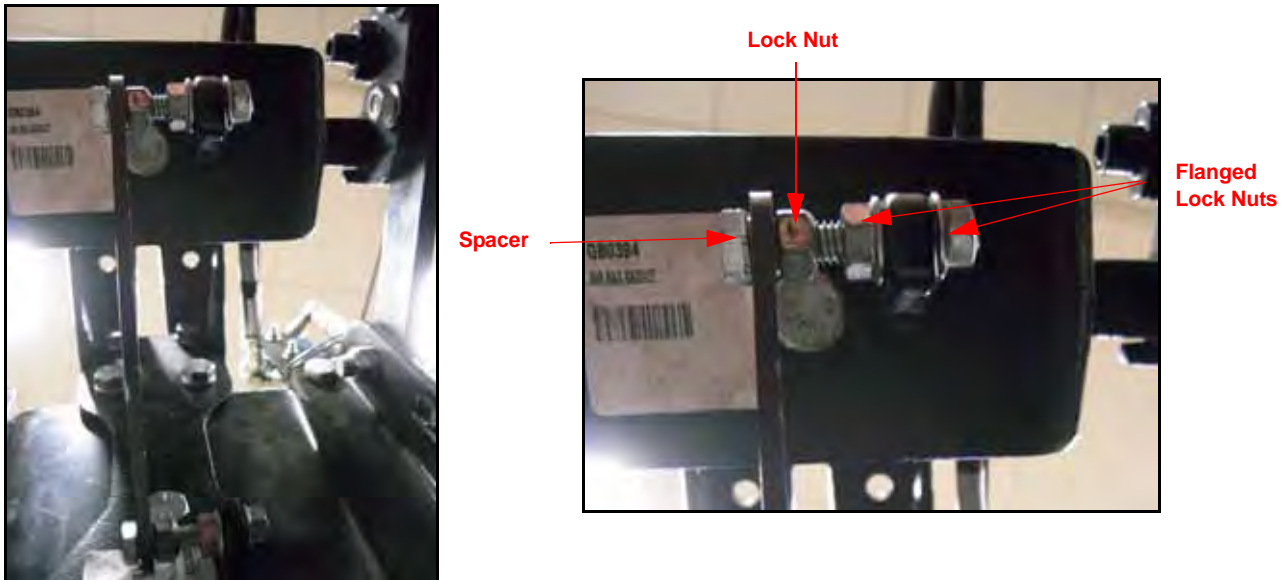

1. Remove the machine's existing air bag connecting bracket from the row unit.
2. Remove the machine's bolts and nuts.
3. Remove the machine's spacers.


Note: Keep the bolts and nuts for future use.

4. Install the 3/8"-16 UNC x 2" L fully-threaded hex head bolts (P/N 311-0054-202) in the holes of the connecting bracket.
5. Install the machine's spacers on the installed bolts and secure them using two 3/8"-16 UNC 3B nylon insert lock nuts (P/N 312-4000-061).
6. Install two 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164) on the ends of the installed bolts, tightening them so that they are spaced approximately 1/4" from the previously installed insert lock nuts as shown in Figure 5 above.

Note: Mount the flanged side of the nut away from the connecting bracket.


7. Mount the connecting bracket to the planter row unit using two 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Install the OmniRow Hydraulic Motors



⚠ WARNING

Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.



⚠ CAUTION

When installing OmniRow hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.


Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly cause damage to the OmniRow hydraulic equipment.



Install the Fittings on the OmniRow Hydraulic Motors

Before mounting the OmniRow hydraulic motors on the machine, install the proper fittings in the motors. This prepares the motors for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the OmniRow hydraulic motors.


FIGURE 6. Fittings Installed on Hydraulic Motors

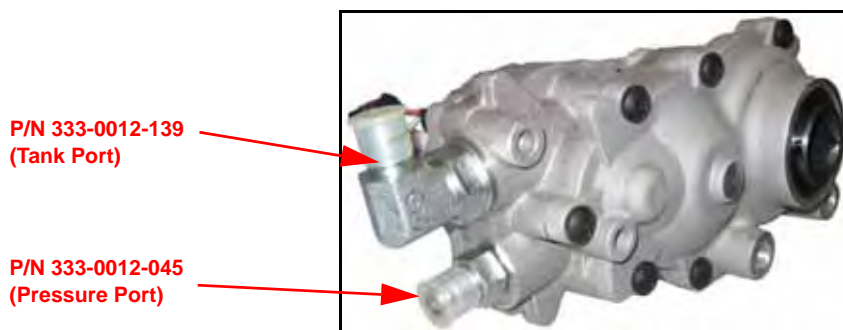

Fitting	Part Number	Port
Fitting - 9/16" SAE O-Ring (M) to 9/16" JIC (M) Straight Adapter	333-0012-045	P
Fitting - 3/4" SAE O-Ring (M) to 9/16" JIC (M) 90° Elbow	333-0012-139	T

Mount the OmniRow Hydraulic Motors

FIGURE 7. Hydraulic Motor Mounted to the Planter Row Unit

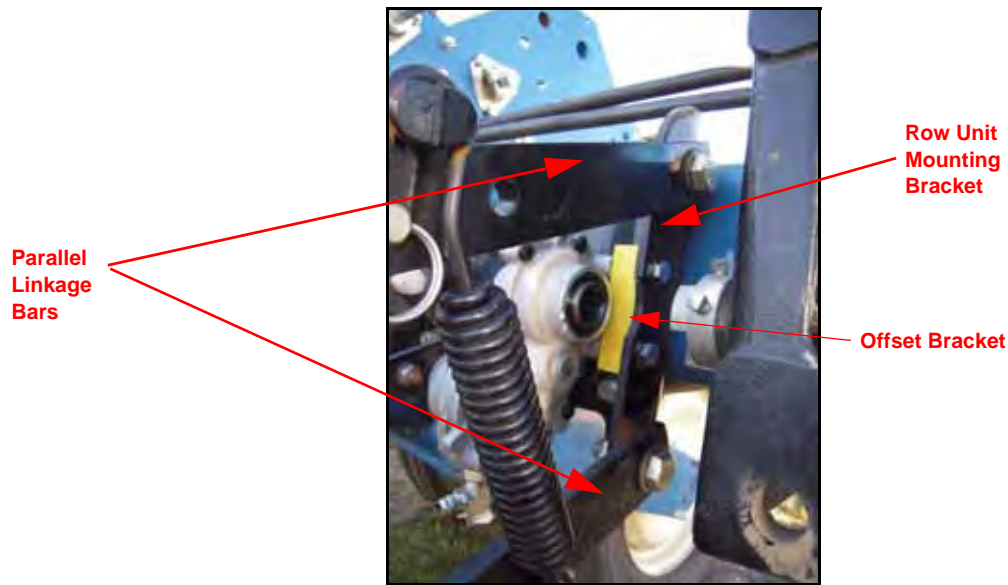

1. Install the motor offset bracket (P/N 107-0171-952) on the motor using two 3/8"-16 x 2" socket head cap hex screws (P/N 311-0068-106).

Note: For illustration purposes, the motor offset bracket is painted yellow in the figure above and below. The actual motor offset bracket in the OmniRow kit is black.

FIGURE 8. Hydraulic Motor Installed



2. Loosely mount the hydraulic motor to the right side of the planter row unit (across from the drive sprocket) using two 3/8"-16 x 7/8" hex socket head cap screws (P/N 311-0068-101).

FIGURE 9. Hex Rod Installed



3. Install the supplied 7/8" black nylon hex rod (P/N 211-0002-001) between the motor and the drive sprocket and secure it using 1.06" ID zinc plated steel washers (P/N 313-2300-027) and 0.0156 diameter x 1-1/2" long cotter pins (P/N 312-0000-389) at each end.
4. Secure any existing wires within close proximity of the installed hydraulic motor so they don't interfere with the operation of the row unit.

Important: Do not secure the wires between the motor and the row unit mounting bracket, as this makes it difficult to access the wires if maintenance is required.

5. Tighten the hex socket head cap screws to secure the motor to the planter row unit.
6. Repeat the steps above to install the hydraulic motors on the remaining planter row units.

Install the PWM Valve Assemblies

Before the PWM valves (P/N 063-0131-140) are mounted on the machine, the proper hydraulic fittings and mounting brackets must be installed. Refer to the following table to install the fittings in the appropriate ports of the PWM valve.


Install the PWM Valve Assembly - End Row Units

Using the planter-specific installation guide included in the OmniRow installation kit, identify the number of left and right end row unit assemblies required for the installation on the machine.


Note: Examples of end row assembly placement locations are the left and right outside row units of the planter, and the ends of the center section hydraulic plumbing.

FIGURE 10. PWM Valve Assembly for End Row Units

Left PWM Valve Assembly

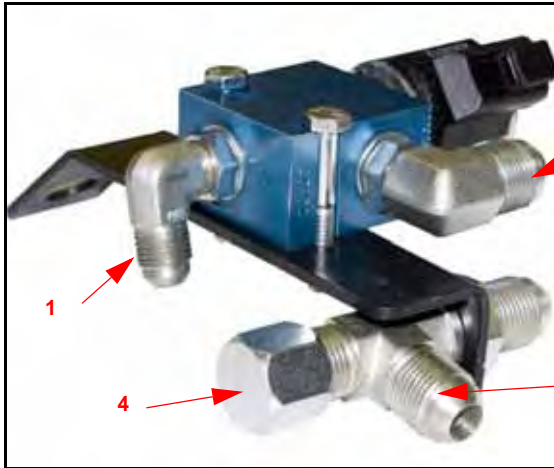

Right PWM Valve Assembly

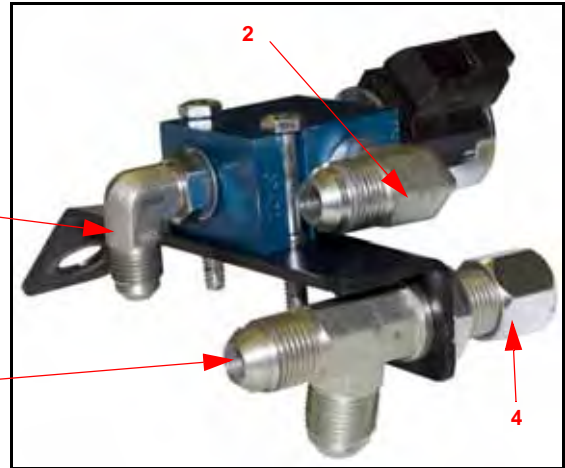

#	Fitting	Part Number	Port
1	Fitting - 9/16" JIC (M) to 9/16" SAE O-Ring (M) 90° Elbow	333-0012-072	Port 1
2	Fitting - 3/4" JIC (M) to 9/16" SAE O-Ring (M) 90° Elbow	333-0012-071	Port 2
3	Fitting - 3/4" JIC M/M/M Bulkhead Tee	333-0012-314	Tank Port at the End of the Bracket
4	Fitting - 3/4" JIC (F) Cap	333-0012-272	Outside Tank Tee Branch

1. After installing the fittings on the PWM valves as shown above, secure the PWM valves to the mounting brackets (P/N 107-0171-933) using two 1/4"-20 UNC-2 x 1-3/4" hex head machine bolts (P/N 311-0050-108) and two 1/4"-20 zinc flanged lock nuts (P/N 312-1001-168) per PWM valve.

FIGURE 11. PWM Valve Installed



2. Install the PWM mounting brackets on the required end-row units using the supplied 5/8"-11 flanged lock nuts (P/N 312-1001-179), ensuring that the capped branch of the installed tank tees face the ends of the planter and the open end of the installed tank tee fittings face the center of the planter.

Note: *The PWM valves should be mounted on the right side of the planter row units. The mounting brackets should be mounted to the top of the right U-bolts that attach the row units to the planter frame. Do not remove the existing nuts from the U-bolts. Place the PWM valve assemblies onto the U-bolts, then install the supplied lock nuts to secure the valve assemblies*

Install the PWM Valve Assembly - Middle Row Units

FIGURE 12. PWM Valve Assembly for Middle Row Units



#	Fitting	Part Number	Port
1	Fitting - 9/16" JIC (M) to 9/16" SAE O-Ring (M) 90° Elbow	333-0012-072	Port 1
2	Fitting - 3/4" JIC M/M to 9/16" SAE O-Ring (M) Branch Tee Adapter	333-0012-315	Port 2
3	Fitting - 3/4" JIC M/M/M Bulkhead Tee	333-0012-314	Tank Port at the End of the Bracket

1. After installing the fittings on the PWM valves as shown above, secure the PWM valves to the mounting brackets (P/N 107-0171-933) using two 1/4"-20 UNC-2 x 1-3/4" hex head machine bolts (P/N 311-0050-108) and two 1/4"-20 zinc flanged lock nuts (P/N 312-1001-168) per assembly.

FIGURE 13. PWM Valve Installed



2. Install the PWM valve assemblies on the remaining row units using the supplied 5/8"-11 flanged lock nuts (P/N 312-1001-179).


Note: *The PWM valves should be mounted on the right side of the planter row units. The mounting brackets should be mounted to the top of the right U-bolts that attach the row units to the planter frame. Do not remove the existing nuts from the U-bolts. Place the PWM valve assemblies onto the U-bolts, then install the supplied lock nuts to secure the valve assemblies.*

Install the Open Center Pressure-Reducing Valve

Install the Fittings on the Valve

Before mounting the open center pressure reducing valve on the machine, install the proper fittings in the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the open center pressure reducing valve.

FIGURE 14. Fittings Installed on the Valve

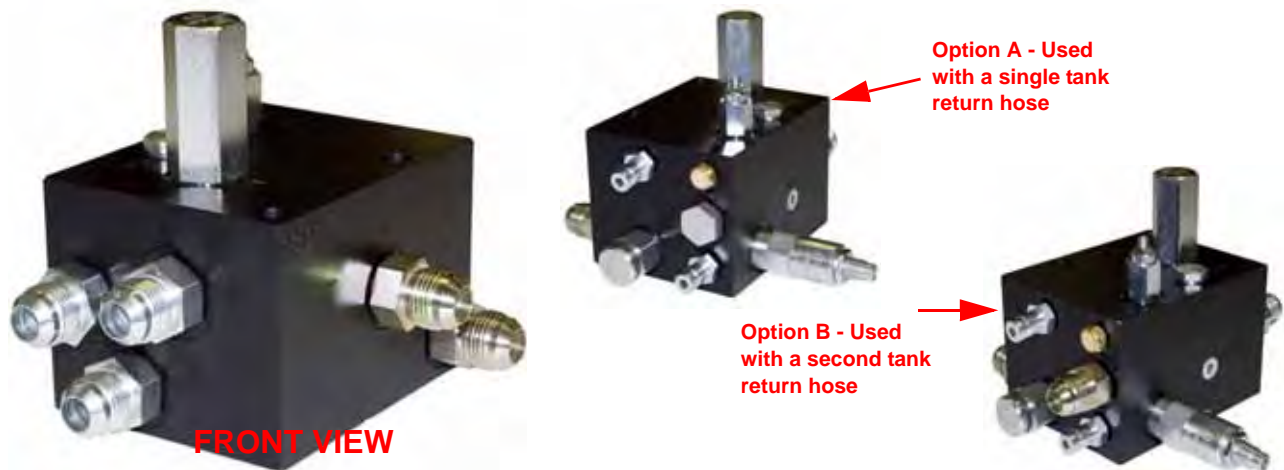

Fitting	Part Number	Port
Fitting - 7/8" JIC (M) to 1-1/16" SAE O-Ring (M) Straight Adapter	333-0012-319	P, T, EF
Fitting - 7/16" SAE O-Ring (M) to Male Diagnostic Nipple Hydraulic	333-0012-308	G1, G2
Fitting - 7/8" JIC (M) to 7/8" SAE O-Ring (M)	333-0012-246	CF, T1 (T2 Option B)
Fitting - 7/8" SAE O-Ring (M) Plug	333-0012-242	T2 (Option A)
Fitting - 1/4" NPT Breather	333-0012-189	RV

FIGURE 15. Open Center Pressure Reducing Valve Installed on Kinze 3600




Note: The open center pressure reducing valve should be mounted in a location that allows the hydraulic hoses to be connected to it without interference. Ports P, T, and EF should face the planter's hitch and Ports G1, G2, and T2 should face the planter's tool bar if possible. Refer to the machine-specific hydraulic installation sheet for the ideal mounting location. Kinze 3700/3800 models do not require use of the mounting brackets.

1. Secure the open center pressure reducing valve (P/N 063-0131-142) to the mounting bracket (P/N 107-0171-956) using two 3/8"-16 x 4-3/4" UNC-2 machine bolts (P/N 311-0054-207) and two 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).
2. Mount the valve to the machine.
 - 2200/3200 Only - "Sandwich" the planter's left side draw bar between the two mounting brackets (P/N 107-0171-956 and 107-0171-979) using four 5/16"-18 x 4-3/4" bolts (P/N 311-0052-610), four 5/16"-18 flanged lock nuts (P/N 312-1001-169), and four 5/16" washers (P/N 313-2300-011).
 - 2600/3600/3660 Only - "Sandwich" the planter's vertical storage bar between the two mounting brackets (P/N 107-0171-956 and 107-0171-979) using four 5/16"-18 x 4-3/4" bolts (P/N 311-0052-610), four 5/16"-18 flanged lock nuts (P/N 312-1001-169), and four 5/16" washers (P/N 313-2300-011).
 - 2700/3700/3800 Only - Mount the open center pressure reducing valve to the left side of the planter (near the tongue) using four 5/16"-18 x 4-3/4" bolts (P/N 311-0052-810), four 5/16"-18 flanged lock nuts (P/N 312-1001-169), and four 5/16" washers (P/N 313-2300-011).

Hydraulic Hose Installation

Install the OmniRow Hydraulic Motor Pressure and Tank Hoses

FIGURE 16. Motor Pressure and Tank Hoses Installed

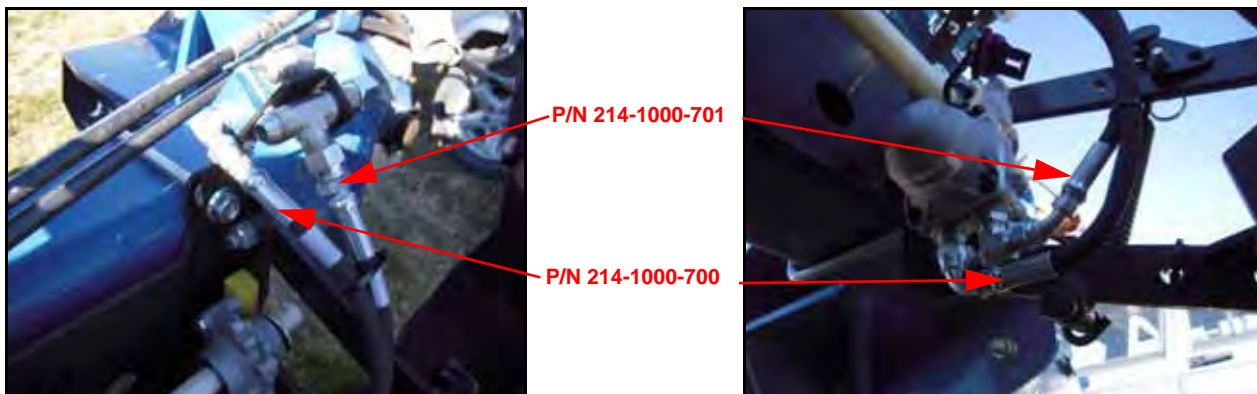

1. Install the 45° end of the supplied hydraulic hose (P/N 214-1000-701) to the fitting installed in the tank port of the OmniRow hydraulic motor.
2. Connect the other end of the supplied hydraulic hose to the 90° end of the bulkhead tee fitting (P/N 333-0012-314) installed on the end of the PWM valve mounting bracket (P/N 107-0171-933).
3. Install the 90° end of the supplied hydraulic hose (P/N 214-1000-700) to the fitting installed in the pressure port of the OmniRow hydraulic motor (P/N 413-8000-001) on the first planter row unit.
4. Connect the other end of the supplied hydraulic hose to the fitting installed in Port 1 of the PWM valve (P/N 063-0131-140).
5. Repeat the steps above to install the pressure and tank hoses on the remaining row units.

Install the Planter Row Unit Pressure and Tank Hoses

FIGURE 17. Planter Row Unit Pressure and Tank Hoses Installed



Refer to the supplied machine-specific hydraulic installation sheet included with the OmniRow installation kit to install the planter row unit pressure and tank hoses.

Important: Pay close attention to the hydraulic hose part numbers on the diagram and the locations in which each must be installed. Install all pressure hoses before installing tank hoses.

Note: As illustrated in the installation sheet, there are tee fittings installed to connect the pressure and tank hoses to the open center pressure-reducing valve. Additional 45° and 90° elbow fittings are also supplied to assist in routing the hydraulic hoses around obstacles. Install these additional fittings as needed.

1. Install the supplied hydraulic hoses on each end of the installed tee fittings in Port 2 of the PWM valves, continuing from one row unit to the next, until all pressure hoses are installed.
2. Install the supplied hydraulic hoses on each end of the installed bulkhead tee fittings installed on the end of the PWM valve mounting brackets, continuing from row unit to the next, until all tank hoses are installed.

Install the Open Center Pressure-Reducing Valve Pressure and Tank Hoses

FIGURE 18. Pressure-Reducing Valve Pressure and Tank Hoses Installed



Refer to the supplied machine-specific hydraulic installation sheet included with the OmniRow installation kit to install the open center pressure-reducing valve pressure and tank hoses.

Important: Pay close attention to the hydraulic hose part numbers on the diagram and the locations in which each must be installed.

Note: Install the supplied 90° elbow fittings (P/N 333-0012-108) on the OmniRow hydraulic valve as needed when installing the hydraulic hoses.

FIGURE 19. Hoses Clamped



Note: Use the provided hose clamps (P/N 434-2000-001) to secure the installed hydraulic lines to each end of the machine's draw bar as illustrated in the figure above.

1. Install the supplied hydraulic hose labeled P on the fitting installed in Port P of the open center pressure-reducing valve.
2. Install the supplied hydraulic hose labeled T on the fitting installed in Port T of the open center pressure-reducing valve.
3. Install the supplied hydraulic hose labeled EF on the fitting installed in Port EF of the open center pressure-reducing valve.
4. Install 7/8" SAE O-ring (M) to Pioneer (M) hydraulic couplers (P/N 333-0012-310) on the remaining ends of the installed hydraulic hoses.
5. Route the ends of the installed hydraulic hoses to the planter's hitch.
6. Install the indicated hydraulic hose on the installed fitting in Port CF of the open center pressure-reducing valve.
7. Route the installed hydraulic hose along the machine's draw bar and connect to the tee fitting installed in line with the **pressure** hoses between the row units as indicated on the machine-specific hydraulic installation sheet.
8. Install the indicated hydraulic hose on the installed fitting in Port T1 of the open center pressure-reducing valve.
9. Route the installed hydraulic hose along the machine's draw bar and connect it to tee fitting installed in line with the **tank** hoses between the row units as indicated on the machine-specific hydraulic installation sheet.

Install the Tractor Cables

The tractor cables are specific to the tractor being used to pull the planter. For available kits and ordering information, contact your local Raven dealer.

1. Install the chassis cable's main battery connections, leaving room to provide access to the fuses in the cable.
2. Route the chassis cable to the back of the tractor.
3. Connect the chassis cable to the cab cable.

FIGURE 1. Extension Cable Connected to the Tractor Harness Cable



4. Route the cab cable into the cab and connect it to the Envizio Pro II.

Install the OmniRow Harness Cables

Note: On planters equipped with 16 or more planter row units, the harness cable is divided in half. The left harness cable and right harness cable connect together at the middle of the planter. Locate the cable connectors on each harness cable to determine which ends of the harness cables are installed on the end row units of the planter. On planters equipped with 12 row units or less, the harness cable is a single cable.

1. Lay the left harness cable along the length of the left side of the planter, aligning the motor, PWM valve, and seed sensor cables with their corresponding row unit.

Note: *The harness cable should be laid on top of the installed hydraulic hoses.*

2. Lay the right harness cable along the length of the right side of the planter, aligning the motor, PWM valve, and seed sensor cables with their corresponding row units.
3. Connect the female receptacle connector from the left harness cable to the male receptacle connector of the right harness cable.

FIGURE 2. Harness Cable Connections on the Row Units



4. Connect the 3-pin metripack connector labeled Row 1 to the motor speed sensor of the hydraulic motor installed on the first row unit.
5. Connect the 2-pin Deutsch connector to the PWM valve installed on the first row unit.

FIGURE 3. Seed Tube Sensor Connection



Note: *The OmniRow system can not connect to the original Kinze seed tube sensors. Contact your Raven dealer to order replacement seed tube sensors.*

6. Connect the remaining 3-pin weatherpack connector to the seed tube sensor on the first row unit.
7. Repeat steps 4 - 6 above to connect the harness cables to the remaining row units.
8. Install the power/CAN extension cable on the remaining receptacle connector on the left harness cable.
9. Route the extension cable along the planter's draw bar (along with the installed pressure and tank hoses).
10. Connect the extension cable to the installed tractor harness cable.
11. Secure the installed cables with cable ties.

Install the Proximity Switch

FIGURE 4. Proximity Switch Installed



Refer to the supplied Remote Implement Proximity Switch Installation Sheet (P/N 016-0171-374) to install the proximity switch with the parts provided.

Note: *The proximity switch brackets can be assembled in multiple configurations to fit various models of planters. Not all of the supplied brackets may be required for installation.*

Install the OmniRow Nodes

FIGURE 5. OmniRow Node Installed



1. Mount the magnets (P/N 418-0000-013) to the bottom of the node mounting plate using the 1/4"-20 x 3/4" HD hex bolts (P/N 311-0049-103) and 1/4"-20 UNC nylon insert lock nuts (P/N 312-4000-057).



2. Mount the OmniRow nodes (P/N 063-3001-001) to the node mounting plates (P/N 107-0171-897) using three 3/8"-16 x 1" HD hex bolts (P/N 311-0054-105) and three 3/8"-16 nylon insert lock nuts (P/N 312-4000-061).

Note: *Position the node so that the cable connections face down or to the side.*

3. Insert the large, rectangular node connectors on the harness cables into the correct ports of the OmniRow nodes.
4. Tighten the bolts on the node connectors to secure the connections.

E**Electrical Safety** 2**H****Hydraulic Safety** 2**Hydraulics** 5

- Adjusting the Air Back Connecting Bracket 8
- Disassembling the Planter's Drive System 6
- Hydraulic Hose Installation 16
- Installing the OmniRow Hydraulic Motors 9
 - Installing the Fittings on the OmniRow Hydraulic Motors 9
 - Mounting the OmniRow Hydraulic Motors - Newer Models 10
- Installing the Open Center Pressure-Reducing Valve 14
 - Installing Fittings on the Valve 14
- Installing the PWM Valve Assemblies 11
 - Four End Row Units 11
 - Twelve Middle Row Units 13
- Preparing for Installation 5

I**Important Safety Information**

- Electrical Safety 2
- Hydraulic Safety 2

Introduction 3

- Hydraulic Fittings 4
- Point of Reference 4
- Preparing for Installation 3
- Recommendations 3
- Tools Needed 3

P**Preparing for Installation** 3**R****Recommendations** 3**T****Tools Needed** 3**W****Wiring** 19

- Installing the OmniRow Harness Cables 19
- Installing the OmniRow Nodes 21
- Installing the Proximity Switch 21
- Installing the Tractor Cables 19

RAVEN

RAVEN INDUSTRIES

Limited Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service.

How Long is the Coverage Period?

Raven Applied Technology Division products are covered by this warranty for 12 months after the date of purchase. This warranty coverage applies only to the original owner and is nontransferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If your dealer agrees with the warranty claim, the dealer will send the part and proof of purchase to their distributor or to Raven Industries for final approval.

What Will Raven Industries Do?

Upon confirmation of the warranty claim, Raven Industries will, at our discretion, repair or replace the defective part and pay for return freight.

What is not Covered by this Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

R A V E N

Kinze Individual Row Control
OmniRow™ Installation Manual
(P/N 016-3001-007 Rev A 12/10 E16869)

Simply improving your position.™



Raven Industries
Applied Technology Division
P.O. Box 5107
Sioux Falls, SD 57117-5107

Toll Free (U.S. and Canada): (800)-243-5435
or Outside the U.S. :1 605-575-0722
Fax: 605-331-0426
www.ravenprecision.com

Notice: This document and the information provided are the property of Raven Industries, Inc. and may only be used as authorized by Raven Industries, Inc. All rights reserved under copyright laws.