

SCS 4400 Consoles Universal CAN AccuBoom Installation Manual

P/N 0160-0171-074 Rev D 01/17

E28992

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

CHAPTER

1

INTRODUCTION

Congratulations on your purchase of the Raven AccuBoom system! This system is designed to provide worry free turn on and turn off of your booms with respect to the as-applied coverage map. The following instructions are designed to assist you in the proper installation of the AccuBoom system. See the Viper Installation and Operation Manual for instructions on setting up the software and using the AccuBoom system. You will also need a valid AccuBoom Control activation key for your Viper in order to activate the AccuBoom system.



Important! All boom switches must remain in the **ON** position while AccuBoom control is in operation!

COMPONENTS NEEDED

- CAN AccuBoom Control Node – P/N 063-0172-316
- AccuBoom Control Activation Key – P/N 077-0180-010
- SCS4400 Console Universal CAN AccuBoom Cable – P/N 115-1001-005
- CAN AccuBoom installation Sheet, SCS4400 Universal Cable – P/N 016-0171-074



Important: If no CAN system currently exists on the machine you are installing AccuBoom on, you will need these additional components:

Kit, CANBus, Terminators & Power Adapter “T” – P/N 117-0159-923

Appropriate length CANBus Tee Cable:

6 inch CAN Tee Cable – 115-0171-364

6 Ft CAN Tee Cable – 115-0171-326

12 Ft CAN Tee Cable – 115-0171-362

18 Ft CAN Tee Cable – 115-0171-690

24 Ft CAN Tee Cable – 115-0171-363

CHAPTER 2 INSTALLATION

Use the following procedure to properly install the CAN AccuBoom/Serial Console cable:

1. Connect the CAN AccuBoom/Serial Console Cable (P/N 115-1001-005) to the Raven SCS4400 Console.



Important! The CAN AccuBoom Serial Console Cable (P/N 115-1001-005) is compatible with Raven SCS4400 consoles only.

- a. Disconnect the existing console cable from the back of the SCS4400 console.



- b. Connect CAN AccuBoom/Serial Console Cable (P/N 115-1001-005) to the back of the SCS4400 console.




- c. Connect the console cable previously disconnected to the mating connector on CAN AccuBoom/Serial Console Cable (P/N 115-1001-005).



2. Connect the CAN AccuBoom cable to the CAN AccuBoom node:
 - a. Connect the rectangular connectors from the CAN AccuBoom/Serial Console Cable (P/N 115-1001-005) to the CAN AccuBoom Node (P/N 063-0172-316).



3. Mount the CAN AccuBoom Node:
 - a. Route the CAN AccuBoom/Serial Console Cable (P/N 115-1001-005) from the console connection to a location suitable to mount the CAN AccuBoom node (P/N 063-0172-316).
 - b. Identify a suitable location to secure the CAN AccuBoom Node (P/N 063-0172-316) to the machine.
 - c. Bolt the CAN AccuBoom Node (P/N 063-0172-316) securely in place.

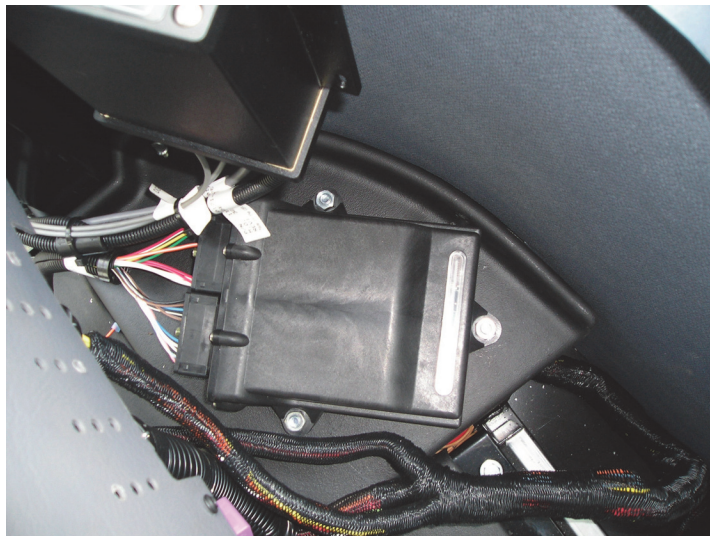


4. Connect the CAN AccuBoom cable to the CANBus system.



Note: If your system does not currently have a CAN system installed, see the CAN installation instructions in Chapter 3 of this installation guide.

5. Connect the CAN bus to the Raven SCS4400 console:
 - a. Determine the correct length of CAN Tee Cable needed to connect between the CAN bus connector and the CAN connector on the SCS4400 cable:
 - 6 inch CAN Tee Cable – 115-0171-364
 - 6 Ft CAN Tee Cable – 115-0171-326
 - 12 Ft CAN Tee Cable – 115-0171-362
 - 18 Ft CAN Tee Cable – 115-0171-690
 - 24 Ft CAN Tee Cable – 115-0171-363
 - b. Connect the selected length CAN Tee cable to the connector at the end of the CAN system.

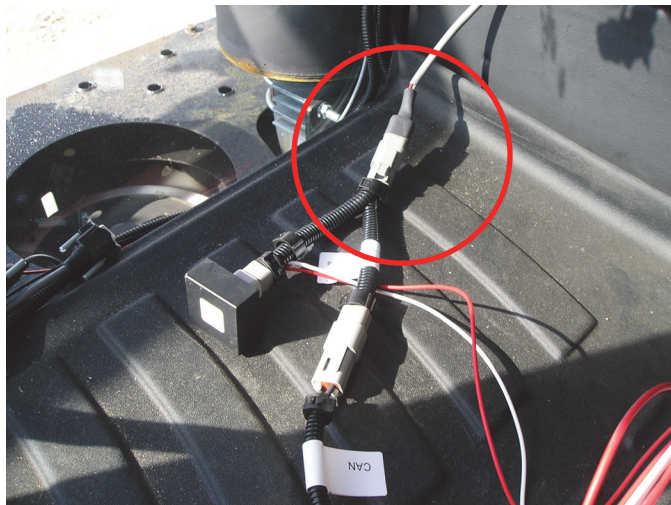

Note: If this is an existing system, you will need to remove one of the CAN terminators in order to add on this cable.


- c. Connect one connector on the other end of the selected CAN Tee Cable to the CAN connector on the SCS4400 console.




- d. Connect a CAN Terminator (P/N 063-0172-369) to the remaining open CAN connector near the SCS4400 console.




6. Connect the AccuBoom cable (P/N 115-1001-005) to the CAN bus system:
 - a. Determine the correct length of CAN Tee Cable needed between a convenient CAN connection and the CAN connector on the AccuBoom cable (P/N 115-1001-005).

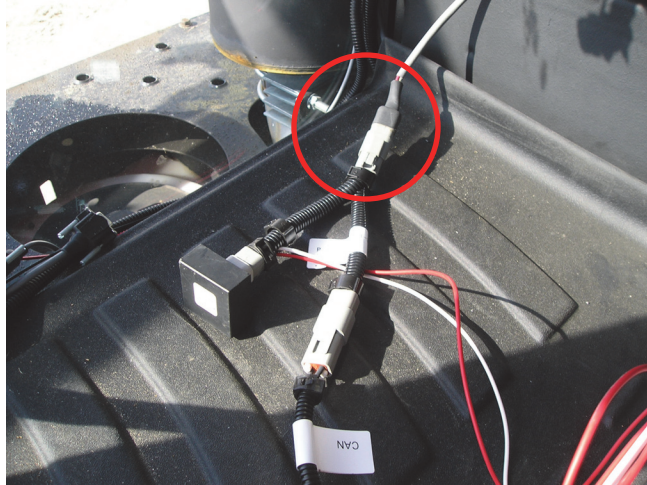

- b. Break the CAN connection and insert the selected CAN Tee cable.

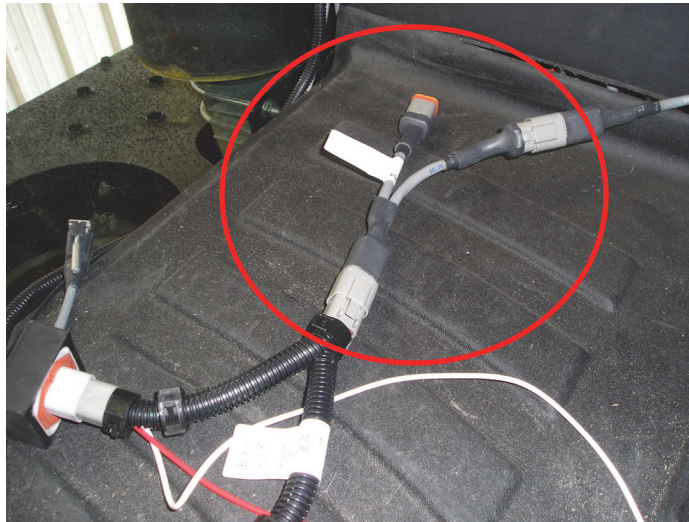

- c. Connect the CAN connector on the AccuBoom cable (P/N 115-1001-005) to the remaining open CAN connection on the selected CAN Tee Cable.

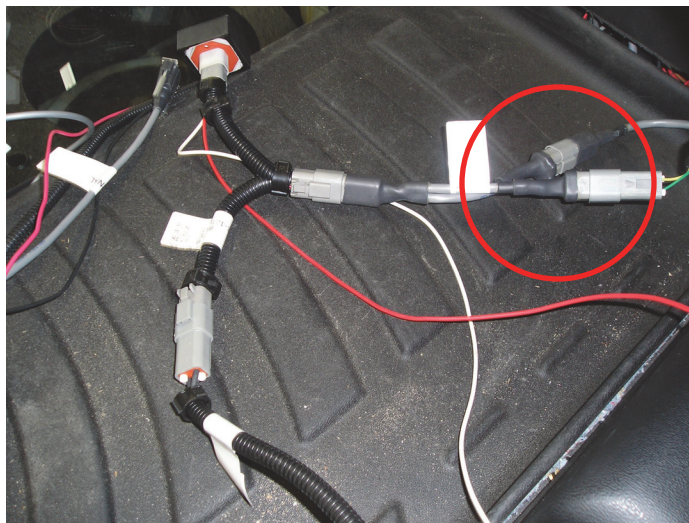

- 7. The AccuBoom installation is now complete.

NOTES:

CHAPTER

3

CAN INSTALLATION

If the machine you are working on does not currently have a Raven CAN system, you will need a Kit, CANbus, Terminators & Power Adapter “T” P/N 117-0159-923. This kit contains the CAN Cable Adapter Tee With Power P/N 115-0171-368 and two (2) CANBus Terminators P/N 063-0172-369. To install a Raven CAN system:

1. Connect CAN Tee to power and ground.
 - a. Locate a convenient source of power and ground near the control system.
 - b. Connect the power wire of the CAN Cable Adapter Tee With Power P/N 115-0171-368 to a source of clean 12 volt power.
 - c. Connect the ground wire from the CAN Cable Adapter Tee With Power P/N 115-0171-368 to a clean battery ground.



2. Connect the CAN bus to the Controller.
 - a. Connect CAN Terminator P/N 063-0172-369 to one connector on the Can Cable Adapter Tee With Power P/N 115-0171-368.

CAN Terminator



- b. Connect the second connector on the CAN Cable Adapter Tee With Power P/N 115-0171-368 to the CAN connector on the Envizio or Viper interface cable.




The CAN bus system is now installed and CAN nodes may be connected to it.

CHAPTER

4

SYSTEM TROUBLESHOOTING

The CAN AccuBoom Node P/N 063-0172-316 has additional features to allow the user to diagnose the AccuBoom system. The CAN AccuBoom node has a plastic window in the case that allows the user to view green diagnostic lights. The picture below shows the positioning and function of each of the LED lights.

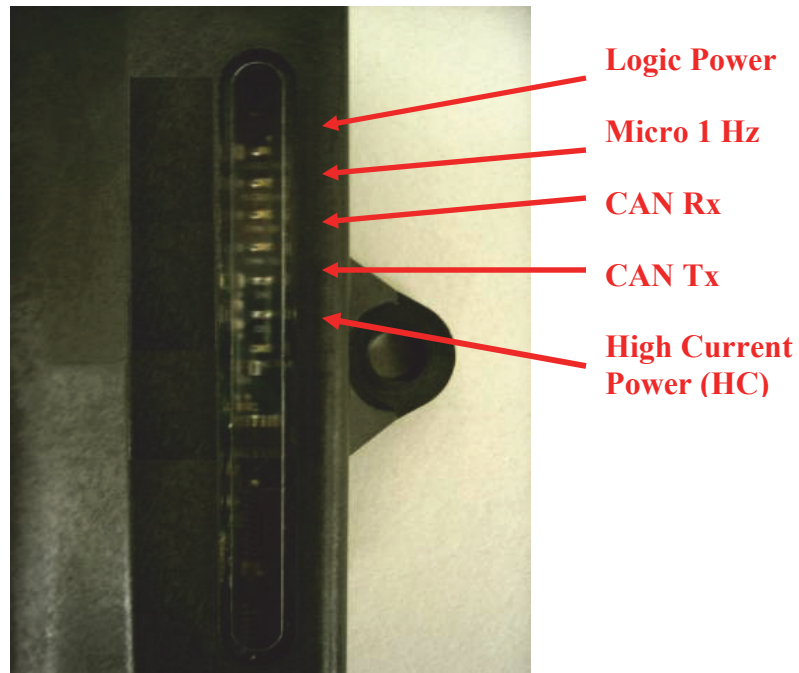

- **Logic Power:** Lit when 12VDC logic power is available at the node.
- **Micro 1 Hz:** Flashes at 1 Hz interval when processor is active.
- **CAN Rx:** Flashes when CAN messages are being received.
- **CAN Tx:** Flashes when CAN messages are being transmitted.
- **High Current Power:** Lit when High Current Power is applied to the node.

RAVEN

Limited Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

How Long is the Coverage Period?

Raven Applied Technology products are covered by this warranty for 12 months from the date of retail sale. In no case will the Limited Warranty period exceed 24 months from the date the product was issued by Raven Industries Applied Technology Division. This warranty coverage applies only to the original owner and is non-transferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries.

What Will Raven Industries Do?

Upon confirmation of the warranty claim, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

What is not Covered by this Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.



Extended Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

Do I Need to Register My Product to Qualify for the Extended Warranty?

Yes. Products/systems must be registered within 30 days of retail sale to receive coverage under the Extended Warranty. If the component does not have a serial tag, the kit it came in must be registered instead.

Where Can I Register My Product for the Extended Warranty?

To register, go online to www.ravenhelp.com and select Product Registration.

How Long is the Extended Warranty Coverage Period?

Raven Applied Technology products that have been registered online are covered for an additional 12 months beyond the Limited Warranty for a total coverage period of 24 months from the date of retail sale. In no case will the Extended Warranty period exceed 36 months from the date the product was issued by Raven Industries Applied Technology Division. This Extended Warranty coverage applies only to the original owner and is non-transferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries. In addition, the words "Extended Warranty" must appear on the box and all documentation if the failure is between 12 and 24 months from the retail sale.

What Will Raven Industries Do?

Upon confirmation of the product's registration for the Extended Warranty and the claim itself, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

What is Not Covered by the Extended Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. Cables, hoses, software enhancements, and remanufactured items are not covered by this Extended Warranty. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.