

R A V E N

AutoBoom™ Installation Manual



Miller Condor MD Series

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

| | | |
|---|--|-----------|
| Chapter 1 | <i>Important Safety Information</i> | 1 |
| Hydraulic Safety | | 2 |
| Electrical Safety | | 2 |
| Chapter 2 | <i>Introduction</i> | 3 |
| Preparing for Installation | | 3 |
| Recommendations | | 4 |
| Point of Reference | | 4 |
| Hydraulic Fittings | | 4 |
| Updates | | 5 |
| Chapter 3 | <i>PowerGlide</i> | 7 |
| PowerGlide Kit Contents | | 7 |
| Install the PowerGlide Hydraulic System | | 10 |
| Install Fittings on the AutoBoom Valve | | 11 |
| Mount the AutoBoom Valve | | 12 |
| Install Left and Right Cylinder Hoses | | 14 |
| PowerGlide Hydraulic Schematic | | 15 |
| Install the Gauge Wheels | | 16 |
| Gauge Wheel Mounting Locations | | 16 |
| Install the PowerGlide Wiring | | 17 |
| Connect the Harness to the Boom Function Controls | | 17 |
| Connect the Harness Cable to the Controller Cable | | 18 |
| Connect the Controller | | 18 |
| Connect the Power Leads | | 18 |
| PowerGlide Wiring Schematic | | 19 |
| Chapter 4 | <i>PowerGlide Plus</i> | 21 |
| PowerGlide Plus Kit Contents | | 21 |
| Install the PowerGlide Plus Hydraulic System | | 25 |
| Remove the Orifice Fittings | | 25 |
| Install Fittings on the AutoBoom Valve | | 28 |
| Mount the AutoBoom Valve | | 28 |
| Install Left and Right Cylinder Hoses | | 30 |
| PowerGlide Plus Hydraulic Schematic | | 32 |
| Install the Gauge Wheels | | 33 |
| Gauge Wheel Mounting Locations | | 33 |
| Install the PowerGlide Plus Wiring | | 34 |
| Install the AutoBoom Node | | 34 |
| Connect the Harness to the Boom Function Controls | | 34 |
| Connect the Harness Cable to the Controller Cable | | 35 |
| Connect the Controller (If Applicable) | | 35 |

Table of Contents

Connect the Computer (If Applicable) 36
Connect the Power Leads 36
PowerGlide Plus Wiring Schematics 37
AutoBoom Controller 37
Envizio Plus 38
SCS 4000/5000 39
Viper Pro & Envizio Pro 40

Chapter 5 UltraGlide 41

UltraGlide Kit Contents 41
Install the UltraGlide Hydraulic System 46
 Install Fittings on the AutoBoom Valve 46
 Mount the AutoBoom Valve 47
 Install Left and Right Cylinder Hoses 49
 UltraGlide Hydraulic Schematic 50
Install the UltraGlide Sensors 51
 Boom Sensor Mounting Locations 51
 Install the Sensor Mounting Brackets 51
 Mount the Boom Sensors 52
 Mount the Center Rack Sensor 54
 Connect the Sensor Cables 54
Install the Gauge Wheels - Optional 55
 Gauge Wheel Mounting Locations 55
Install the UltraGlide Wiring 56
 Install the AutoBoom Node 56
 Connect the Harness to the Boom Function Controls 56
 Install the Center Rack Control 58
 Connect the Harness Cable to the Sensors 58
 Connect the Harness Cable to the Controller Cable 58
 Connect the Controller (If Applicable) 59
 Connect the Computer (If Applicable) 59
 Connect the Power Leads 59
UltraGlide Wiring Schematics 60
 AutoBoom Controller 60
 Envizio Plus 61
 SCS 4000/5000 62
 Viper Pro & Envizio Pro 63

Chapter 6 Replacement Parts 65

Valves 65
 PowerGlide 65
 PowerGlide Plus and UltraGlide Valve 66
Wheels 66

| | |
|--------------------------|----|
| Sensors | 67 |
| Analog Boom Sensor | 67 |
| Center Sensor | 67 |

CHAPTER

1

Important Safety Information

NOTICE

Read this manual and the operation and safety instructions included with your implement and/or controller carefully before installing the AutoBoom™ system.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your Raven equipment, contact your local Raven dealer for support.
- Follow all safety labels affixed to the AutoBoom system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact your local Raven dealer.

When operating the machine after installing AutoBoom, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate AutoBoom or any agricultural equipment while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when AutoBoom is engaged.
- Disable AutoBoom when exiting from the operator's seat and machine.
- Do not drive the machine with AutoBoom enabled on any public road.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling AutoBoom when the safe working distance has been diminished.
- Ensure AutoBoom is disabled prior to starting any maintenance work on AutoBoom or the machine.

WARNING

- When starting the machine for the first time after installing AutoBoom, be sure that all persons stand clear, in case a hose has not been properly tightened.
- The machine must remain stationary and switched off, with the booms unfolded and supported while installation or maintenance is conducted.

CAUTION

Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on the hydraulic system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when opening a system that has been previously pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic fluid may be extremely hot and under high pressure. Caution must be exercised.
- Any work performed on the hydraulic system must be done in accordance with the machine manufacturer's approved maintenance instructions.
- When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure that precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will adversely reduce performance and possibly damage the AutoBoom hydraulic valve.

Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.

CHAPTER

2

Introduction

Congratulations on your purchase of the Raven AutoBoom system! This system is designed to provide automated boom height adjustment for agricultural equipment.

This manual applies to the following machines. For future reference, write your serial number in the space below.

MAKE: Miller Condor
MODEL: MD Series

FIGURE 1. Miller Condor MD Series



Note: *This manual contains the installation instructions for the PowerGlide, PowerGlide Plus, and UltraGlide systems. Be sure to identify which system you have and follow only the instructions for that system.*

Preparing for Installation

Before installing AutoBoom, park the machine where the ground is level, clean, and dry. Leave the machine turned off for the duration of the installation process.

During the installation process, follow good safety practices. Be sure to carefully read the instructions in this manual as you complete the installation process.

Recommendations

Raven Industries recommends the following best practices before installing or operating the AutoBoom system for the first time, at the start of the season, or when moving the AutoBoom system to another machine:

- Ensure the machine's hydraulic filters have been recently changed and there are no issues with the machine's hydraulic system (e.g., pump issues, faulty hydraulic motors, fine metal deposits in the hydraulic hoses, etc.).
- Operate each of the machine's boom hydraulic functions (i.e., tilt, fold, center rack, tongue extension, or other hydraulic valve functions) three times to ensure the machine's hydraulic valve is using fresh oil and debris is flushed from the hydraulic hoses, valves, and filters.
- Upon installation of the AutoBoom system, operate the boom and center rack raise/lower functions through the machine's manual control functions first before operating them via the AutoBoom controller/field computer to ensure the hydraulic system has been installed correctly and air is released from the system.

Raven Industries recommends the following best practices when installing the AutoBoom system.

- Use part numbers to identify the parts.
- Do not remove the plastic wrap from a part until it is necessary for installation.
- Do not remove plastic caps from a part until it is necessary for installation.

Tools Needed

The following tools are recommended for installation of the AutoBoom system:

- SAE standard-sized wrenches
- Cable ties
- Set of tools

Point of Reference

The instructions in this manual assume that you are standing behind the machine, looking toward the cab.

Hydraulic Fittings

This manual may reference the following types of hydraulic fittings:

- SAE O-ring fittings
- ORFS (O-Ring Face Seal) fittings
- JIC fittings

SAE O-ring fitting



ORFS fitting



JIC fitting



Updates

Software and manual updates are available on the Raven Applied Technology website:

<http://www.ravenhelp.com>

At Raven Industries, we strive to make your experience with our products as rewarding as possible. One way to improve this experience is to provide us with feedback on this manual.

Your feedback will help shape the future of our product documentation and the overall service we provide. We appreciate the opportunity to see ourselves as our customers see us and are eager to gather ideas on how we have been helping or how we can do better.

To serve you best, please send an e-mail with the following information to

techwriting@ravenind.com

- Miller Condor MD Series AutoBoom™ Installation Manual*
- Manual No. 016-0230-077 Rev. E*
- Any comments or feedback (include chapter or page numbers if applicable).*
- Let us know how long have you been using this or other Raven products.*

We will not share your email or any information you provide with anyone else. Your feedback is valued and extremely important to us.

Thank you for your time.

CHAPTER

3

PowerGlide

PowerGlide Kit Contents

This section contains a list of the components that are included in the PowerGlide AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

Note: *In addition to the following kit components, an axle kit is required for the operation of the PowerGlide AutoBoom system. For available kits and ordering information, contact your local Raven dealer.*

TABLE 1. PowerGlide Installation Kit (P/N 117-0230-077)





| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
| Not Pictured | Manual - Miller Condor MD Series AutoBoom Installation | 016-0230-077 | 1 |
|  | Valve - PowerGlide AutoBoom | 063-0131-127 | 1 |
|  | Bracket - Hydraulic Valve Mounting | 107-0171-619 | 1 |
|  | Bracket - Nitro Weldment Receiver | 116-0159-542 | 2 |
|  | Wheel | 322-0131-008 | 2 |

TABLE 1. PowerGlide Installation Kit (P/N 117-0230-077)

| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
|  | Cable - Metripack Boom Sense Adapter | 115-0230-013 | 4 |
|  | Fitting - 3/4" Hex Plug | 333-0012-211 | 1 |
|  | U-Bolt - 5-1/16" W x 6" L x 7/16" Thread | 107-0171-603 | 4 |
|  | U-Bolt - 4-1/16" W x 5" L x 7/16" Thread | 107-0171-604 | 4 |
|  | U-Bolt - 3-1/16" W x 4" L x 3/8" Thread | 107-0171-608 | 4 |
|  | U-Bolt - 4" W x 4" L x 3/8" Thread | 107-0171-796 | 2 |
|  | Bolt - 5/16"-18 x 7/8" Hex | 311-0052-104 | 4 |
|  | Bolt - 1/2"-13 x 1-1/2" SS Hex | 311-0058-186 | 4 |
|  | Nut - 1/2"-13 Zinc Hex | 312-1001-043 | 4 |
|  | Nut - 3/8"-16 Zinc Flanged Lock | 312-1001-164 | 12 |




TABLE 1. PowerGlide Installation Kit (P/N 117-0230-077)

| Picture | Item Description | Part Number | Qty. |
|---|----------------------------------|--------------|------|
|  | Nut - 7/16"-16 Zinc Flanged Lock | 312-1001-165 | 8 |
|  | Washer - 5/16" Zinc Plated Lock | 313-1000-019 | 4 |


TABLE 2. Hydraulic Kit (P/N 117-0134-077)

| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
|  | Fitting - 3/4" ORFS M/M/F Swivel Run Tee Adapter | 333-0012-028 | 2 |
|  | Fitting - 13/16" ORFS M/F 90° Swivel Elbow | 333-0012-067 | 2 |
|  | Fitting - 13/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter | 333-0012-082 | 2 |
|  | Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) Straight Adapter | 333-0012-168 | 2 |
|  | Fitting - 11/16" Hex 9/16" SAE O-Ring (M) | 333-0012-194 | 2 |
|  | Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) 90° Elbow | 333-0012-229 | 2 |
|  | Hydraulic Hose - 3/4" ORFS to 3/4" ORFS - 40" | 214-1000-529 | 4 |

TABLE 3. PowerGlide Wiring Kit (P/N 117-0137-022)


| Picture | Item Description | Part Number | Qty. |
|---|---|--------------|------|
| Not Pictured | Manual - PowerGlide Calibration & Operation | 016-0130-061 | 1 |
|  | Controller - AutoBoom PowerGlide | 063-0130-011 | 1 |
|  | Cable - AutoBoom Controller | 115-0230-002 | 1 |
|  | Cable - AutoBoom Harness | 115-0230-003 | 1 |

Install the PowerGlide Hydraulic System



⚠ WARNING


The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.



⚠ CAUTION

When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.

Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.

| | |
|---|--------|
|  | NOTICE |
| <p>The appearance of the AutoBoom hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.</p> | |


Install Fittings on the AutoBoom Valve

Before mounting the AutoBoom valve on the machine, install the proper fittings in the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.

| Fitting | Part Number | Port |
|--|--------------|--------|
| Fitting - 13/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter | 333-0012-082 | LC, RC |
| Fitting - 3/4" Hex Plug | 333-0012-211 | EF |
| Fitting - 11/16" Hex 9/16" SAE O-Ring (M) | 333-0012-194 | LV, RV |
| Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) Straight Adapter | 333-0012-168 | P, T |
| Fitting - 13/16" ORFS M/F 90° Swivel Elbow | 333-0012-067 | P, T |

Mount the AutoBoom Valve

FIGURE 1. AutoBoom Valve Mounted on the Valve Mounting Plate

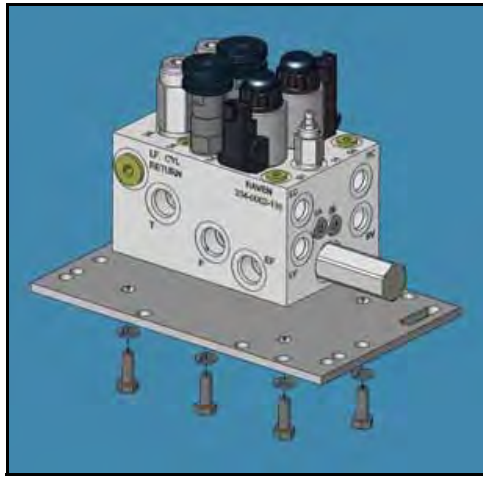


1. Secure the PowerGlide AutoBoom valve (P/N 063-0131-127) to the valve mounting bracket (P/N 107-0171-619) using four 5/16" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

FIGURE 2. AutoBoom Valve Mounted on the Sprayer




2. Secure the mounting bracket on the center rack using two 4" W x 4" L x 3/8" thread U-bolts (P/N 107-0171-796) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Install the Pressure and Tank Hoses



⚠ WARNING

Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.



⚠ CAUTION

When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.

Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valves.

FIGURE 3. Pressure and Tank Hoses Installed



1. Locate the pressure and tank port plugs on the machine's hydraulic valve.

Note: *The plugs are located on the side opposite from the pressure and tank hoses on the hydraulic valve.*

2. Remove the port plugs from the hydraulic valve.
3. Install 13/16" ORFS (M) to 3/4" SAE O-ring (M) 90° elbow fittings (P/N 333-0012-229) in the pressure and tank ports.
4. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the installed elbow fitting in the pressure port of the machine's hydraulic valve.
5. Connect the other end of the installed hydraulic hose to the fitting installed in Port P on the AutoBoom valve.

6. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the installed elbow fitting in the tank port of the machine's hydraulic valve.
7. Connect the other end of the installed hydraulic hose to the fitting installed in Port T on the AutoBoom valve.


Install Left and Right Cylinder Hoses

FIGURE 4. Left and Right Cylinder Hoses Installed



1. Disconnect the machine's left and right tilt hoses from the machine's hydraulic valve.
2. Install 13/16" ORFS (M) to 9/16" SAE O-ring (M) swivel run tee adapter fittings (P/N 333-0012-028) in the L Up and R Up ports of the machine's hydraulic valve.
3. Connect the machine's left tilt hose to the opposite end of the installed tee fitting in the L Up port.
4. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the 90° end of the installed tee fitting.
5. Connect the other end of the installed hydraulic hose to the fitting installed in Port LC on the AutoBoom valve.
6. Connect the machine's right tilt hose to the opposite end of the installed tee fitting in the R Up port.
7. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the 90° end of the installed tee fitting.
8. Connect the other end of the installed hydraulic hose to the fitting installed in Port RC on the AutoBoom valve.

PowerGlide Hydraulic Schematic

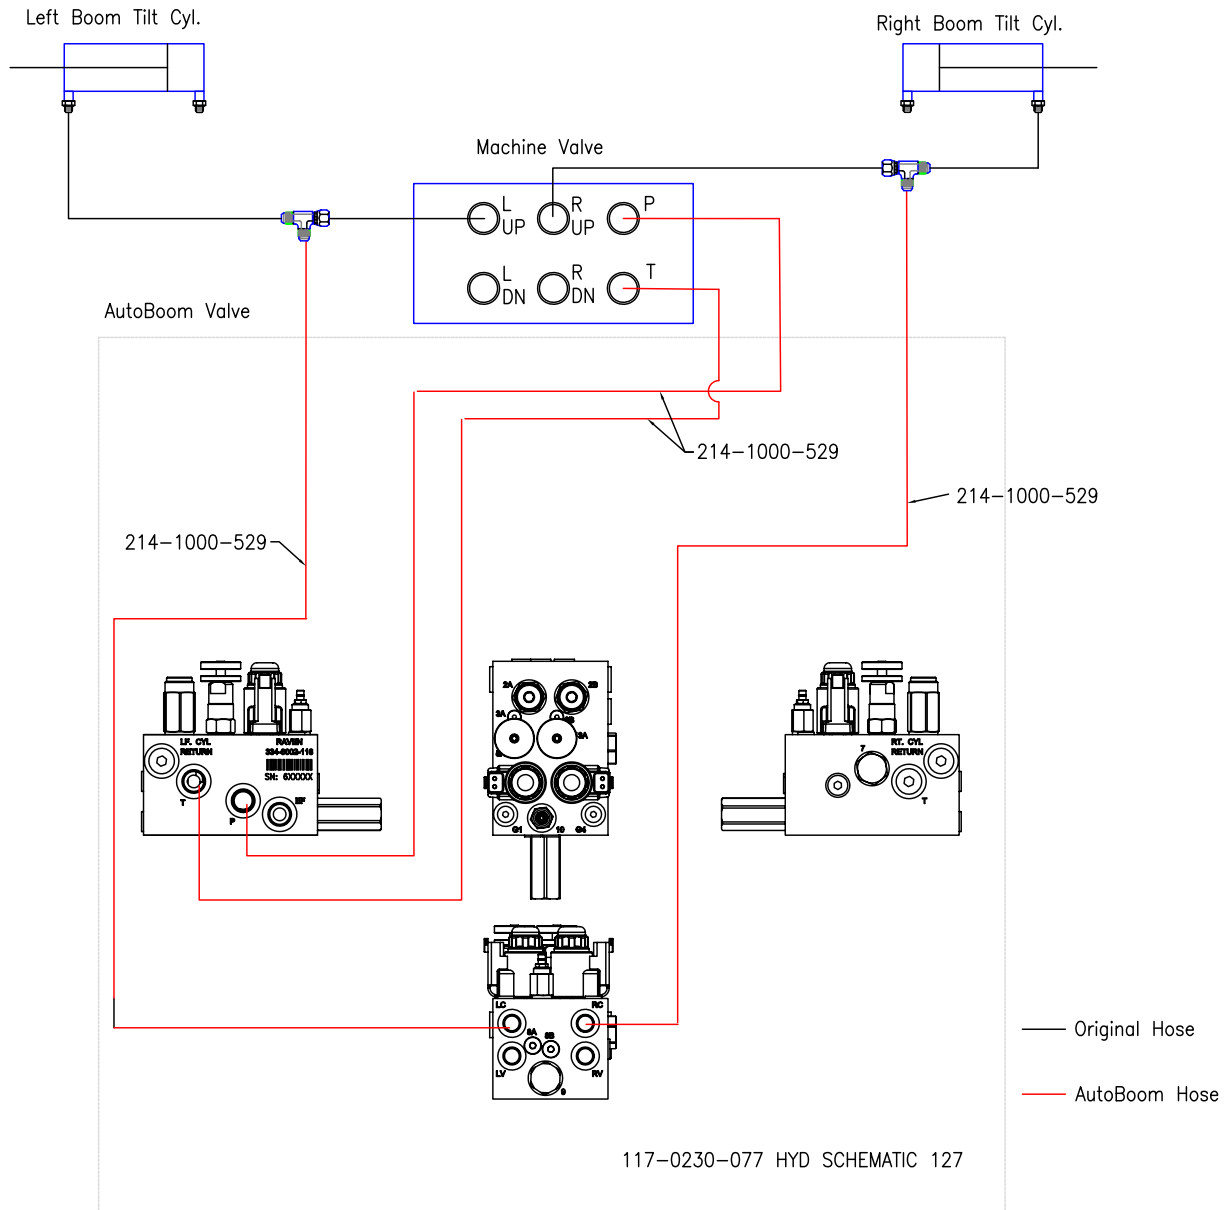


Install the Gauge Wheels

Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside the boom breakaway.

Mount the Gauge Wheels.

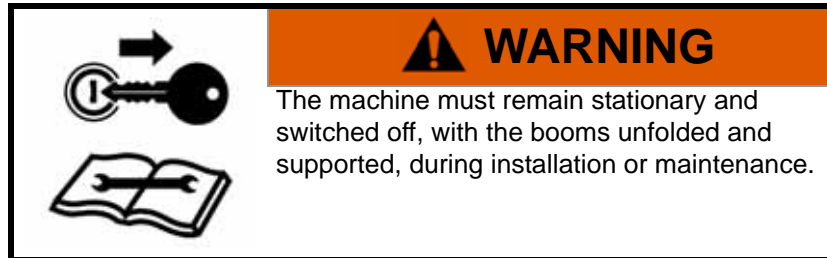

Note: The appearance of the wheel axles may vary, depending on the wheel kit that was ordered.


FIGURE 5. Gauge Wheel Installed



1. Remove the nuts from the right wheel axle.
2. Place the wheel (P/N 322-0131-008) on the right wheel axle.
3. Reinstall the lug nuts on the wheel axle to secure the wheel.
4. Mount the right wheel receiver bracket (P/N 116-0159-542) to the front of the right boom using two U-bolts (P/N 107-0171-603, 107-0171-604, or 107-0171-608) and four nuts (P/N 312-1001-164 or 312-1001-165) appropriate for the size of the machine's booms.
5. Insert the right wheel axle into the right wheel receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so) and the wheel faces away from the machine.
6. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2" zinc hex nuts (P/N 312-1001-043).
7. Repeat the steps above to install the left wheel.

Install the PowerGlide Wiring

Wiring Connections

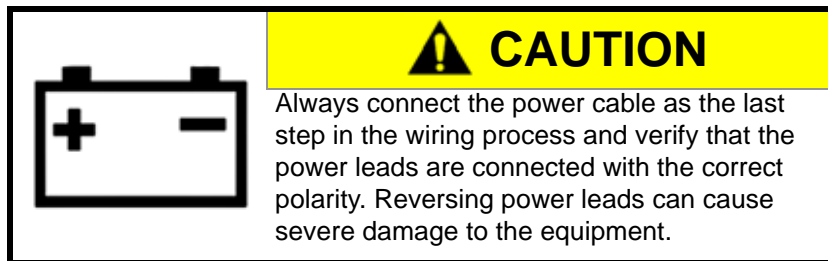

For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

Connect the Harness to the Boom Function Controls

1. On the harness cable (P/N 115-0230-003), locate the LEFT SOLENOID connector and connect it to Port 4A on the AutoBoom valve.
2. Connect the RIGHT SOLENOID connector to Port 4B on the AutoBoom valve.

FIGURE 6. Machine's Boom Function Coils



3. Locate the machine's boom function coils on the hydraulic valve.
4. Disconnect the connector from the machine's left tilt up coil.
5. Install a metripack boom sense adapter cable (P/N 115-0230-013) between the coil and the machine's coil connector.
6. Connect boom sense adapter cables between the left tilt down, right tilt up, and right tilt down coils and coil connectors.
7. On the harness cable, locate the LEFT SOLENOID SENSE connectors.
8. Connect the UP connector to the left tilt up coil via the installed boom sense adapter cable.
9. Connect the unlabeled LEFT SOLENOID SENSE connector to the left tilt down coil via the installed boom sense adapter cable.
10. On the harness cable, locate the RIGHT SOLENOID SENSE connectors.
11. Connect the UP connector to the right tilt up coil via the installed boom sense adapter cable.

12. Connect the unlabeled RIGHT SOLENOID SENSE connector to the left tilt down coil via the installed boom sense adapter cable.

Connect the Harness Cable to the Controller Cable

1. Route the harness cable (P/N 115-0230-003) toward the machine's cab.
2. Connect the harness cable to the controller cable (P/N 115-0230-002).
3. Tighten the connector screw cap to secure the connection.

Note: Be sure to allow enough slack in the harness cable to allow for boom racking.

Connect the Controller

FIGURE 7. Controller Connectors




1. Route the controller cable (P/N 115-0230-002) into the right side of the machine's cab.
2. Locate the two controller connectors. Connect them to the AutoBoom controller (P/N 063-0130-011).

Note: The AutoBoom controller should be mounted in the machine's cab so that the machine operator has easy access to it.

Connect the Power Leads

1. Locate the power cable that has the red and white power leads at one end.
2. Disconnect the machine's connectors from the battery terminals.
3. Install the red power lead on the positive battery terminal and reinstall the machine's battery connector.
4. Install the white power lead on the negative battery terminal and reinstall the machine's battery connector.

PowerGlide Wiring Schematic

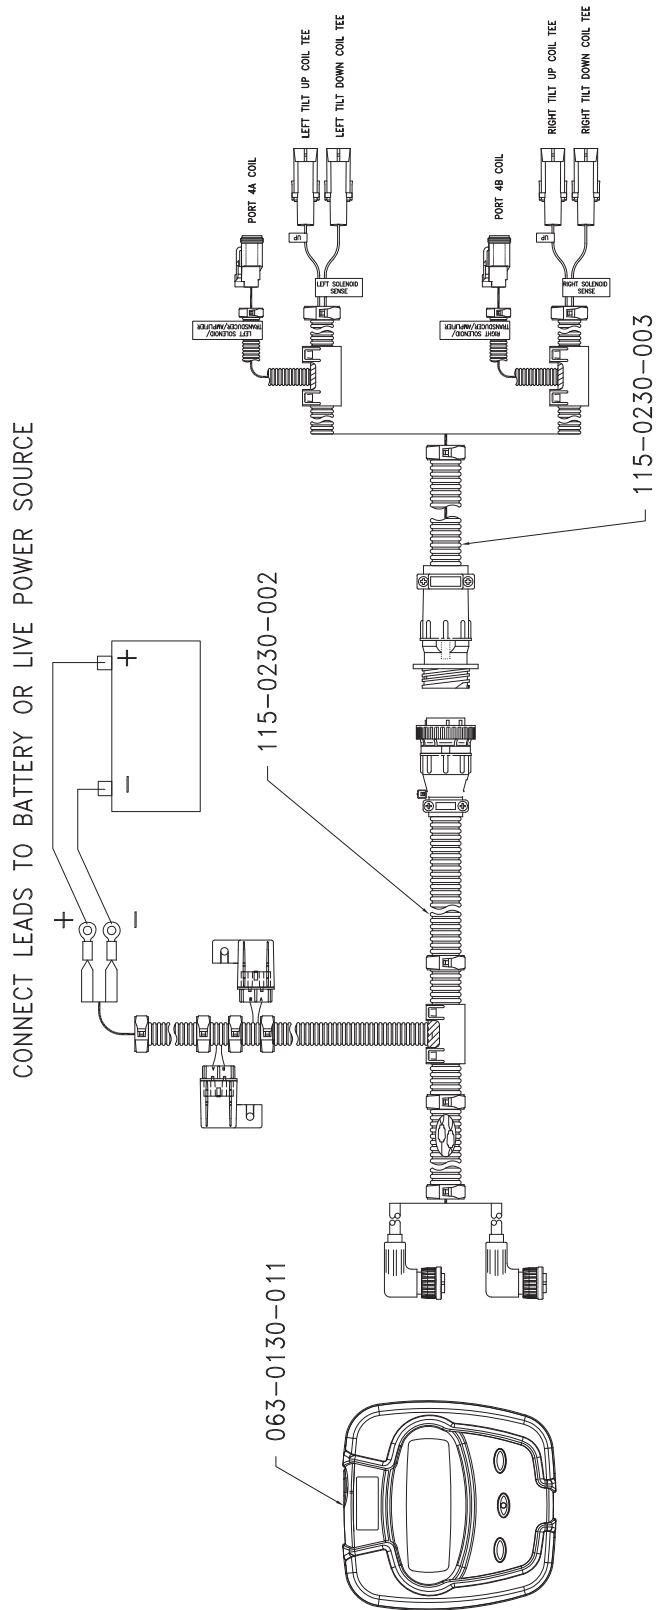

CHAPTER

4

PowerGlide Plus

PowerGlide Plus Kit Contents

This section contains a list of the components that are included in the PowerGlide Plus AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

TABLE 1. PowerGlide Plus Installation Kit (P/N 117-0231-077)






| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
| Not Pictured | Manual - Miller Condor MD Series AutoBoom Installation | 016-0230-077 | 1 |
|  | Valve - PowerGlide Plus AutoBoom | 063-0131-124 | 1 |
|  | Bracket- Hydraulic Valve Mounting | 107-0171-619 | 1 |
|  | Cable - Metripack Boom Sense Adapter | 115-0230-013 | 4 |
|  | U-Bolt - 4" W x 4" L x 3/8" Thread | 107-0171-796 | 2 |
|  | Bolt - 5/16"-18 x 7/8" Hex | 311-0052-104 | 4 |

TABLE 1. PowerGlide Plus Installation Kit (P/N 117-0231-077)

| Picture | Item Description | Part Number | Qty. |
|---|---------------------------------|--------------|------|
|  | Nut - 3/8"-16 Zinc Flanged Lock | 312-1001-164 | 4 |
|  | Washer - 5/16" Zinc Plated Lock | 313-1000-019 | 4 |

TABLE 2. Hydraulic Kit (P/N 117-0134-077)

| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
|  | Fitting - 3/4" ORFS M/M/F Swivel Run Tee Adapter | 333-0012-028 | 2 |
|  | Fitting - 13/16" ORFS M/F 90° Swivel Elbow | 333-0012-067 | 2 |
|  | Fitting - 13/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter | 333-0012-082 | 2 |
|  | Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) Straight Adapter | 333-0012-168 | 2 |
|  | Fitting - 11/16" Hex 9/16" SAE O-Ring (M) | 333-0012-194 | 2 |
|  | Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) 90° Elbow | 333-0012-229 | 2 |
|  | Hydraulic Hose - 3/4" ORFS to 3/4" ORFS - 40" | 214-1000-529 | 4 |

TABLE 3. PowerGlide Plus Wheel Kit (P/N 117-0133-004)

| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
|  | Axle Assembly - Right Cushioned AutoBoom | 063-0131-585 | 1 |
|  | Axle Assembly - Left Cushioned AutoBoom | 063-0131-590 | 1 |
|  | Bracket - Nitro Weldment | 116-0159-542 | 2 |
|  | Bracket - Hub Retainer | 107-0171-617 | 2 |
|  | Wheel | 322-0131-008 | 2 |
|  | U-Bolt - 5-1/16" x 6" L x 7/16" Thread | 107-0171-603 | 4 |
|  | U-Bolt - 4-1/16" W x 5" L x 7/16" Thread | 107-0171-604 | 4 |
|  | U-Bolt - 3-1/16" W x 4" L x 3/8" Thread | 107-0171-608 | 4 |
|  | Bolt - 1/2"-13 x 1-1/2" SS Hex | 311-0058-186 | 4 |
|  | Nut - 1/2"-13 Zinc Hex | 312-1001-043 | 4 |

TABLE 3. PowerGlide Plus Wheel Kit (P/N 117-0133-004)








| Picture | Item Description | Part Number | Qty. |
|---|----------------------------------|--------------|------|
|  | Nut - 3/8"-16 Zinc Flanged Lock | 312-1001-164 | 8 |
|  | Nut - 7/16"-16 Zinc Flanged Lock | 312-1001-165 | 8 |


TABLE 4. PowerGlide Plus Wiring Kit (P/N 117-0137-023)

| Picture | Item Description | Part Number | Qty. |
|---|---|--------------|------|
| Not Pictured | Manual - AutoBoom Calibration & Operation | 016-0130-062 | 1 |
|  | Node - PowerGlide Plus AutoBoom | 063-0130-010 | 1 |
|  | Cable - Harness | 115-0230-045 | 1 |
|  | Cable - Power/CAN Controller | 115-0230-007 | 1 |

Install the PowerGlide Plus Hydraulic System

| | |
|---|--|
|  | <p style="text-align: center;">⚠ WARNING</p> <p>The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.</p> |
|---|--|

| | |
|---|--|
|  | <p style="text-align: center;">⚠ CAUTION</p> <p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.</p> <p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.</p> |
|---|--|

| | |
|---|--|
|  | <p style="text-align: center;">NOTICE</p> <p>The appearance of the AutoBoom hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.</p> |
|---|--|

Remove the Orifice Fittings

Before populating the hydraulic fittings on the AutoBoom valve, it is necessary to remove orifice fittings from the valve in the PowerGlide Plus system. Failure to remove these fittings from the valve will restrict the down speed of the booms when the system is enabled.

FIGURE 1. Port 3A and 3B Location




1. Locate Ports 3A and 3B on the AutoBoom valve (P/N 063-0131-124).

FIGURE 2. Coil Removed from the AutoBoom Valve



2. Remove the coils from the solenoids near Ports 3A and 3B to gain easy access to those ports.

FIGURE 3. Port Plugs Removed from the AutoBoom Valve

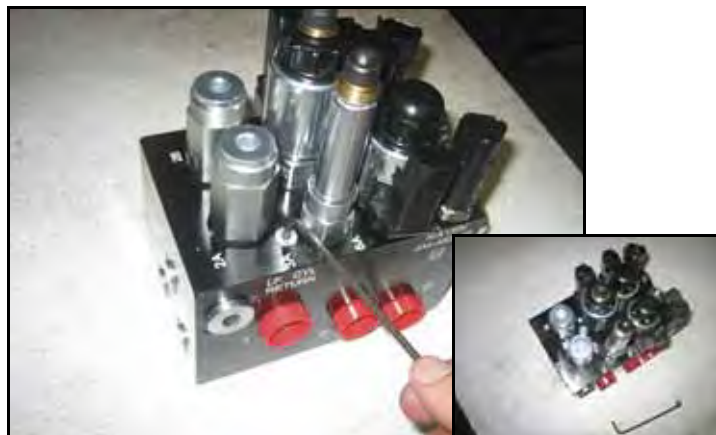

3. Use an Allen wrench to remove the plugs from Ports 3A and 3B.

FIGURE 4. Orifice Fitting Removed from the AutoBoom Valve



Orifice Fitting
Removed - Keep for
Future Use

- Remove the orifice fittings from Ports 3A and 3B.

Important: *Tip the AutoBoom valve on its side and use the Allen wrench to remove the orifice from the cavity, taking care not to let the fitting fall into the valve.*

FIGURE 5. Port Plug Reinstalled on the AutoBoom Valve



- Use the Allen wrench to reinstall the port plugs on Ports 3A and 3B of the AutoBoom valve.

FIGURE 6. Coil Reinstalled on the AutoBoom Valve



- Reinstall the coils on the solenoids of the AutoBoom valve.


Install Fittings on the AutoBoom Valve

Before mounting the AutoBoom valve on the machine, install the proper fittings in the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.

| Fitting | Part Number | Port |
|--|--------------|--------|
| Fitting - 13/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter | 333-0012-082 | LC, RC |
| Fitting - 11/16" Hex 9/16" SAE O-Ring (M) | 333-0012-194 | LV, RV |
| Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) Straight Adapter | 333-0012-168 | P, T |
| Fitting - 13/16" ORFS M/F 90° Swivel Elbow | 333-0012-067 | P, T |


Mount the AutoBoom Valve

FIGURE 7. AutoBoom Valve Mounted on the Valve Mounting Plate

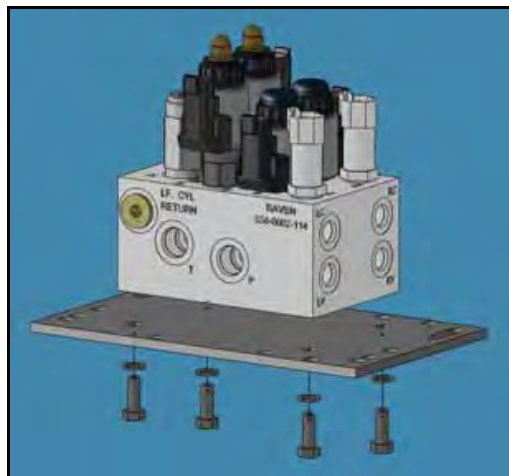


1. Secure the PowerGlide Plus AutoBoom valve (P/N 063-0131-124) to the valve mounting bracket (P/N 107-0171-619) using four 5/16" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

FIGURE 8. AutoBoom Valve Mounted on the Sprayer

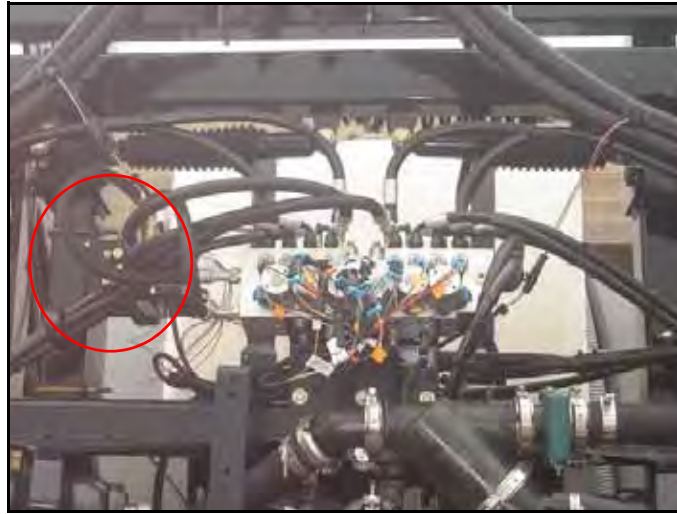


- Secure the mounting bracket on the center rack using two 4" W x 4" L x 3/8" thread U-bolts (P/N 107-0171-796) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Install the Pressure and Tank Hoses



⚠ WARNING

Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.




⚠ CAUTION

When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.

Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valves.

FIGURE 9. Pressure and Tank Hoses Installed

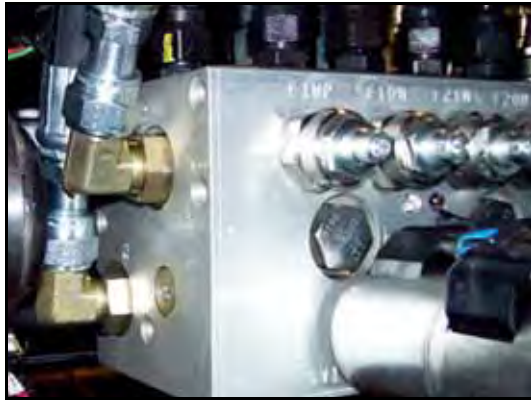

1. Locate the pressure and tank port plugs on the machine's hydraulic valve.

Note: *The plugs are located on the side opposite from the pressure and tank hoses on the hydraulic valve.*

2. Remove the port plugs from the hydraulic valve.
3. Install 13/16" ORFS (M) to 3/4" SAE O-ring (M) 90° elbow fittings (P/N 333-0012-229) in the pressure and tank ports.
4. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the installed elbow fitting in the pressure port of the machine's hydraulic valve.
5. Connect the other end of the installed hydraulic hose to the fitting installed in Port P on the AutoBoom valve.
6. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the installed elbow fitting in the tank port of the machine's hydraulic valve.
7. Connect the other end of the installed hydraulic hose to the fitting installed in Port T on the AutoBoom valve.

Install Left and Right Cylinder Hoses

FIGURE 10. Left and Right Cylinder Hoses Installed



1. Disconnect the machine's left and right tilt hoses from the machine's hydraulic valve.
2. Install 13/16" ORFS (M) to 9/16" SAE O-ring (M) swivel run tee adapter fittings (P/N 333-0012-028) in the L Up and R Up ports of the machine's hydraulic valve.
3. Connect the machine's left tilt hose to the opposite end of the installed tee fitting in the L Up port.

4. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the 90° end of the installed tee fitting.
5. Connect the other end of the installed hydraulic hose to the fitting installed in Port LC on the AutoBoom valve.
6. Connect the machine's right tilt hose to the opposite end of the installed tee fitting in the R Up port.
7. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the 90° end of the installed tee fitting.
8. Connect the other end of the installed hydraulic hose to the fitting installed in Port RC on the AutoBoom valve.




Install the Gauge Wheels

Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside the boom breakaway.

Mount the Gauge Wheels

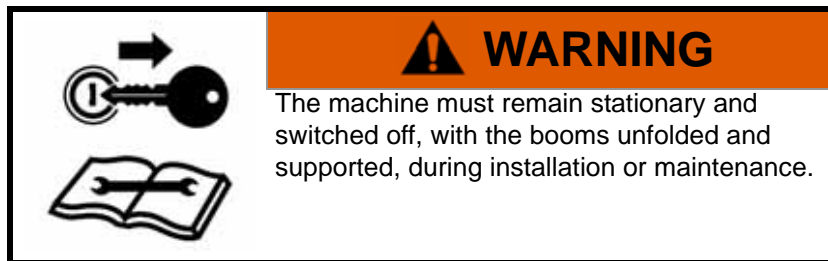

Note: The appearance of the wheel axles may vary.


FIGURE 11. Gauge Wheel Installed



1. Remove the nuts from the right wheel axle (P/N 063-0131-585).
2. Place the wheel (P/N 322-0131-008) on the right wheel axle.
3. Align and place the hub retainer bracket (P/N 107-0171-617) over the wheel.
4. Reinstall the lug nuts on the wheel axle to secure the wheel and hub retainer bracket.
5. Mount the right wheel receiver bracket (P/N 116-0159-542) to the front of the right boom using two U-bolts (P/N 107-0171-603, 107-0171-604, or 107-0171-608) and four nuts (P/N 312-1001-164 or 312-1001-165) appropriate for the size of the machine's booms.
6. Insert the right wheel axle into the right wheel receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so) and the wheel faces away from the machine.
7. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2" zinc hex nuts (P/N 312-1001-043).
8. Repeat the steps above to install the left wheel.

Install the PowerGlide Plus Wiring

Wiring Connections

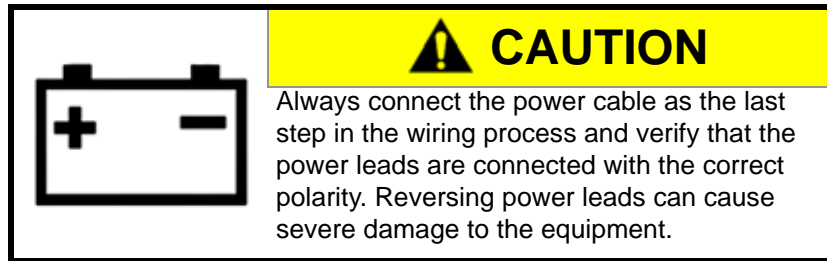

For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

Install the AutoBoom Node

FIGURE 12. PowerGlide Plus AutoBoom Node Installed



1. Mount the AutoBoom node (P/N 063-0130-010) to the machine's center rack within close proximity (3 feet/1 meter) to the AutoBoom node.

Note: Position the node so that the cable connectors face down.

2. Insert the large, rectangular node connectors on the AutoBoom harness cable (P/N 115-0230-045) into the correct ports of the AutoBoom node.
3. Tighten the bolt on the node connector to secure the connection.

Connect the Harness to the Boom Function Controls

1. Locate the LEFT PRESS (PORT G1) and RIGHT PRESS (PORT G4) connectors on the harness cable (P/N 115-0230-052).
2. Route the connectors to the AutoBoom valve (P/N 063-0131-124).
3. Connect the LEFT PRESS (PORT G1) connector to Port G1 on the AutoBoom valve.
4. Connect the RIGHT PRESS (PORT G4) connector to Port G4 on the AutoBoom valve.
5. Locate the LEFT SOLENOID (PORT 4A) and RIGHT SOLENOID (PORT 4B) connectors on the harness cable.

6. Connect the LEFT SOLENOID (PORT 4A) connector to Port 4A on the AutoBoom valve.
7. Connect the RIGHT SOLENOID (PORT 4B) connector to Port 4B on the AutoBoom valve.
8. Locate the LEFT PROP (PORT 5A) and RIGHT PROP (PORT 13A) connectors on the harness cable.
9. Connect the LEFT PROP (PORT 5A) connector to Port 5A on the AutoBoom valve.
10. Connect the RIGHT PROP (PORT 13A) connector to Port 13A on the AutoBoom valve.

FIGURE 13. Machine's Boom Function Coils



11. Locate the machine's boom function coils on the hydraulic valve.
12. Disconnect the connector from the machine's left tilt up coil.
13. Install a metripack boom sense adapter cable (P/N 115-0230-013) between the coil and the machine's coil connector.
14. Connect boom sense adapter cables between the left tilt down, right tilt up, and right tilt down coils and coil connectors.
15. On the harness cable, locate the LEFT SOLENOID SENSE connectors.
16. Connect the UP connector to the left tilt up coil via the installed boom sense adapter cable.
17. Connect the unlabeled LEFT SOLENOID SENSE connector to the left tilt down coil via the installed boom sense adapter cable.
18. On the harness cable, locate the RIGHT SOLENOID SENSE connectors.
19. Connect the UP connector to the right tilt up coil via the installed boom sense adapter cable.
20. Connect the unlabeled RIGHT SOLENOID SENSE connector to the left tilt down coil via the installed boom sense adapter cable.

Connect the Harness Cable to the Controller Cable

1. Route the harness cable (P/N 115-0230-045) toward the machine's cab.
2. Connect the harness cable to the controller cable (P/N 115-0230-007).
3. Tighten the connector cap to secure the connection.

Note: Be sure to allow enough slack in the harness cable to allow for boom racking.

Connect the Controller (If Applicable)

1. Route the controller cable (P/N 115-0230-007) into the right side of the machine's cab.

2. Locate the two controller connectors. Connect them to the AutoBoom controller (P/N 063-0130-021).

Note: *The AutoBoom controller should be mounted in the machine's cab so that the machine operator has easy access to it.*

Connect the Computer (If Applicable)


Refer to the Installation & Operation Manual and the appropriate wiring schematic beginning on page 37 for installation and wiring instructions for your specific field computer.

Connect the Power Leads


1. Locate the power cable that has the red and white power leads at one end.
2. Disconnect the machine's connectors from the battery terminals.
3. Install the red power lead on the positive battery terminal and reinstall the machine's battery connector.
4. Install the white power lead on the negative battery terminal and reinstall the machine's battery connector.

PowerGlide Plus Wiring Schematics


AutoBoom Controller

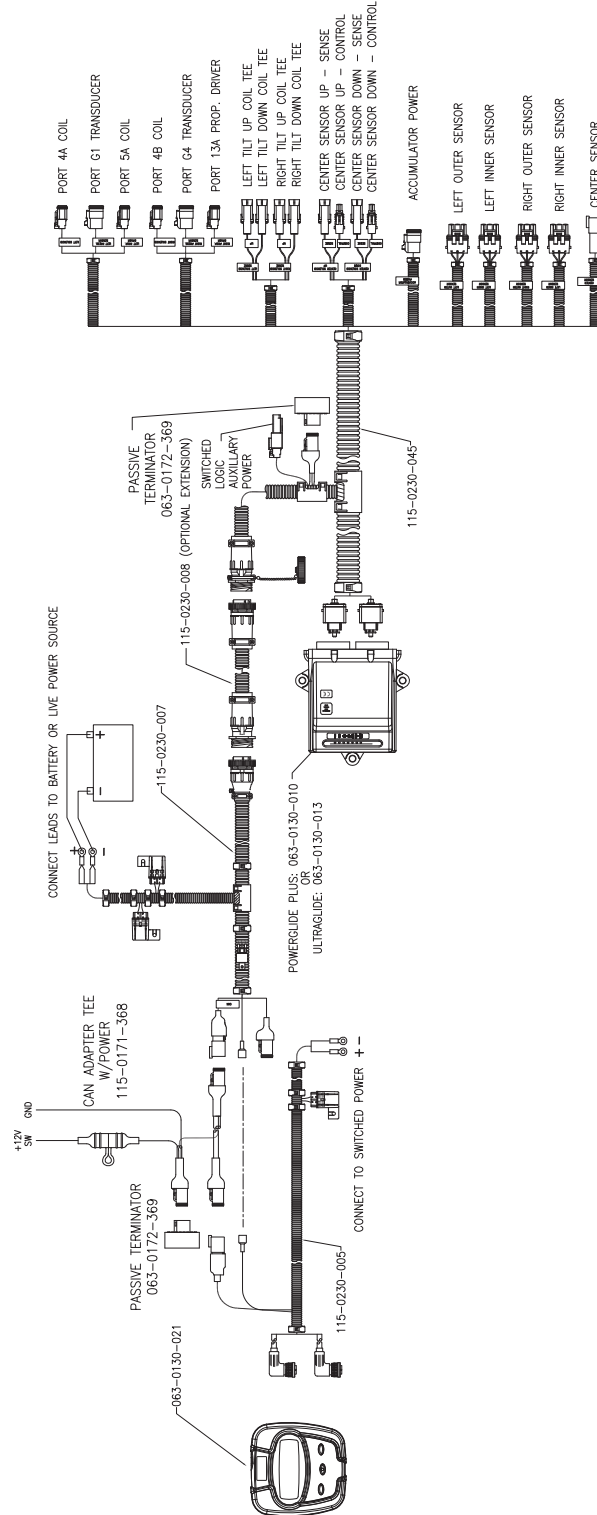

Envizio Plus

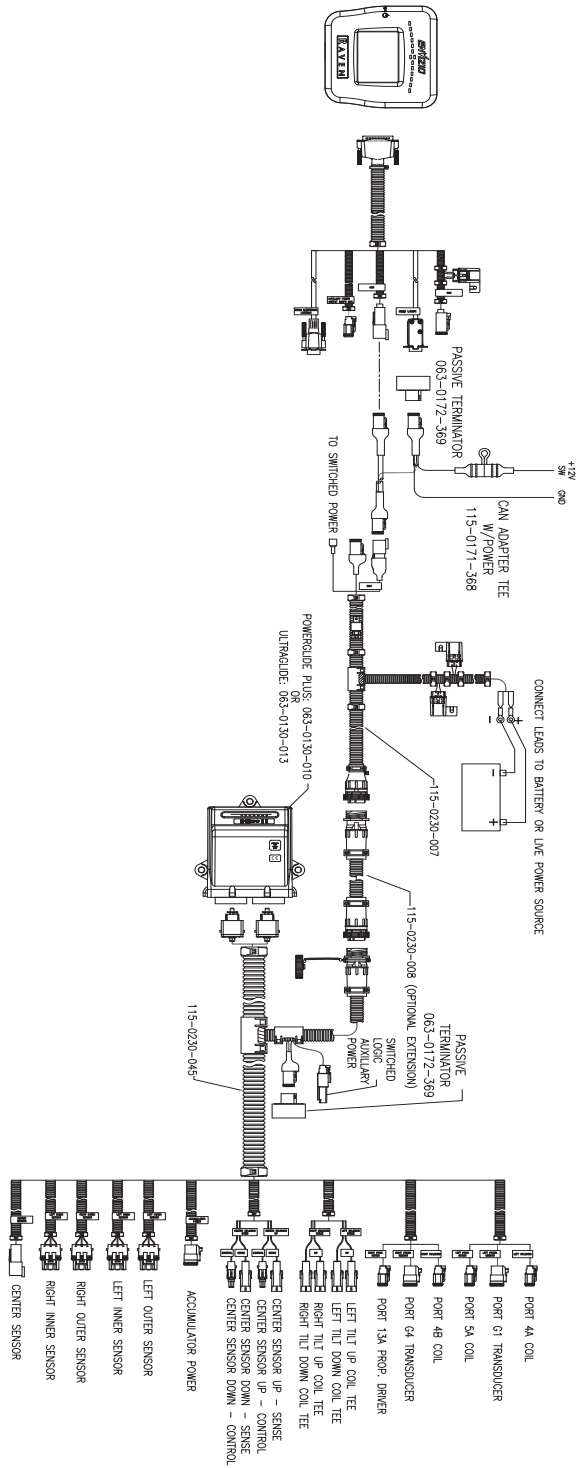

Viper Pro & Envizio Pro

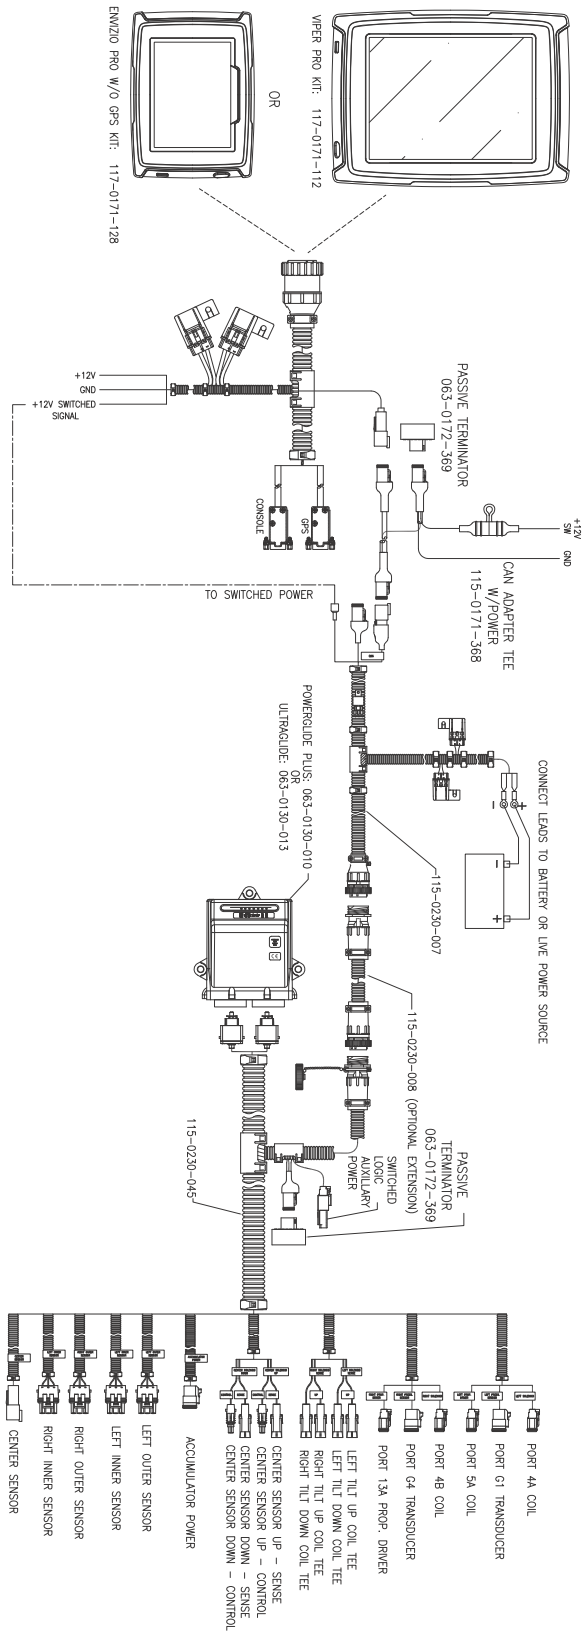

CHAPTER

5

UltraGlide

UltraGlide Kit Contents

This section contains a list of the components that are included in the UltraGlide AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

TABLE 1. UltraGlide Installation Kit (P/N 117-0232-077)






| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
| Not Pictured | Manual - Miller Condor MD Series AutoBoom Installation | 016-0230-077 | 1 |
|  | Valve - UltraGlide AutoBoom | 063-0131-124 | 1 |
|  | Bracket - Hydraulic Block Mounting | 107-0171-619 | 1 |
|  | Sensor - Center Ultrasonic | 063-0130-018 | 1 |
|  | Sensor - Analog Ultrasonic | 063-0130-026 | 2 |
|  | Cable - Metripack Boom Sense Adapter | 115-0230-013 | 4 |

TABLE 1. UltraGlide Installation Kit (P/N 117-0232-077)








| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
|  | Cable - Metripack Center Rack Control Boom Sense Adapter | 115-0230-035 | 2 |
|  | U-Bolt - 3-1/16" W x 4" L x 3/8" Thread | 107-0171-608 | 4 |
|  | U-Bolt - 4" W x 4" L x 3/8" Thread | 107-0171-796 | 2 |
|  | U-Bolt - 1-1/2" W x 2-1/2" L x 3/8" Thread | 435-3003-047 | 2 |
|  | Bolt - 5/16"-18 x 7/8" Hex | 311-0052-104 | 4 |
|  | Nut - 3/8"-16 Zinc Flanged Lock | 312-1001-164 | 12 |
|  | Washer - 5/16" Zinc Plated Lock | 313-1000-019 | 4 |

TABLE 2. Hydraulic Kit (P/N 117-0134-077)




| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
|  | Fitting - 3/4" ORFS M/M/F Swivel Run Tee Adapter | 333-0012-028 | 2 |
|  | Fitting - 13/16" ORFS M/F 90° Swivel Elbow | 333-0012-067 | 2 |
|  | Fitting - 13/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter | 333-0012-082 | 2 |

TABLE 2. Hydraulic Kit (P/N 117-0134-077)





| Picture | Item Description | Part Number | Qty. |
|---|---|--------------|------|
|  | Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) Straight Adapter | 333-0012-168 | 2 |
|  | Fitting - 11/16" Hex 9/16" SAE O-Ring (M) | 333-0012-194 | 2 |
|  | Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) 90° Elbow | 333-0012-229 | 2 |
|  | Hydraulic Hose - 3/4" ORFS to 3/4" ORFS - 40" | 214-1000-529 | 4 |

TABLE 3. Ultrasonic Sensor Bracket Installation Kit (P/N 117-0131-084)

| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
| Not Pictured | Sheet - AutoBoom Sensor Extension Installation | 016-0130-075 | 1 |
|  | Bracket - AutoBoom Sensor Extension | 063-0131-595 | 2 |
|  | Bolt - 5/16"-18 x 1-1/4" Hex | 311-0052-106 | 2 |
|  | Nut - 5/16"-18 Nylon Insert Lock | 312-4000-059 | 2 |
|  | Washer - 5/16" Flat | 313-2300-012 | 4 |

TABLE 4. Optional Wheel Kit (P/N 117-0133-004)



| Picture | Item Description | Part Number | Qty. |
|---|--|--------------|------|
|  | Axle Assembly - Right Cushioned AutoBoom | 063-0131-585 | 1 |
|  | Axle Assembly - Left Cushioned AutoBoom | 063-0131-590 | 1 |
|  | Bracket - Nitro Weldment | 116-0159-542 | 2 |
|  | Bracket - Hub Retainer | 107-0171-617 | 2 |
|  | Wheel | 322-0131-008 | 2 |
|  | U-Bolt - 5-1/16" x 6" L x 7/16" Thread | 107-0171-603 | 4 |
|  | U-Bolt - 4-1/16" W x 5" L x 7/16" Thread | 107-0171-604 | 4 |
|  | U-Bolt - 3-1/16" W x 4" L x 3/8" Thread | 107-0171-608 | 4 |
|  | Bolt - 1/2"-13 x 1-1/2" SS Hex | 311-0058-186 | 4 |
|  | Nut - 1/2"-13 Zinc Hex | 312-1001-043 | 4 |

TABLE 4. Optional Wheel Kit (P/N 117-0133-004)







| Picture | Item Description | Part Number | Qty. |
|---|----------------------------------|--------------|------|
|  | Nut - 3/8"-16 Zinc Flanged Lock | 312-1001-164 | 8 |
|  | Nut - 7/16"-16 Zinc Flanged Lock | 312-1001-165 | 8 |

TABLE 5. PowerGlide Plus Wiring Kit (P/N 117-0137-023)


| Picture | Item Description | Part Number | Qty. |
|---|---|--------------|------|
| Not Pictured | Manual - AutoBoom Calibration & Operation | 016-0130-062 | 1 |
|  | Node - UltraGlide AutoBoom | 063-0130-010 | 1 |
|  | Cable - Harness | 115-0230-045 | 1 |
|  | Cable - Power/CAN Controller | 115-0230-007 | 1 |

Install the UltraGlide Hydraulic System



⚠ WARNING


The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.



⚠ CAUTION

When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.

Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.



NOTICE

The appearance of the AutoBoom hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.

Install Fittings on the AutoBoom Valve


Before mounting the AutoBoom valve on the machine, install the proper fittings in the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.

| Fitting | Part Number | Port |
|--|--------------|--------|
| Fitting - 13/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter | 333-0012-082 | LC, RC |
| Fitting - 11/16" Hex 9/16" SAE O-Ring (M) | 333-0012-194 | LV, RV |

| Fitting | Part Number | Port |
|---|--------------|------|
| Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M) Straight Adapter | 333-0012-168 | P, T |
| Fitting - 13/16" ORFS M/F 90° Swivel Elbow | 333-0012-067 | P, T |

Mount the AutoBoom Valve

FIGURE 1. AutoBoom Valve Mounted on the Valve Mounting Plate

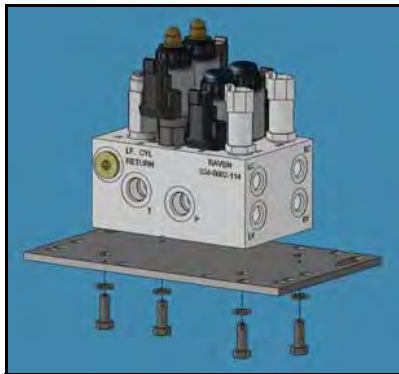


1. Secure the UltraGlide AutoBoom valve (P/N 063-0131-124) to the valve mounting bracket (P/N 107-0171-619) using four 5/16" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

FIGURE 2. AutoBoom Valve Mounted on the Sprayer



2. Secure the mounting bracket on the center rack using two 4" W x 4" L x 3/8" thread U-bolts (P/N 107-0171-796) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Install the Pressure and Tank Hoses

| | |
|---|---|
|  | <p>⚠ WARNING</p> <p>Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.</p> |
|---|---|


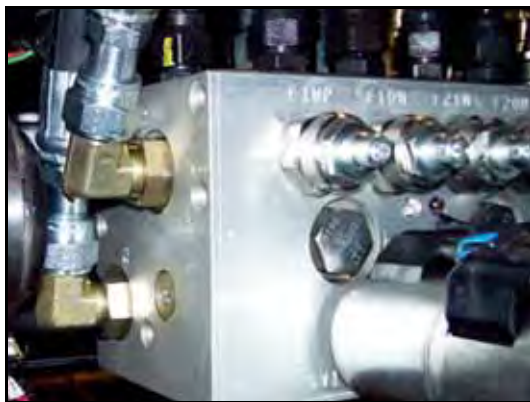
| | |
|---|--|
|  | <p>⚠ CAUTION</p> <p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.</p> <p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.</p> |
|---|--|

FIGURE 3. Pressure and Tank Hoses Installed



1. Locate the pressure and tank port plugs on the machine's hydraulic valve.

Note: *The plugs are located on the side opposite from the pressure and tank hoses on the hydraulic valve.*

2. Remove the port plugs from the hydraulic valve.
3. Install 13/16" ORFS (M) to 3/4" SAE O-ring (M) 90° elbow fittings (P/N 333-0012-229) in the pressure and tank ports.
4. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the installed elbow fitting in the pressure port of the machine's hydraulic valve.
5. Connect the other end of the installed hydraulic hose to the fitting installed in Port P on the AutoBoom valve.

6. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the installed elbow fitting in the tank port of the machine's hydraulic valve.
7. Connect the other end of the installed hydraulic hose to the fitting installed in Port T on the AutoBoom valve.


Install Left and Right Cylinder Hoses

FIGURE 4. Left and Right Cylinder Hoses Installed



1. Disconnect the machine's left and right tilt hoses from the machine's hydraulic valve.
2. Install 13/16" ORFS (M) to 9/16" SAE O-ring (M) swivel run tee adapter fittings (P/N 333-0012-028) in the L Up and R Up ports of the machine's hydraulic valve.
3. Connect the machine's left tilt hose to the opposite end of the installed tee fitting in the L Up port.
4. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the 90° end of the installed tee fitting.
5. Connect the other end of the installed hydraulic hose to the fitting installed in Port LC on the AutoBoom valve.
6. Connect the machine's right tilt hose to the opposite end of the installed tee fitting in the R Up port.
7. Install one end of the supplied hydraulic hose (P/N 214-1000-529) on the 90° end of the installed tee fitting.
8. Connect the other end of the installed hydraulic hose to the fitting installed in Port RC on the AutoBoom valve.

UltraGlide Hydraulic Schematic

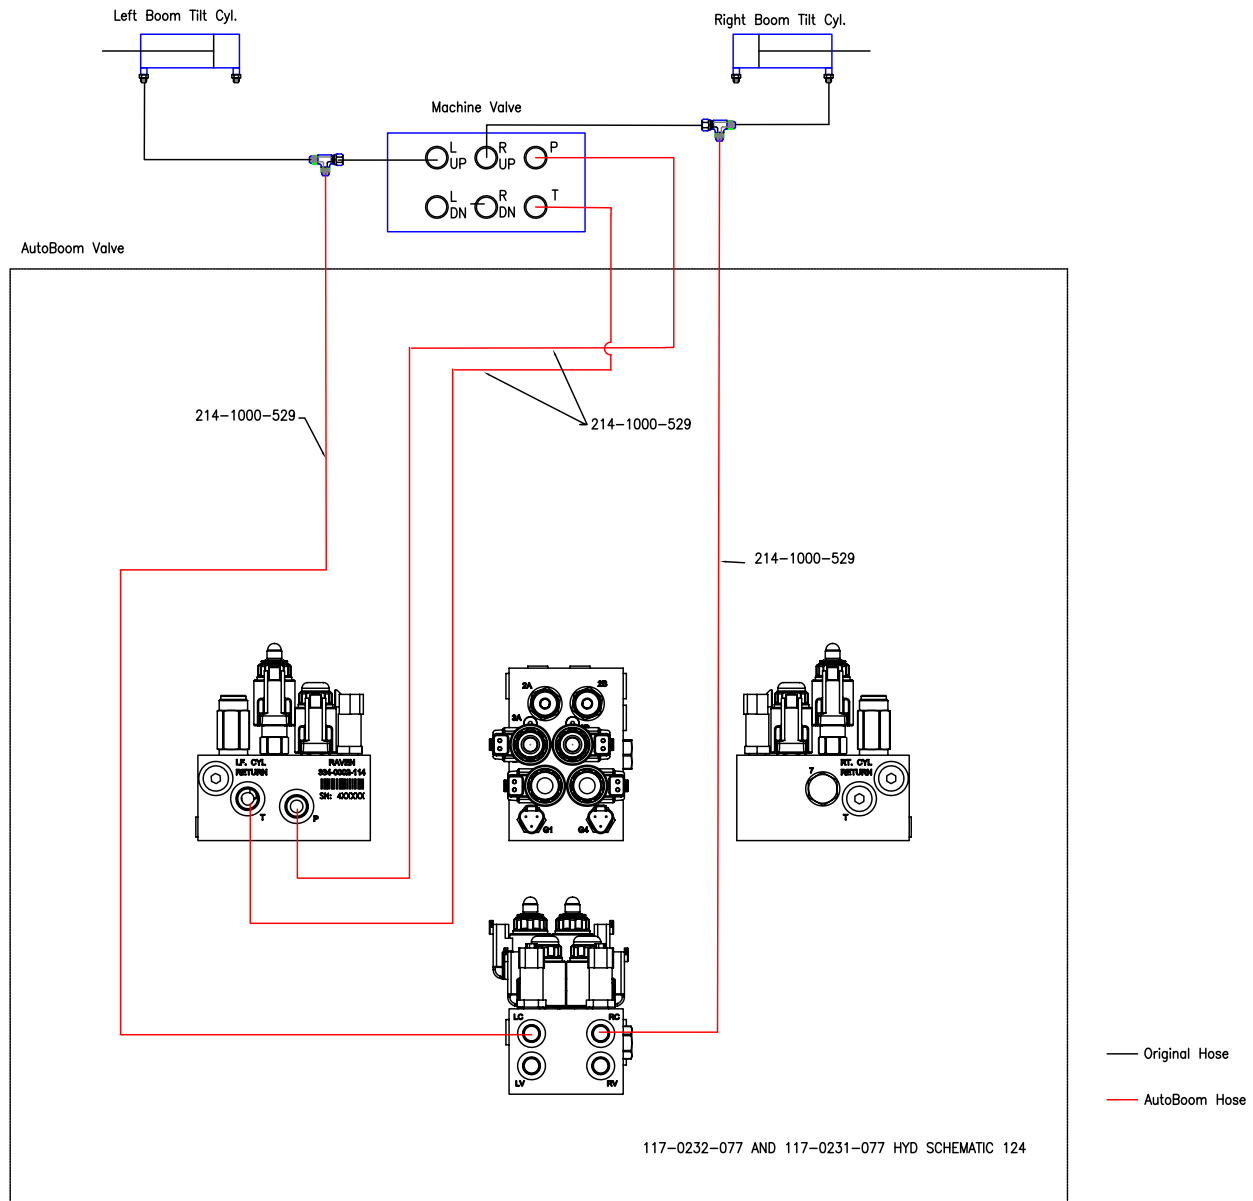


Install the UltraGlide Sensors

Boom Sensor Mounting Locations


Sensor mounting locations may be influenced by the boom configuration. If an object enters the sensor's blind range unexpectedly, a false echo return to the sensor could occur, causing the boom to drop and the sensor or boom to be damaged. To ensure optimal options of the UltraGlide system and to protect the sprayer boom, the sensor should be mounted on the front side of the boom, 8 - 10" above the lowest hanging part of the boom.

FIGURE 5. Illustration of Sensor's Blind Range

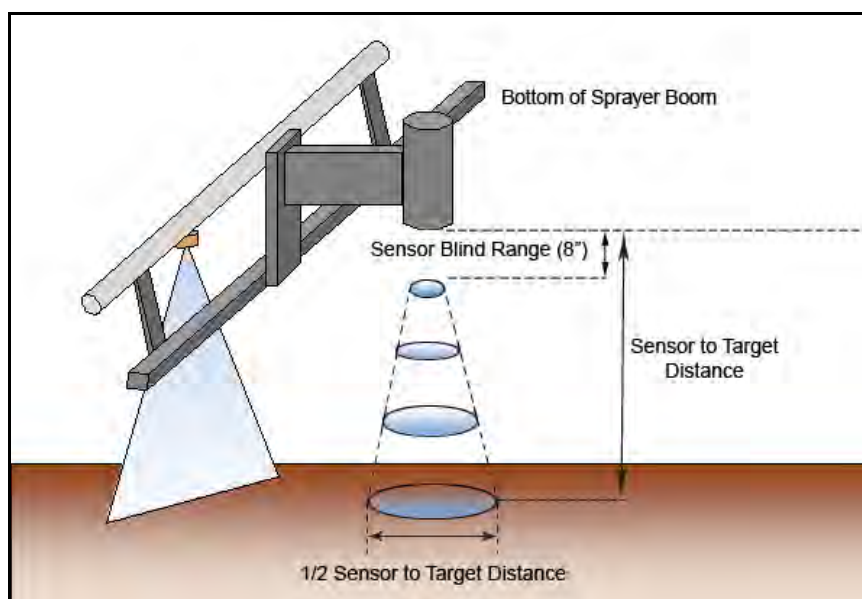

Install the Sensor Mounting Brackets

FIGURE 6. Sensor Parts to be Removed

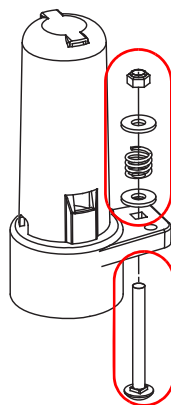

1. Remove the lock nut, washers, spring, and bolt installed on the boom sensor housings (P/N 063-0130-026) as shown in Figure 6.

FIGURE 7. Sensor Installed on Mounting Bracket



2. Install one 5/16" flat washer (P/N 313-2300-012) on the end of one 5/16"-18 x 1-1/4" hex bolt (P/N 311-0052-106).
3. Align the hole in the analog sensor (P/N 063-0130-026) with the hole on the narrow end of the sensor extension bracket (P/N 063-0131-595).
4. Insert the bolt and washer through the aligned holes in the sensor and bracket.
5. Install another 5/16" flat washer (P/N 313-2300-012) on the end of the installed hex bolt and secure it using one 5/16"-18 nylon insert lock nut (P/N 312-4000-059).
6. Repeat the steps above to install the second sensor bracket on the remaining analog sensor.

Mount the Boom Sensors


| | |
|---|----------------|
|  | WARNING |
| The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance. | |

FIGURE 8. Installed Boom Sensors


90° - 100° Booms



120° Booms



Dual Sensor Mounting Locations

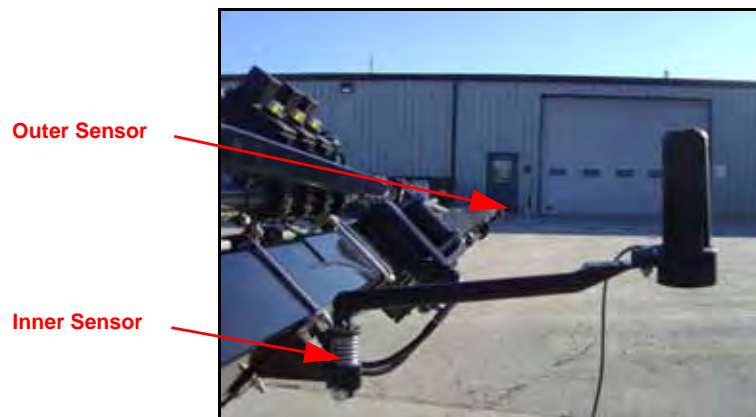

1. Mount the sensor bracket on the left boom using two 3-1/16" W x 4" L x 3/8" thread U-bolts (P/N 107-0171-608) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).
2. Tighten the nuts to ensure the sensor is mounted securely.
3. Repeat the steps above to mount the remaining boom sensor(s).

Mount the Center Rack Sensor

FIGURE 9. Center Sensor Mounting Location



1. Mount the center sensor (P/N 063-0130-018) to the machine's center rack using two 1-1/2" W x 2-1/2" L x 3/8" thread U-bolts (P/N 435-3003-047).
2. Tighten the nuts to ensure the sensor is mounted securely.

Connect the Sensor Cables

1. Connect the left sensor cable (P/N 115-0171-527) to the connector on the left sensor.
2. Route the left sensor cable toward the AutoBoom valve.
3. Loop and tie-off any excess cable, allowing enough cable for boom folding and extension.
4. Repeat the steps above to connect the remaining sensor cable(s).


Note: The sensor cables will be connected to the AutoBoom system in the wiring phase of installation.

Install the Gauge Wheels - Optional

Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside the boom breakaway.

Mount the Gauge Wheels

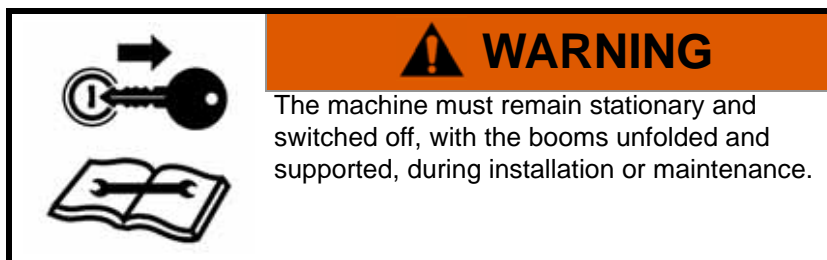

Note: The appearance of the wheel axles may vary.


FIGURE 10. Gauge Wheel Installed



1. Remove the nuts from the right wheel axle (P/N 063-0131-585).
2. Place the wheel (P/N 322-0131-008) on the right wheel axle.
3. Align and place the hub retainer bracket (P/N 107-0171-617) over the wheel.
4. Reinstall the lug nuts on the wheel axle to secure the wheel and hub retainer bracket.
5. Mount the right wheel receiver bracket (P/N 116-0159-542) to the front of the right boom using two U-bolts (P/N 107-0171-603, 107-0171-604, or 107-0171-608) and four nuts (P/N 312-1001-164 or 312-1001-165) appropriate for the size of the machine's booms.
6. Insert the right wheel axle into the right wheel receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so) and the wheel faces away from the machine.
7. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2" zinc hex nuts (P/N 312-1001-043).
8. Repeat the steps above to install the left wheel.

Install the UltraGlide Wiring

Wiring Connections
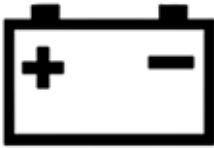
| | |
|---|---|
|  | <p style="text-align: center;">⚠ CAUTION</p> <p>Always connect the power cable as the last step in the wiring process and verify that the power leads are connected with the correct polarity. Reversing power leads can cause severe damage to the equipment.</p> |
|---|---|

For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

Install the AutoBoom Node

FIGURE 11. UltraGlide AutoBoom Node Installed



1. Mount the AutoBoom node (P/N 063-0130-013) to the machine's center rack within close proximity (3 feet/1 meter) to the AutoBoom valve.

Note: Position the node so that the cable connectors face down.

2. Insert the large, rectangular node connectors on the AutoBoom harness cable (P/N 115-0230-045) into the correct ports of the AutoBoom node.
3. Tighten the bolt on the node connector to secure the connection.

Connect the Harness to the Boom Function Controls

1. Locate the LEFT PRESS (PORT G1) and RIGHT PRESS (PORT G4) connectors on the harness cable (P/N 115-0230-052).
2. Route the connectors to the AutoBoom valve (P/N 063-0131-124).
3. Connect the LEFT PRESS (PORT G1) connector to Port G1 on the AutoBoom valve.
4. Connect the RIGHT PRESS (PORT G4) connector to Port G4 on the AutoBoom valve.
5. Locate the LEFT SOLENOID (PORT 4A) and RIGHT SOLENOID (PORT 4B) connectors on the harness cable.

6. Connect the LEFT SOLENOID (PORT 4A) connector to Port 4A on the AutoBoom valve.
7. Connect the RIGHT SOLENOID (PORT 4B) connector to Port 4B on the AutoBoom valve.
8. Locate the LEFT PROP (PORT 5A) and RIGHT PROP (PORT 13A) connectors on the harness cable.
9. Connect the LEFT PROP (PORT 5A) connector to Port 5A on the AutoBoom valve.
10. Connect the RIGHT PROP (PORT 13A) connector to Port 13A on the AutoBoom valve.

FIGURE 12. Machine's Boom Function Coils



11. Locate the machine's boom function coils on the hydraulic valve.
12. Disconnect the connector from the machine's left tilt up coil.
13. Install a metripack boom sense adapter cable (P/N 115-0230-013) between the coil and the machine's coil connector.
14. Connect boom sense adapter cables between the left tilt down, right tilt up, and right tilt down coils and coil connectors.
15. On the harness cable, locate the LEFT SOLENOID SENSE connectors.
16. Connect the UP connector to the left tilt up coil via the installed boom sense adapter cable.
17. Connect the unlabeled LEFT SOLENOID SENSE connector to the left tilt down coil via the installed boom sense adapter cable.
18. On the harness cable, locate the RIGHT SOLENOID SENSE connectors.
19. Connect the UP connector to the right tilt up coil via the installed boom sense adapter cable.
20. Connect the unlabeled RIGHT SOLENOID SENSE connector to the left tilt down coil via the installed boom sense adapter cable.



Install the Center Rack Control

FIGURE 13. Machine's Center Boom Function Coils



1. Locate the center up coil on the machine's hydraulic valve.
2. Install a metripack center rack adapter cable (P/N 115-0230-035) between the coil and its connector.
3. Locate the CENTER SOLENOID UP connectors on the harness cable.
4. Connect the CONTROL connector to the mating connector on the installed center rack adapter cable.
5. Connect the SENSE connector to the remaining end of the installed center rack adapter cable.
6. Locate the center down coil on the machine's hydraulic valve.
7. Install a metripack center rack adapter cable (P/N 115-0230-035) between the coil and its connector.
8. Locate the CENTER SOLENOID DOWN connectors on the harness cable.
9. Connect the CONTROL connector to the mating connector on the installed center rack adapter cable.
10. Connect the SENSE connector to the remaining end of the installed center rack adapter cable.

Connect the Harness Cable to the Sensors

1. Locate the CENTER SENSOR connector on the AutoBoom harness cable.
2. Connect the CENTER SENSOR connector to the installed center sensor (P/N 063-0130-018).
3. Locate the LEFT OUTER SENSOR connector on the AutoBoom harness cable.
4. Connect the LEFT OUTER SENSOR connector to the installed left sensor cable (P/N 115-0171-527).
5. Locate the RIGHT OUTER SENSOR connector on the AutoBoom harness cable.
6. Connect the RIGHT OUTER SENSOR connector to the installed right sensor cable.
7. If optional inside boom sensors are installed, repeat the steps above to connect the inside boom sensors.

Connect the Harness Cable to the Controller Cable

1. Route the harness cable (P/N 115-0230-045) toward the machine's cab.
2. Connect the harness cable to the controller cable (P/N 115-0230-007).
3. Tighten the connector cap to secure the connection.

Note: Be sure to allow enough slack in the harness cable to allow for boom racking.

Connect the Controller (If Applicable)

1. Route the controller cable (P/N 115-0230-007) into the right side of the machine's cab.
2. Locate the two controller connectors. Connect them to the AutoBoom controller (P/N 063-0130-011).

Note: *The AutoBoom controller should be mounted in the machine's cab so that the machine operator has easy access to it.*

Connect the Computer (If Applicable)


Refer to the Installation & Operation Manual and the appropriate wiring schematic beginning on page 60 for installation and wiring instructions for your specific field computer.

Connect the Power Leads


1. Locate the power cable that has the red and white power leads at one end.
2. Disconnect the machine's connectors from the battery terminals.
3. Install the red power lead on the positive battery terminal and reinstall the machine's battery connector.
4. Install the white power lead on the negative battery terminal and reinstall the machine's battery connector.

UltraGlide Wiring Schematics


AutoBoom Controller

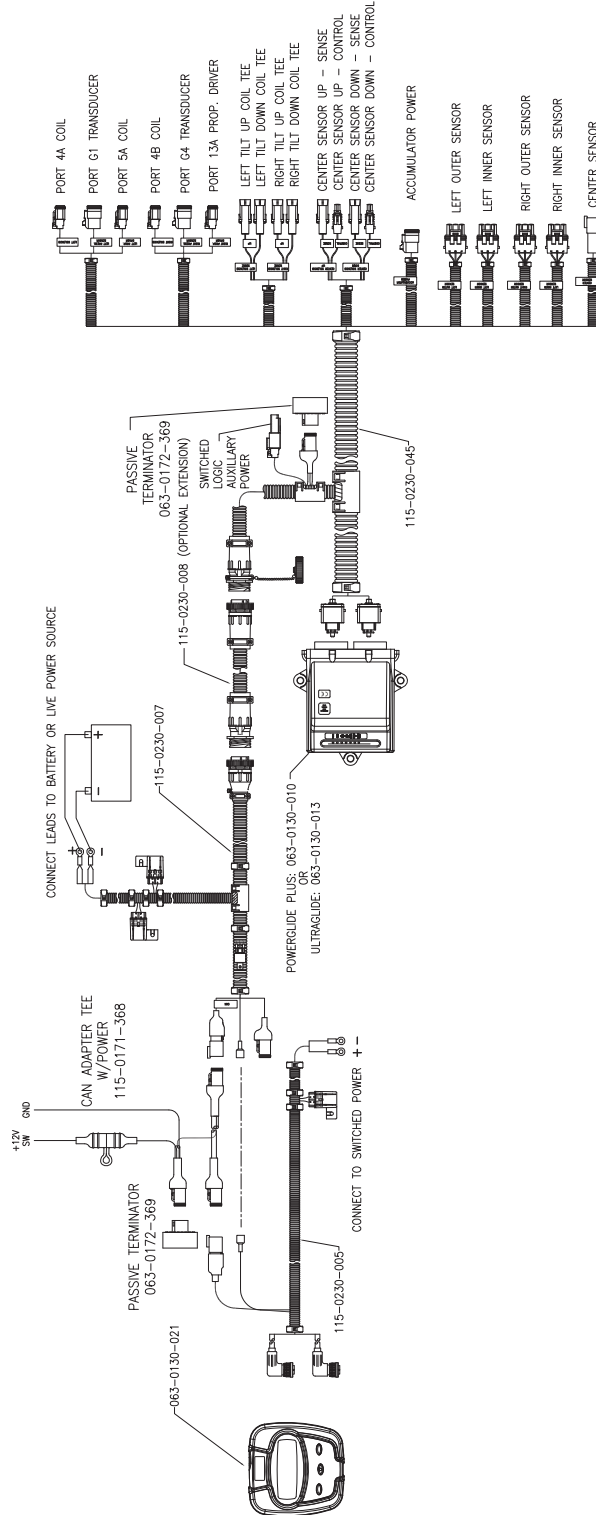


Envizio Plus

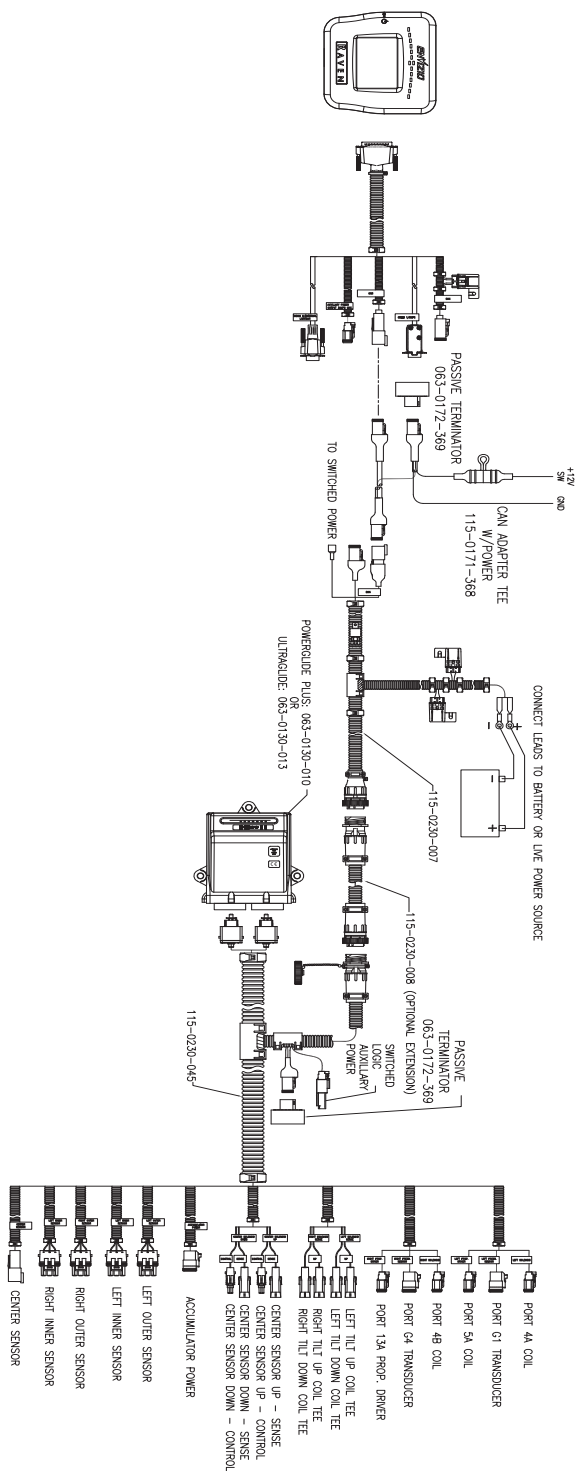

SCS 4000/5000

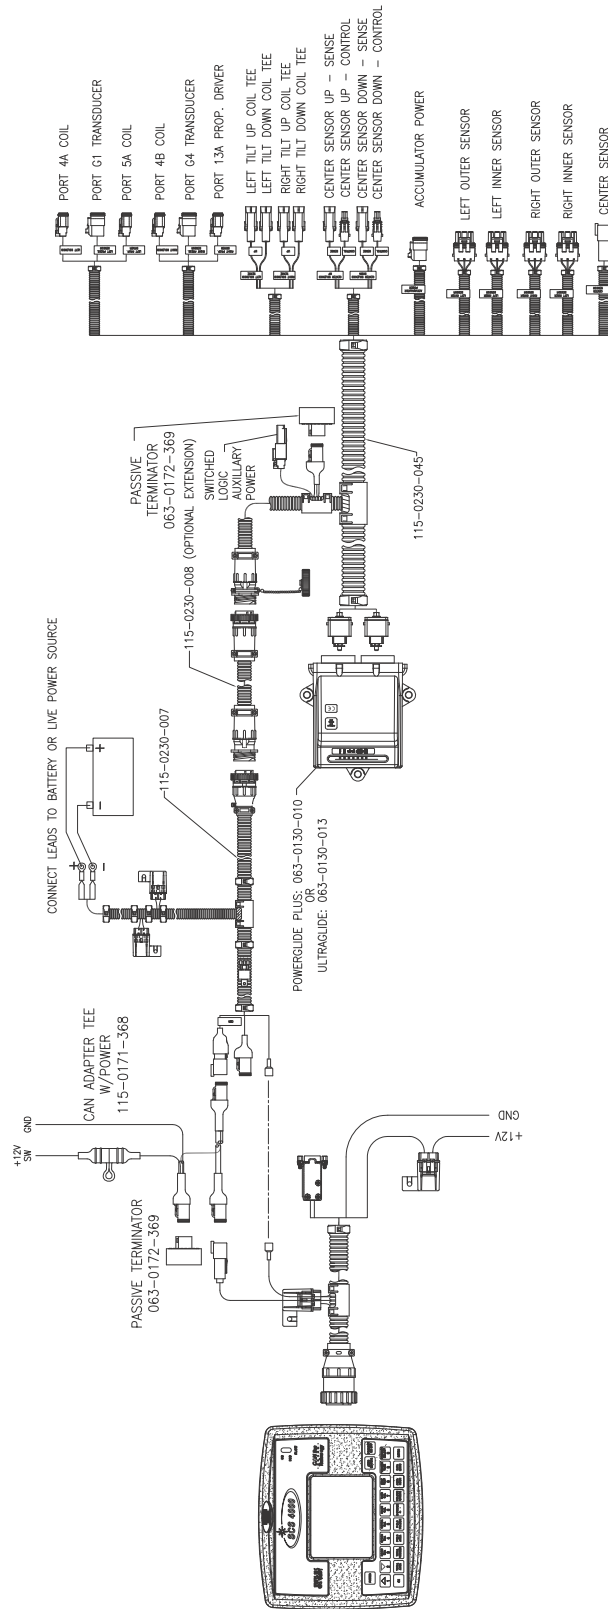

Viper Pro & Envizio Pro

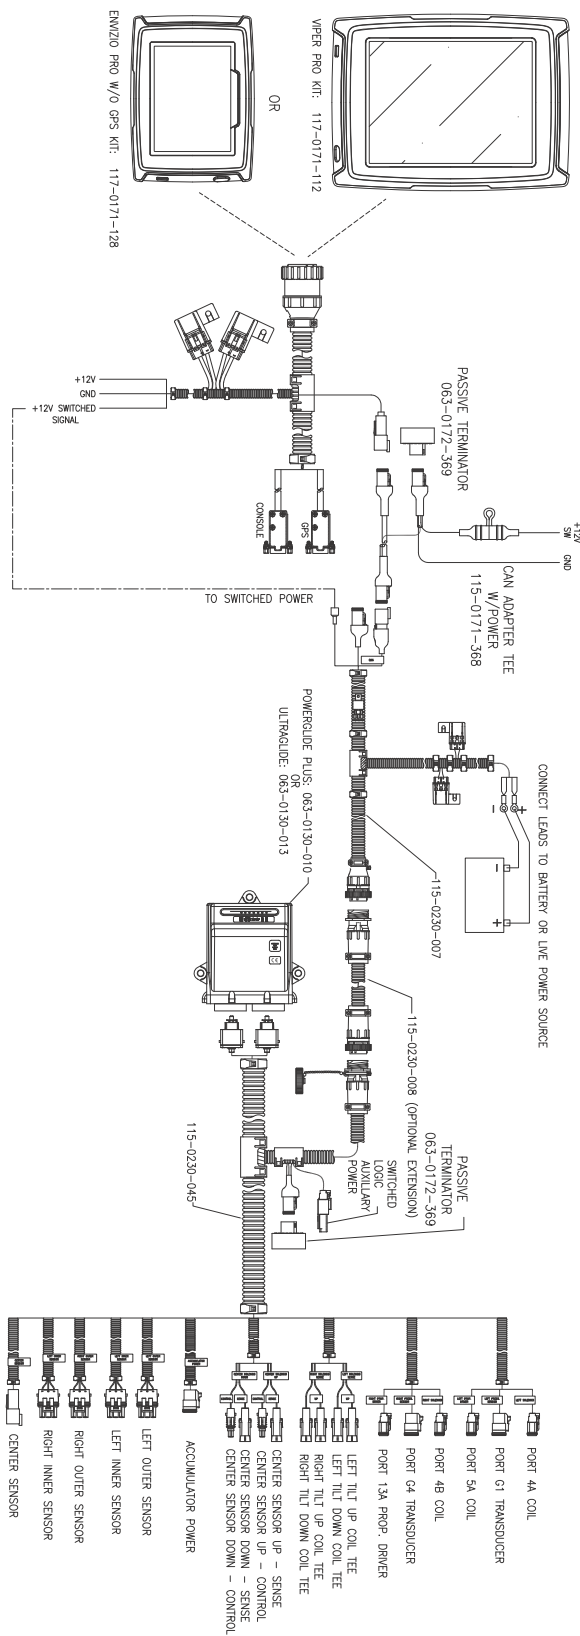

CHAPTER


6

Replacement Parts

This section contains replacement part diagrams and listings for PowerGlide, PowerGlide Plus, and UltraGlide systems. Please refer to these diagrams when calling to request replacement parts.


Valves

PowerGlide

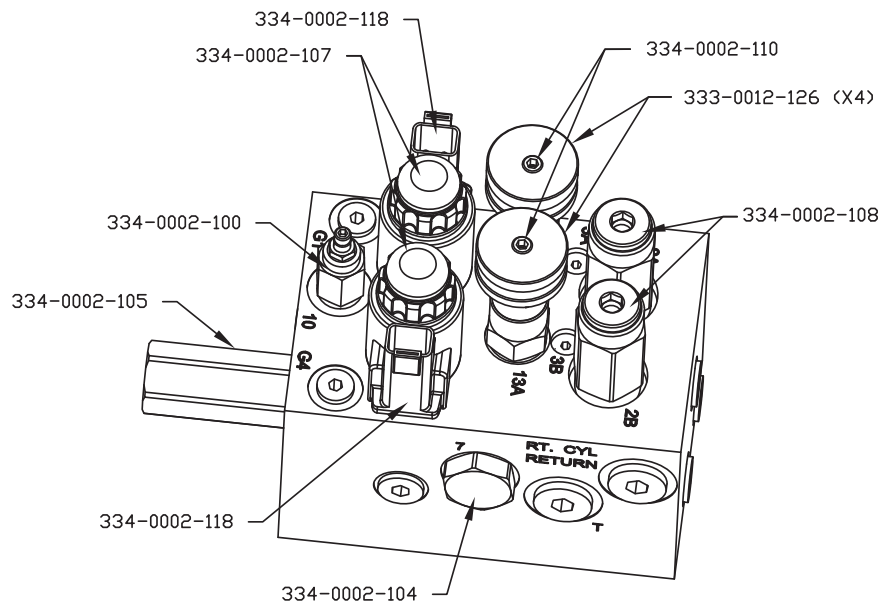


063-0131-127
VALVE, HYDRAULIC POWERGLIDE,
OPEN CENTER, AUTOBOOM

PowerGlide Plus and UltraGlide Valve

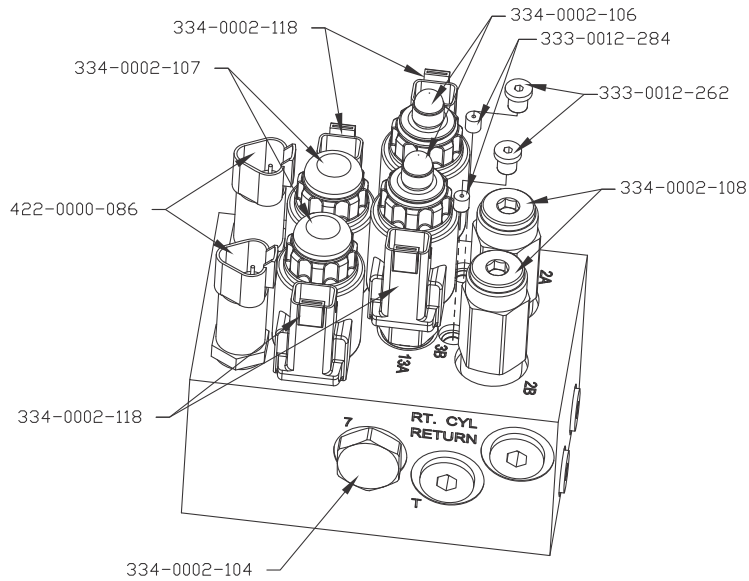


063-0131-124
VALVE, HYDRAULIC POWERGLIDE
PLUS/ULTRAGLIDE, CLOSED CENTER, AUTOBOOM

Wheels

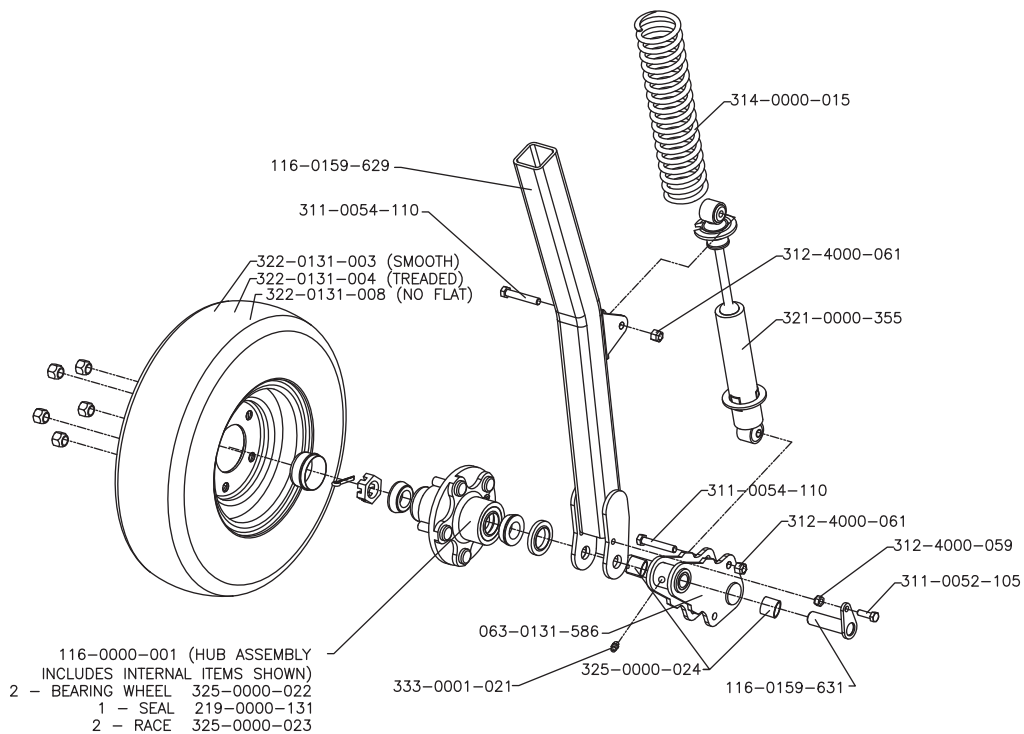


Sensors

Analog Boom Sensor

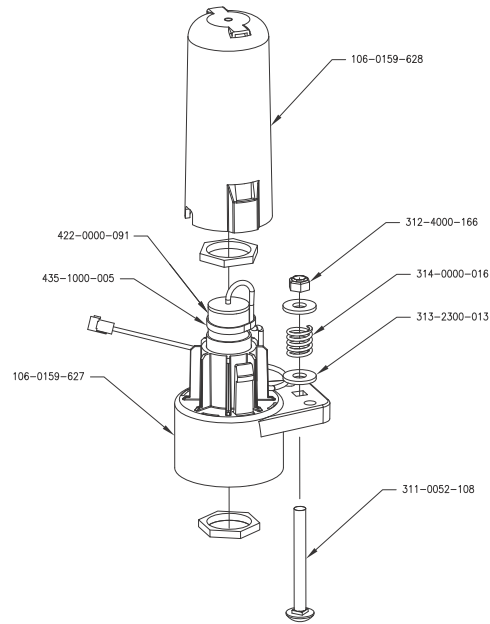

Center Sensor

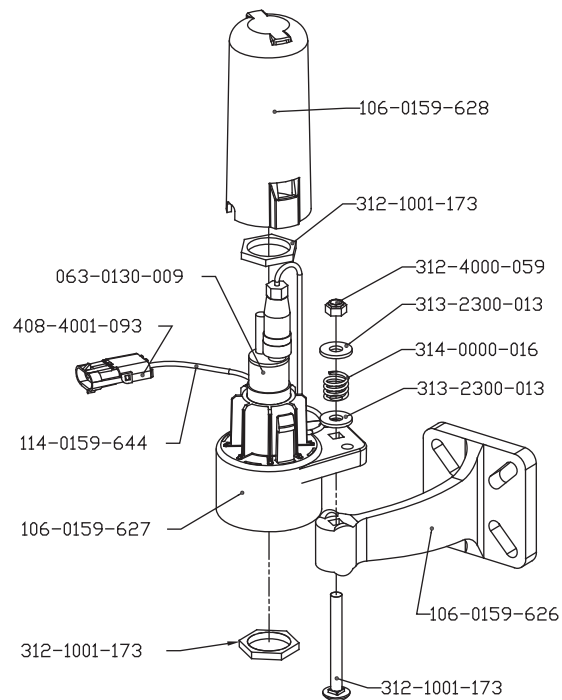

E**Electrical**

Safety 2

H**Hydraulic**

Fittings 4

Safety 2

I**Important Safety Information**

Electrical 2

Hydraulics 2

Introduction

Updates 5

K**Kit Contents**

PowerGlide 7

PowerGlide Plus 21

UltraGlide 41

P**Point of Reference 4****PowerGlide**

Install

Gauge Wheels 16

Gauge Wheel Mounting Locations 16

Mounting the Gauge Wheels 16

Hydraulic System 10

Hydraulic Schematic 15

Install Fittings on the AutoBoom Valve 11

Installing the Left and Right Cylinder

Hoses 14

Installing the Pressure and Tank Hoses 13

Mounting the AutoBoom Valve 12

Wiring 17

Connecting the Controller 18

Connecting the Harness Cable to the Control-
ler Cable 18Connecting the Harness to Boom Function
Controls 17

Connecting the Power Leads 18

PowerGlide Wiring Schematic 19

Wiring Connections 17

Kit Contents 7

PowerGlide Plus 21

Install

Gauge Wheels 33, 55

Gauge Wheel Mounting Locations 33

Mounting the Gauge Wheels 33

Hydraulic System 25

Hydraulic Schematic 32

Installing Fittings on the AutoBoom Valve 28

Installing the Left and Right Cylinder
Hoses 30

Installing the Pressure and Tank Hoses 29

Mounting the AutoBoom Valve 28

Removing the Orifice Fittings 25

Wiring 34

Connecting the Computer 36

Connecting the Controller 35

Connecting the Harness Cable to the Control-
ler Cable 35Connecting the Harness to Boom Function
Controls 34

Connecting the Power Leads 36

Installing the AutoBoom Node 34

PowerGlide Wiring Schematics 37

AutoBoom Controller 37

Envizio Plus 38

SCS 4000/5000 39

Viper Pro & Envizio Pro 40

Wiring Connections 34

Kit Contents 21

Preparing for Installation 3**R****Recommendations 3, 4****Replacement Parts 65**

Sensors 67

Valves 65

PowerGlide 65

PowerGlide Plus and UltraGlide 66

Wheels 66

T**Tools Needed 4****U****UltraGlide**

Install

Gauge Wheels 55

Gauge Wheel Mounting Locations 55

Mounting the Gauge Wheels 55

Hydraulic System 46

Hydraulic Schematic 50

Installing Fittings on AutoBoom Valve 46

Installing the Left and Right Cylinder
Hoses 49

Installing the Pressure and Tank Hoses 48

Mounting the AutoBoom Valve 47

Sensors 51

Boom Sensor Mounting Locations 51

Connecting the Sensor Cables 54

Installing Sensor Mounting Brackets 51

Mounting the Boom Sensors 52

Mounting the Center Rack Sensor 54

Wiring 56

Connecting the Computer 59

Connecting the Controller 59

Connecting the Harness Cable to the Control-
ler Cable 58Connecting the Harness Cable to the
Sensors 58Connecting the Harness to Boom Function
Controls 56

| | |
|------------------------------------|----|
| Connecting the Power Leads | 59 |
| Installing the AutoBoom Node | 56 |
| Installing the Center Rack Control | 58 |
| Wiring Connections | 56 |
| Wiring Schematics | |
| AutoBoom Controller | 60 |
| Envizio Plus | 61 |
| SCS 4000/5000 | 62 |
| Viper Pro & Envizio Pro | 63 |
| Kit Contents | 41 |

RAVEN

Limited Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

How Long is the Coverage Period?

Raven Applied Technology products are covered by this warranty for 12 months from the date of retail sale. In no case will the Limited Warranty period exceed 24 months from the date the product was issued by Raven Industries Applied Technology Division. This warranty coverage applies only to the original owner and is non-transferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries.

What Will Raven Industries Do?

Upon confirmation of the warranty claim, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

What is not Covered by this Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.



Extended Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

Do I Need to Register My Product to Qualify for the Extended Warranty?

Yes. Products/systems must be registered within 30 days of retail sale to receive coverage under the Extended Warranty. If the component does not have a serial tag, the kit it came in must be registered instead.

Where Can I Register My Product for the Extended Warranty?

To register, go online to www.ravenhelp.com and select Product Registration.

How Long is the Extended Warranty Coverage Period?

Raven Applied Technology products that have been registered online are covered for an additional 12 months beyond the Limited Warranty for a total coverage period of 24 months from the date of retail sale. In no case will the Extended Warranty period exceed 36 months from the date the product was issued by Raven Industries Applied Technology Division. This Extended Warranty coverage applies only to the original owner and is non-transferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries. In addition, the words "Extended Warranty" must appear on the box and all documentation if the failure is between 12 and 24 months from the retail sale.

What Will Raven Industries Do?

Upon confirmation of the product's registration for the Extended Warranty and the claim itself, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.


What is Not Covered by the Extended Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. Cables, hoses, software enhancements, and remanufactured items are not covered by this Extended Warranty. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

RAVEN

Miller Condor MD Series
SmarTrax™ Installation Manual
(P/N 016-0230-077 Rev E 09/12 E19817)

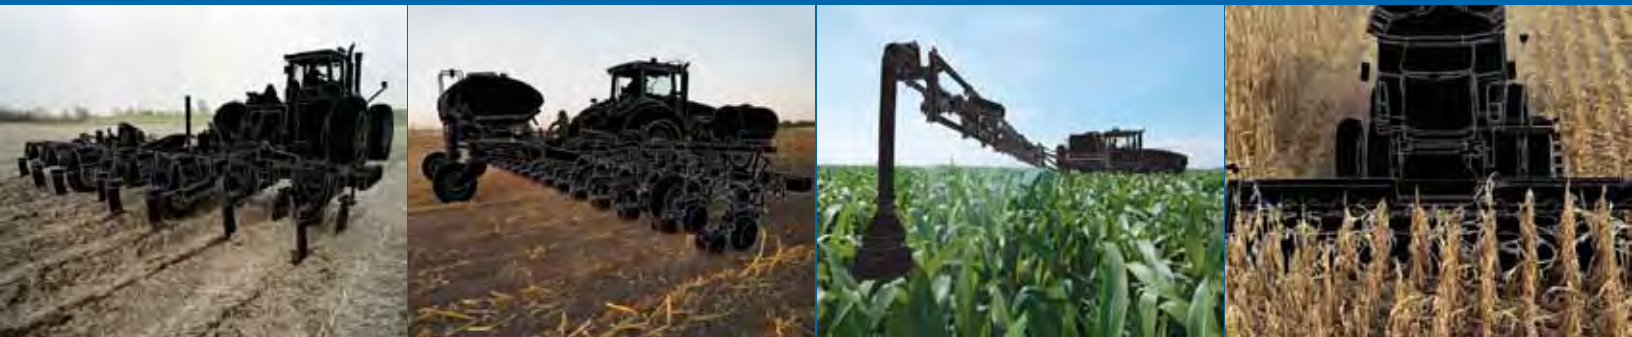

Raven Industries

Applied Technology Division
P.O. Box 5107
Sioux Falls, SD 57117-5107
www.ravenprecision.com

Toll Free (U.S. and Canada): (800)-243-5435
or Outside the U.S. :1 605-575-0722
Fax: 605-331-0426
www.ravenhelp.com

Notice: This document and the information provided are the property of Raven Industries, Inc. and may only be used as authorized by Raven Industries, Inc. All rights reserved under copyright laws.

©Raven Industries, Inc. 2007, 2009, 2010, 2012