

**RAVEN**

*Simply improving your position.<sup>SM</sup>*

# AutoBoom™ Installation Manual



**Miller Pro 1250**

## ***Disclaimer***

---

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be held responsible or liable for the effects of atmospheric conditions and sunspot activity on the performance of our products. Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of the GPS signal from the U.S. Department of Defense/NAVSTAR GPS satellites, the OmniSTAR correction service, or the WAAS correction service. Raven Industries accepts no responsibility for the use of the signal for other than the stated purpose.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components.

<b>Chapter 1</b>	<b><i>Important Safety Information</i></b> .....	<b>1</b>
	Important Safety Information .....	1
	Hydraulic Safety .....	2
	Electrical Safety .....	2
<b>Chapter 2</b>	<b><i>Introduction</i></b> .....	<b>3</b>
	Introduction .....	3
	Recommendations .....	4
	Tools Needed .....	4
	Preparing for Installation .....	4
	Point of Reference .....	4
	Hydraulic Fittings .....	4
<b>Chapter 3</b>	<b><i>PowerGlide</i></b> .....	<b>5</b>
	PowerGlide Kit Contents .....	5
	Convert the Sprayer's Hydraulic Valve to Open Center (If Applicable) .....	8
	Install Fittings on the AutoBoom Valve .....	9
	Mount the AutoBoom Valve .....	10
	Install the Left and Right Cylinder Hoses .....	12
	PowerGlide Hydraulic Schematic .....	13
	Install the Gauge Wheels .....	14
	Gauge Wheel Mounting Locations .....	14
	Install the PowerGlide Wiring .....	15
	Connect the Harness to the Boom Function Controls .....	15
	Connect the Harness Cable to the Controller Cable .....	15
	Connect the Controller .....	16
	Connect the Power Leads .....	16
	PowerGlide Wiring Schematic .....	17
	AutoBoom Controller .....	17
<b>Chapter 4</b>	<b><i>PowerGlide Plus</i></b> .....	<b>19</b>
	PowerGlide Plus Kit Contents .....	19
	Install the PowerGlide Plus Hydraulic System .....	23
	Convert the Sprayer's Hydraulic Valve to Open Center (If Applicable) .....	23
	Remove the Orifice Fittings .....	24
	Install Fittings on the AutoBoom Valve .....	26
	Mount the AutoBoom Valve .....	27
	Install the Left and Right Cylinder Hoses .....	29
	PowerGlide Plus Hydraulic Schematic .....	30
	Install the Gauge Wheels .....	31
	Gauge Wheel Mounting Locations .....	31
	Mount the Gauge Wheels .....	31

**Table of Contents**

---

Install the PowerGlide Plus Wiring ..... 32

    Install the AutoBoom Node ..... 32

    Connect the Harness to the Boom Function Controls ..... 32

    Connect the Harness Cable to the Controller Cable ..... 34

    Connect the Controller (If Applicable) ..... 34

    Connect the Field Computer (If Applicable) ..... 34

    Connect the Power Leads ..... 34

PowerGlide Plus Wiring Schematics ..... 35

    AutoBoom Controller ..... 35

    Envizio Plus ..... 36

    SCS 4000/5000 ..... 37

    Viper Pro & Envizio Pro ..... 38

**Chapter 5   UltraGlide ..... 39**

UltraGlide Kit Contents ..... 39

Install the UltraGlide Hydraulic System ..... 43

    Convert the Sprayer’s Hydraulic Valve to Open Center (If Applicable) ..... 44

    Install the Fittings on the AutoBoom Valve ..... 44

    Mount the AutoBoom Valve ..... 45

    Install the Left and Right Cylinder Hoses ..... 47

    UltraGlide Hydraulic Schematic ..... 48

Install the UltraGlide Sensors ..... 49

    Boom Sensor Mounting Locations ..... 49

    Mount the Center Rack Sensor ..... 50

    Connect the Sensor Cables ..... 50

Install the Gauge Wheels - Optional ..... 51

    Gauge Wheel Mounting Locations ..... 51

Install the UltraGlide Wiring ..... 52

    Install the AutoBoom Node ..... 52

    Connect the Harness to the Boom Function Controls ..... 52

    Install the Center Rack Control ..... 54

    Connect the Harness Cable to the Controller Cable ..... 55

    Connect the Controller (If Applicable) ..... 56

    Connect the Field Computer (If Applicable) ..... 56

    Connect the Power Leads ..... 56

UltraGlide Wiring Schematics ..... 57

    AutoBoom Controller ..... 57

    Envizio Plus ..... 58

    SCS 4000/5000 ..... 59

    Viper Pro & Envizio Pro ..... 60

**Chapter 6   Chapter Title..... 61**

Valve Blocks ..... 61

PowerGlide Plus and UltraGlide Replacement Parts .....	62
Wheels .....	62
Sensors .....	63



## CHAPTER

# 1

# *Important Safety Information*

## *Important Safety Information*

### **NOTICE**

Read this manual and the operation and safety instructions included with your implement and/or controller carefully before installing the AutoBoom™ system.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your Raven equipment, contact your local Raven dealer for support.
- Follow all safety labels affixed to the AutoBoom system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact your Raven dealer.

When operating the machine after installing AutoBoom, observe the following safety measures.

- Be alert and aware of surroundings.
- Do not operate AutoBoom or any agricultural equipment while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when AutoBoom is engaged.
- Disable AutoBoom when exiting from the operator's seat and machine.
- Do not drive the machine with AutoBoom enabled on any public road.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling AutoBoom when the safe working distance has been diminished.
- Ensure AutoBoom is disabled prior to starting any maintenance work on AutoBoom or the machine.

### **WARNING**

- When starting the machine for the first time after installing AutoBoom, be sure that all persons stand clear in case a hose has not been properly tightened.
- The machine must remain stationary and switch off, with the booms unfolded and supported, during installation or maintenance.

## CAUTION

### Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on the AutoBoom system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when opening a system that has been previously pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic fluid may be extremely hot and under high pressure. Caution must be exercised.
- Any work performed on the hydraulic system must be done in accordance with the machine manufacturer's approved maintenance instructions.
- When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure that precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.

### Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.



CHAPTER

2

## *Introduction*

---

### *Introduction*

Congratulations on your purchase of the Raven AutoBoom system! This system is designed to provide automated boom height adjustment for agricultural spraying equipment.

This manual applies to the following machines. For future reference, write your serial number in the space below.

**MAKE:** Miller Pro

**MODEL:** 1250

**YEAR:**

**SERIAL NUMBER:**

**FIGURE 1. Miller Pro 1250**



**Note:** *This manual contains the installation instructions for the PowerGlide, PowerGlide Plus, and UltraGlide systems. Be sure to identify which system you have and follow the instructions for that system.*

### Recommendations

Raven Industries recommends the following best practices when installing the AutoBoom system:

- Use part numbers to identify the parts.
- Do not remove the plastic wrap from a part until it is necessary for installation.
- Do not remove the plastic caps from a part until it is necessary for installation.

### Tools Needed

The following tools are recommended for installation of the AutoBoom system:

- SAE standard-sized wrenches
- Cable ties
- Set of tools

### Preparing for Installation

Before installing AutoBoom, park the machine where the ground is level, clean, and dry. Leave the machine turned off for the duration of the installation process.

During the installation process, follow good safety practices. Be sure to carefully read the instructions in this manual as you complete the installation process.

### Point of Reference

The instructions in this manual assume that you are standing behind the machine, looking toward the cab.

### Hydraulic Fittings

This manual may reference the following types of hydraulic fittings:

- SAE O-ring fittings
- ORFS (O-Ring Face Seal) fittings
- JIC fittings

**SAE O-ring fitting**



**ORFS fitting**



**JIC fitting (M)**



## *PowerGlide Kit Contents*

This section contains a list of the components that are included in the PowerGlide AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

**Note:** *In addition to the following kit components, an axle kit is required for the operation of the PowerGlide Auto Boom system. For available kits and ordering information, contact your local Raven dealer.*

**TABLE 1. PowerGlide Installation Kit (P/N 117-0230-078)**





Picture	Item Description	Part Number	Qty.
Not Pictured	Manual - Miller Pro 1250 AutoBoom Installation	016-0230-078	1
	Valve - PowerGlide AutoBoom	063-0131-127	1
	Plate - Hydraulic Block Mounting	107-0171-619	1
	Bracket - Miller Pro Left Weldment Receiver	116-0159-687	1
	Bracket - Miller Pro Right Weldment Receiver	116-0159-688	1

TABLE 1. PowerGlide Installation Kit (P/N 117-0230-078)












Picture	Item Description	Part Number	Qty.
	Wheel	322-0131-008	2
	Cable - Boom Sense Adapter	107-0171-546	2
	Cable - 12' Extension	115-0230-008	1
	U-Bolt - 4" W x 5" L x 3/8" Thread	107-0171-606	6
	U-Bolt - 2-9/16" W x 3-1/2" L x 3/8" Thread	107-0171-616	4
	Bolt - 5/16"-18 x 7/8" Hex	311-0052-104	4
	Bolt - 1/2"-13 x 1-1/2" SS Hex	311-0058-186	4
	Nut - 1/2"-13 Zinc Hex	312-1001-043	4
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	20
	Washer - 5/16" Zinc Plated Lock	313-1000-019	4


TABLE 2. Hydraulic Kit (P/N 117-0134-078)


Picture	Item Description	Part Number	Qty.
	Fitting - 9/16" JIC M/F 90° Swivel Elbow	333-0012-042	3
	Fitting - 9/16" JIC M/M/F Swivel Run Tee Adapter	333-0012-043	1
	Fitting - 9/16" JIC (M) to 3/4" SAE O-Ring (M) Straight Adapter	333-0012-046	3
	Fitting - 9/16" SAE O-Ring (M) to 9/16" JIC (M) 90° Elbow	333-0012-072	4
	Hydraulic Hose - 9/16" JIC (F) to 9/16" JIC (F) - 80"	214-1000-386	4
	Hydraulic Hose - 9/16" JIC (F) to 9/16" JIC (M) - 64"	214-1000-387	1


TABLE 3. PowerGlide Wiring Kit (P/N 117-0137-022)

Picture	Item Description	Part Number	Qty.
Not Pictured	AutoBoom PowerGlide Calibration Operator's Manual	016-0130-061	1
	AutoBoom PowerGlide Controller	063-0130-011	1
	Cable - AutoBoom Controller	115-0230-002	1
	Cable - AutoBoom Valve Harness	115-0230-003	1

## Install the PowerGlide Hydraulic System

	<p><b>WARNING</b></p> <p>The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.</p>
---	--

	<p><b>CAUTION</b></p> <p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.</p> <p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly cause damage to the AutoBoom hydraulic valve.</p>
---	---


	<p><b>NOTICE</b></p> <p>The appearance of the AutoBoom hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.</p>
---	--

### Convert the Sprayer's Hydraulic Valve to Open Center (If Applicable)

By factory default, the machine's main hydraulic valve is configured as a "closed center" hydraulic system. In order for AutoBoom to function properly and to prevent the hydraulic system from overheating, Raven recommends converting the machine's hydraulic system to an "open center" system.

**Note:** Contact your Miller dealer to obtain the open center conversion kit.

FIGURE 1. Converted Hydraulic Valve - Closed Center to Open Center

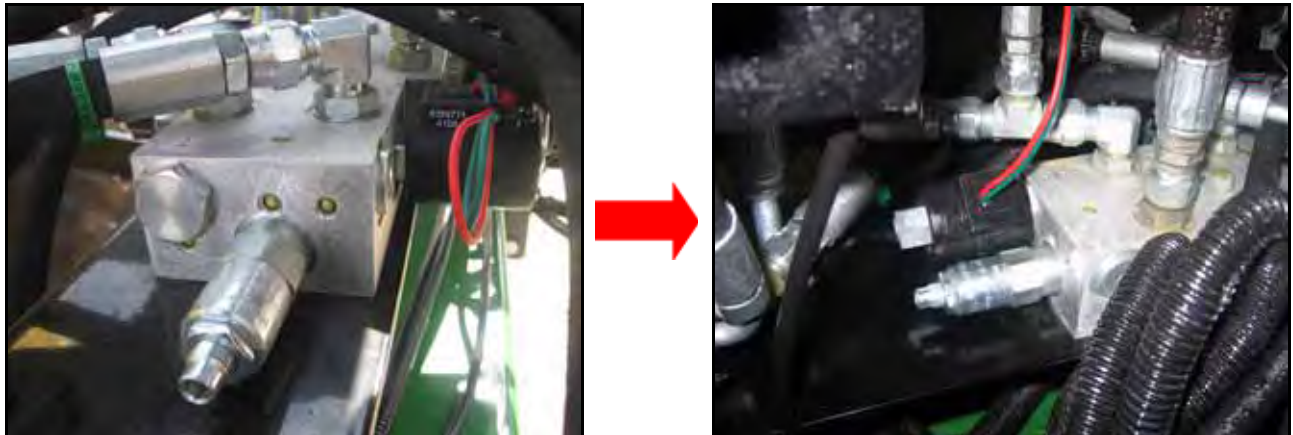


## Install Fittings on the AutoBoom Valve

Before mounting the AutoBoom valve on the machine, install the proper fittings on the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.

Fitting	Part Number	Port
Fitting - 9/16" JIC (M) to 3/4" SAE O-Ring (M) Straight Adapter	333-0012-046	P, T, EF
Fitting - 9/16" JIC M/F 90° Swivel Elbow	333-0012-042	P, T, EF
Fitting - 9/16" SAE O-Ring (M) to 9/16" JIC (M) 90° Elbow	333-0012-072	LC, RC LV, RV

## Mount the AutoBoom Valve

FIGURE 2. AutoBoom Valve Mounted on the Mounting Plate

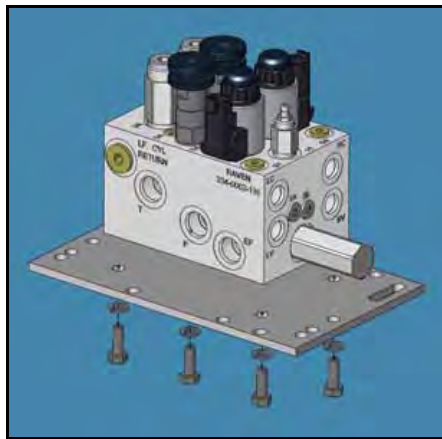


1. Secure the AutoBoom valve (P/N 063-0131-127) to the mounting plate (P/N 107-0171-619) using four 5/16"-18 x 7/8" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

FIGURE 3. AutoBoom Valve Mounted to the Machine





2. Secure the mounting plate to the machine's center rack using two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

## Install the Pressure and Tank Hoses

	<p><b>⚠ WARNING</b></p> <p>Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.</p>
---	---



	 <b>CAUTION</b>
	<p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.</p> <p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly cause damage to the AutoBoom hydraulic valve.</p>

**FIGURE 4. Pressure and Tank Hoses Installed**



1. Disconnect the machine's pressure hose from the machine's hydraulic valve.
2. Install the straight end of the supplied hydraulic hose (P/N 214-1000-386) on the P port of the machine's hydraulic valve.
3. Connect the other end of the installed hydraulic hose to the installed fitting in Port EF of the AutoBoom valve.
4. Install the supplied hydraulic hose extension (P/N 214-1000-387) to the installed fittings in Port P of the AutoBoom valve.
5. Route and connect the installed hydraulic hose extension to the machine's pressure hose.
6. Disconnect the machine's tank hose from the return port of the machine's hydraulic valve.
7. Install a 9/16" JIC M/M/F swivel run tee adapter fitting (P/N 333-0012-043) on the machine's return port.
8. Connect the machine's tank hose to the opposite end of the installed tee fitting.
9. Install one end of the supplied hydraulic hose (P/N 214-1000-386) to the 90° end of the installed tee fitting.
10. Connect the other end of the installed hydraulic hose to the fittings installed in Port T of the AutoBoom valve.


## Install the Left and Right Cylinder Hoses

FIGURE 5. Cylinder Hoses Installed



1. Disconnect the machine's cylinder hose from the left tilt cylinder.
2. Remove the orifice fitting from the existing elbow fitting installed on the left tilt cylinder.
3. Install the orifice fitting in the installed elbow fitting in Port LV of the AutoBoom valve.
4. Route and connect the machine's left cylinder hose to the fittings installed in Port LV of the AutoBoom valve.
5. Install the supplied hydraulic hose (P/N 214-1000-386) on the machine's left tilt cylinder elbow fitting.
6. Route and connect the installed hydraulic hose to Port LC of the AutoBoom valve.
7. Disconnect the machine's cylinder hose from the right tilt cylinder.
8. Remove the orifice fitting from the existing elbow fitting installed on the right tilt cylinder.
9. Install the orifice fitting in the installed elbow fitting in Port RV of the AutoBoom valve.
10. Route and connect the machine's right cylinder hose to the fittings installed in Port RV of the AutoBoom valve.
11. Install the supplied hydraulic hose (P/N 214-1000-386) on the machine's right tilt cylinder elbow fitting.
12. Route and connect the installed hydraulic hose to Port RC of the AutoBoom valve.

# PowerGlide Hydraulic Schematic

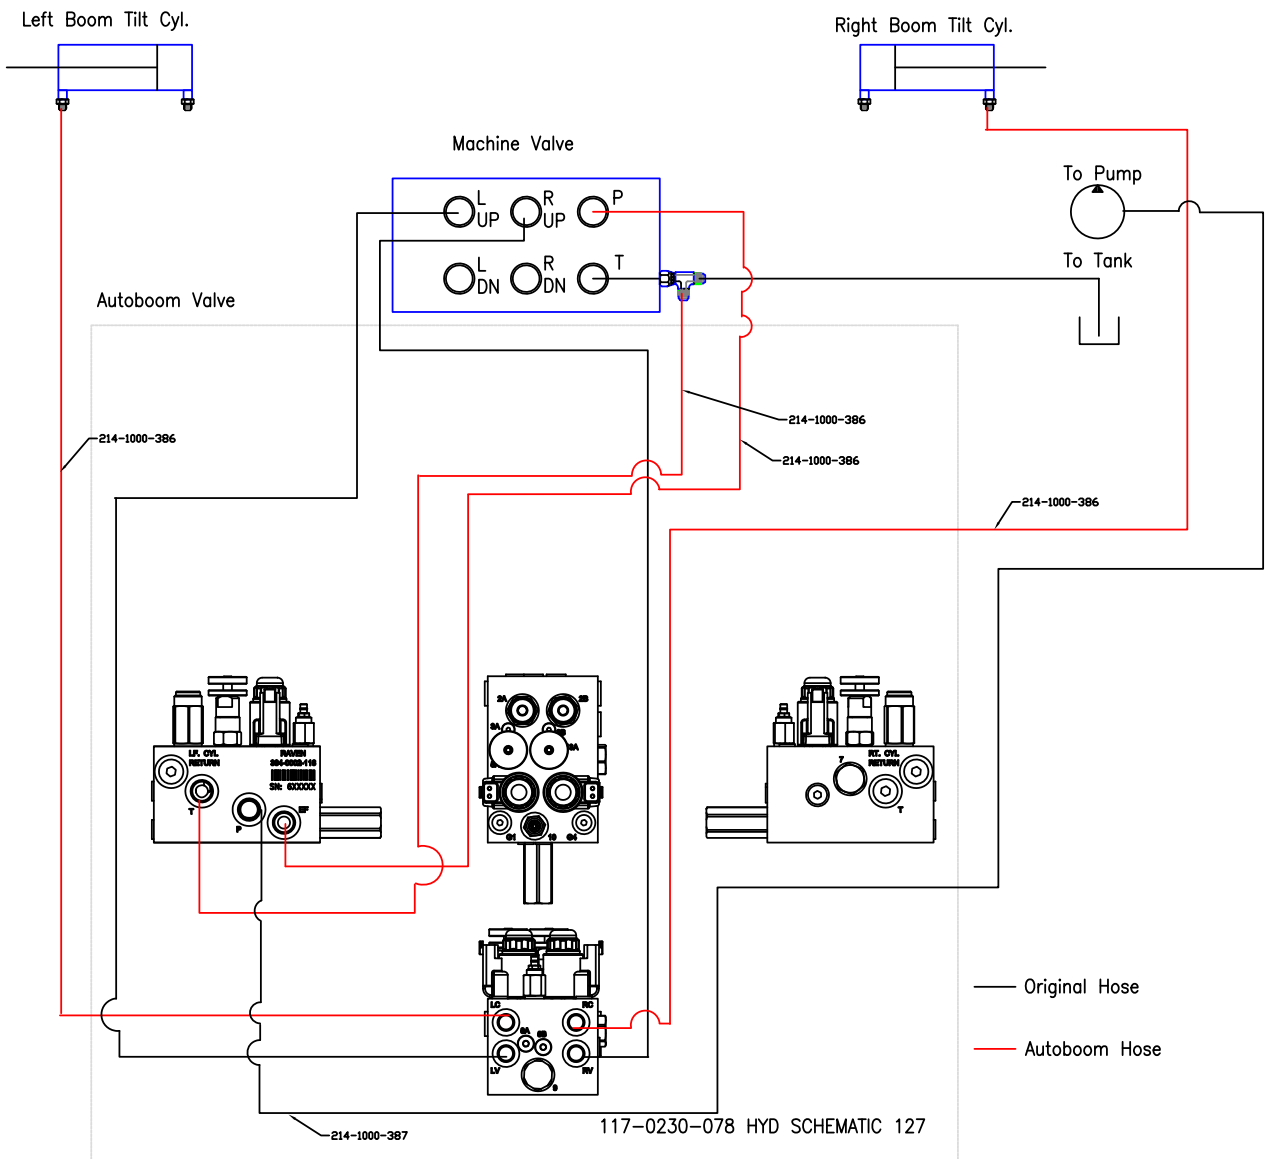

## Install the Gauge Wheels

### Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside the boom breakaway.

### Mount the Gauge Wheels

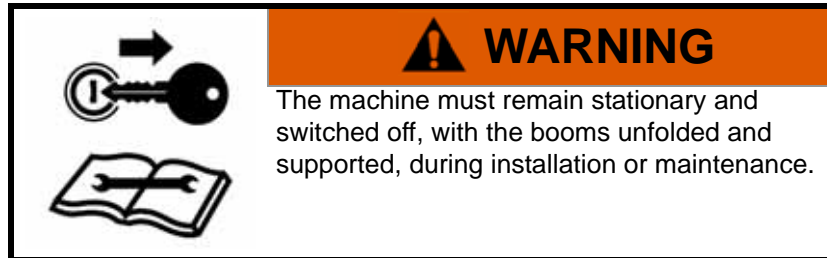



FIGURE 6. Gauge Wheel Mounting Location



1. Remove the lug nuts from the left wheel axle.
2. Place the wheel (P/N 322-0131-008) on the wheel axle.
3. Reinstall the lug nuts on the wheel axle to secure the wheel.
4. Mount the receiver bracket (P/N 116-0159-687) to the front of the left boom using two 2-9/16" W x 3-1/2" L x 3/8" thread U-bolts (P/N 107-0171-616), two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606), and eight 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).
5. Insert the wheel axle into the receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so) and the wheel faces away from the machine.
6. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2"-13 zinc hex nuts (P/N 312-1001-043).
7. Repeat the steps above to install the right wheel.

## Install the PowerGlide Wiring

### Wiring Connections

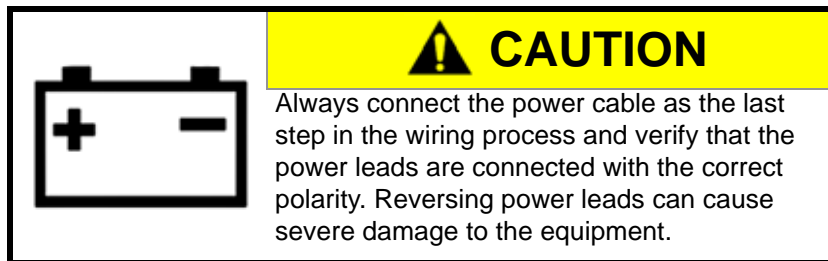

**Note:** For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

### Connect the Harness to the Boom Function Controls

1. On the AutoBoom harness cable (P/N 115-0230-003), locate the Left Solenoid connector and connect it to Port 4A on the AutoBoom valve.
2. Connect the Right Solenoid connector to Port 4B on the AutoBoom valve.

**FIGURE 7. Machine's Up Cylinder Wiring**



3. Install boom sense adapter cables (P/N 115-0171-546) between the machine's cylinder up coils and the connectors.
4. Connect the cable Up connectors on the AutoBoom harness cable (P/N 115-0230-003) to the installed boom sense adapter cables.

**Note:** The system will now disengage when Up is pressed on the machine's controller. The system must be engaged via the AutoBoom controller or field computer screen.

### Connect the Harness Cable to the Controller Cable

1. Route the harness cable (P/N 115-0230-003) toward the machine's cab.
2. Connect the harness cable to the controller cable (P/N 115-0230-002).
3. Tighten the connector cap to secure the connection.

**Note:** Be sure to allow enough slack in the cable to allow for boom racking. If the harness cable is not long enough, it may be necessary to connect the 12' extension cable (P/N 115-0230-008) between the harness and controller cables.

### Connect the Controller

FIGURE 8. Controller Connectors

---



1. Route the controller cable (P/N 115-0230-002) into the right side of the machine's cab.
2. Locate the two controller connectors and connect them to the AutoBoom controller (P/N 063-0130-011).


**Note:** The AutoBoom controller should be mounted in the machine's cab so that the operator has easy access to it.

### Connect the Power Leads

1. Locate the power cable that has the red and white power leads at one end.
2. Disconnect the machine's connectors from the battery terminals.
3. Install the red power lead on the positive battery terminal and reinstall the machine's battery connector.
4. Install the white power lead on the negative battery terminal and reinstall the machine's battery connector.

# PowerGlide Wiring Schematic

## AutoBoom Controller

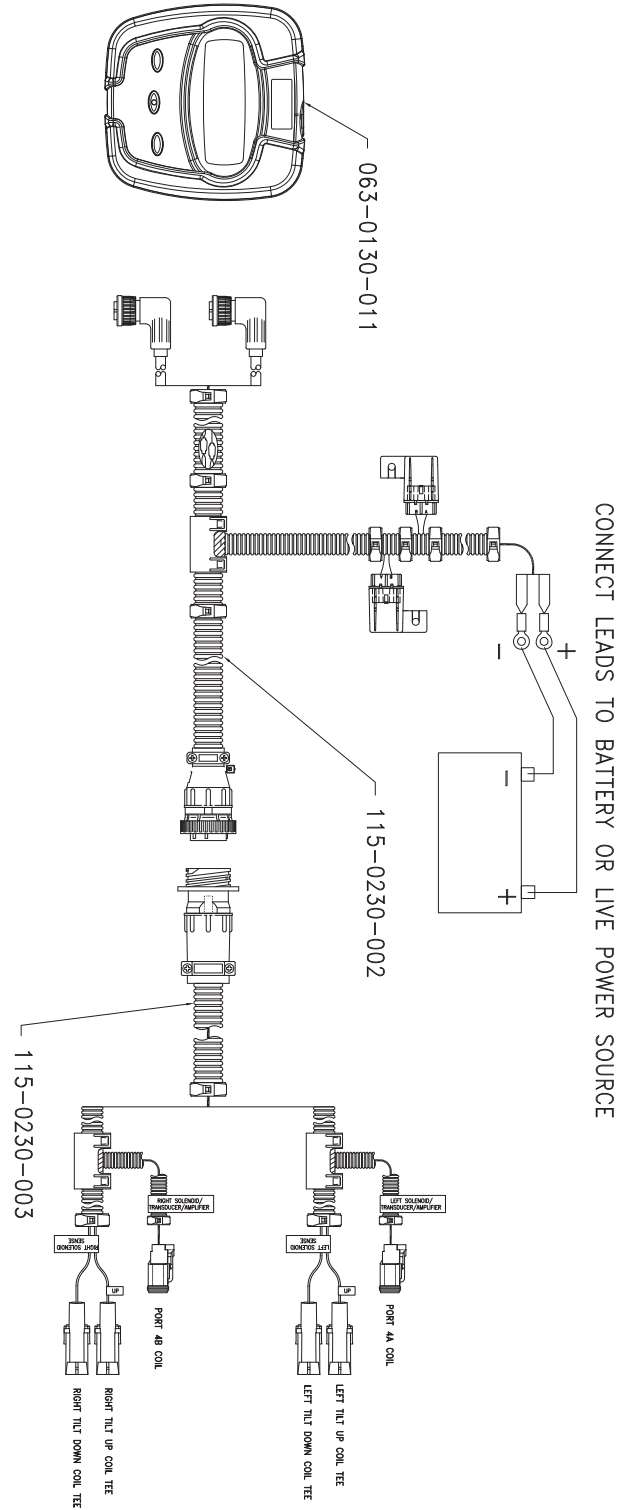





CHAPTER

4

*PowerGlide Plus*

*PowerGlide Plus Kit Contents*

This section contains a list of the components that are included in the PowerGlide Plus AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

**TABLE 1. PowerGlide Plus Installation Kit (P/N 117-0231-078)**

Picture	Item Description	Part Number	Qty.
Not Pictured	Manual - Miller Pro 1250 AutoBoom Installation	016-0230-078	1
	Valve - PowerGlide Plus AutoBoom	063-0131-126	1
	Plate - Hydraulic Block Mounting	107-0171-802	1
	Cable - Boom Sense Adapter	115-0171-546	3
	Cable - Single Weatherpack Boom Sense Adapter	115-0171-790	1
	Cable - 12' Extension	115-0230-008	1

**TABLE 1. PowerGlide Plus Installation Kit (P/N 117-0231-078)**

Picture	Item Description	Part Number	Qty.
	U-Bolt - 4" W x 5" L x 3/8" Thread	107-0171-606	2
	Bolt - 5/16"-18 x 7/8" Hex	311-0052-104	4
	Bolt - 3/8"-16 x 1-1/4" Hex	311-0054-106	3
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	7
	Washer - 5/16" Zinc Plated Lock	313-1000-019	4

**TABLE 2. Hydraulic Kit (P/N 117-0134-078)**





Picture	Item Description	Part Number	Qty.
	Fitting - 9/16" JIC M/F 90° Swivel Elbow	333-0012-042	3
	Fitting - 9/16" JIC M/M/F Swivel Run Tee Adapter	333-0012-043	1
	Fitting - 9/16" JIC (M) to 3/4" SAE O-Ring (M) Straight Adapter	333-0012-046	3
	Fitting - 9/16" SAE O-Ring (M) to 9/16" JIC (M) 90° Elbow	333-0012-072	4

TABLE 2. Hydraulic Kit (P/N 117-0134-078)






Picture	Item Description	Part Number	Qty.
	Hydraulic Hose - 9/16" JIC (F) to 9/16" JIC (F) - 80"	214-1000-386	4
	Hydraulic Hose - 9/16" JIC (F) to 9/16" JIC (M) - 64"	214-1000-387	1




TABLE 3. PowerGlide Plus Wheel Kit (P/N 117-0133-078)

Picture	Item Description	Part Number	Qty.
	Axle Assembly - Right Cushioned AutoBoom	063-0131-585	1
	Axle Assembly - Left Cushioned AutoBoom	063-0131-590	1
	Bracket - Miller Pro Left Weldment Receiver	116-0159-687	1
	Bracket - Miller Pro Right Weldment Receiver	116-0159-688	1
	Bracket - Hub Retainer	107-0171-617	2
	Wheel	322-0131-008	2
	U-Bolt - 4" W x 5" L x 3/8" Thread	107-0171-606	4
	U-Bolt - 2-9/16" W x 3-1/2" L x 3/8" Thread	107-0171-616	4


**TABLE 3. PowerGlide Plus Wheel Kit (P/N 117-0133-078)**


Picture	Item Description	Part Number	Qty.
	Bolt - 1/2"-13 x 1-1/2" SS Hex	311-0058-186	4
	Nut - 1/2"-13 Zinc Hex	312-1001-043	4
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	16


**TABLE 4. PowerGlide Plus Wiring Kit (P/N 117-0137-023)**

Picture	Item Description	Part Number	Qty.
Not Pictured	CAN AutoBoom Calibration & Operation Manual	016-0130-062	1
	AutoBoom PowerGlide Plus CAN Node	063-0130-010	1
	Cable - 37' CAN PowerGlide/UltraGlide	115-0230-045	1
	Cable - Power/CAN Controller	115-0230-007	1

## Install the PowerGlide Plus Hydraulic System

	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.</p>
---	--


	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.</p> <p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly cause damage to the AutoBoom hydraulic valve.</p>
---	---

	<p style="text-align: center;"><b>NOTICE</b></p> <p>The appearance of the AutoBoom hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.</p>
---	--

### Convert the Sprayer's Hydraulic Valve to Open Center (If Applicable)

By factory default, the machine's main hydraulic valve is configured as a "closed center" hydraulic system. In order for AutoBoom to function properly and to prevent the hydraulic system from overheating, Raven recommends converting the machine's hydraulic system to an "open center" system.

FIGURE 1. Converted Hydraulic Valve - Closed Center to Open Center

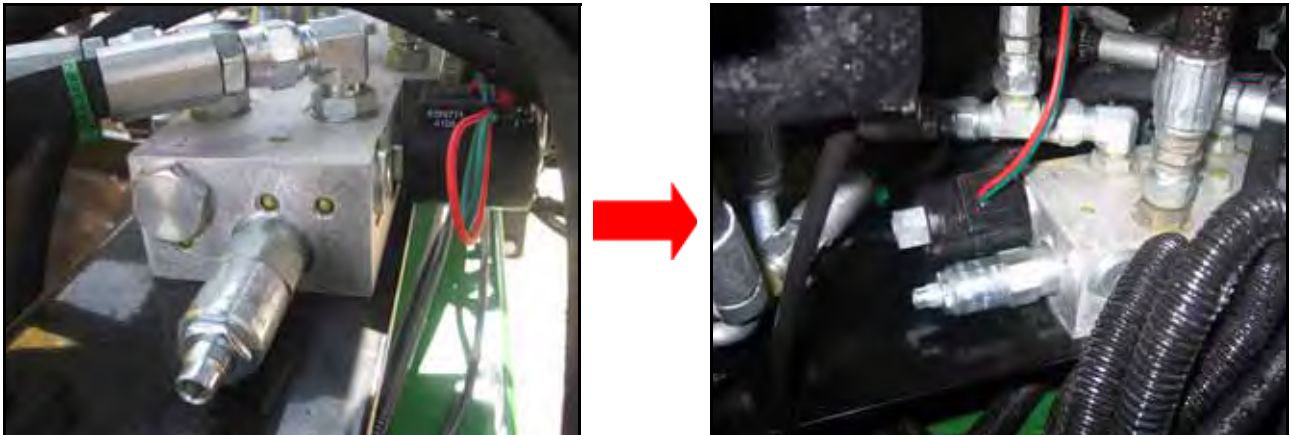

## Remove the Orifice Fittings

Before populating the hydraulic fittings on the AutoBoom valve, it is necessary to remove orifice fittings from the valve in the PowerGlide Plus system. Failure to remove these fittings from the valve will restrict the down speed of the booms when the system is enabled.

FIGURE 2. Port 3A and 3B Location




1. Locate Ports 3A and 3B on the AutoBoom valve (P/N 063-0131-126).

**FIGURE 3. Coil Removed from the AutoBoom Valve**



2. Remove the coils from the solenoids near Ports 3A and 3B to gain easy access to those ports.

**FIGURE 4. Port Plugs Removed from the AutoBoom Valve**

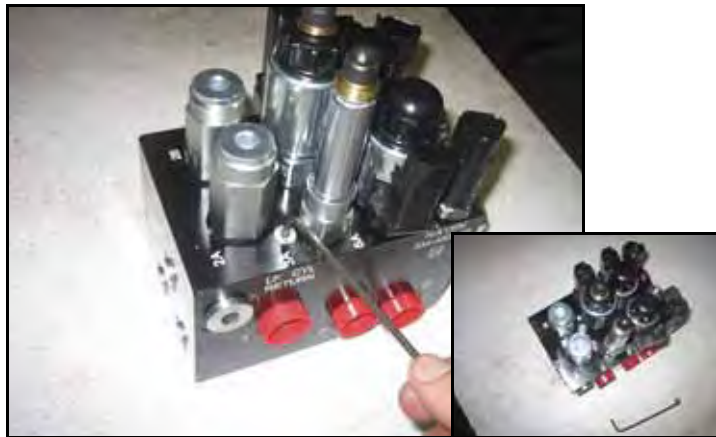

3. Use an Allen wrench to remove the plugs from Ports 3A and 3B.

**FIGURE 5. Orifice Fitting Removed from the AutoBoom Valve**



Orifice Fitting  
Removed - Keep for  
Future Use

4. Remove the orifice fittings from Ports 3A and 3B.



**Important:** Tip the AutoBoom valve on its side and use the Allen wrench to remove the orifice from the cavity, taking care not to let the fitting fall into the valve.

FIGURE 6. Port Plug Reinstalled on the AutoBoom Valve



5. Use the Allen wrench to reinstall the port plugs on Ports 3A and 3B of the AutoBoom valve.

FIGURE 7. Coil Reinstalled on the AutoBoom Valve



6. Reinstall the coils on the solenoids of the AutoBoom valve.

## Install Fittings on the AutoBoom Valve

Before mounting the AutoBoom valve on the machine, install the proper fittings on the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.


Fitting	Part Number	Port
Fitting - 9/16" JIC (M) to 3/4" SAE O-Ring (M) Straight Adapter	333-0012-046	P, T, EF



Fitting	Part Number	Port
Fitting - 9/16" JIC M/F 90° Swivel Elbow	333-0012-042	P, T, EF
Fitting - 9/16" SAE O-Ring (M) to 9/16" JIC (M) 90° Elbow	333-0012-072	LC, RC LV, RV


## Mount the AutoBoom Valve

**FIGURE 8. AutoBoom Valve Mounted to the Mounting Plate**

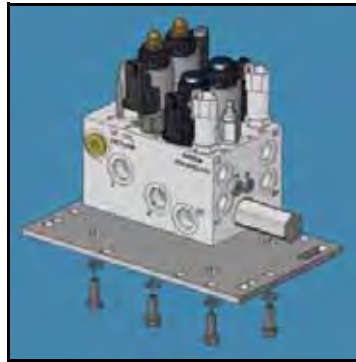


1. Secure the AutoBoom valve (P/N 063-0131-126) to the mounting plate (P/N 107-0171-802) using four 5/16"-18 x 7/8" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

**FIGURE 9. AutoBoom Valve Mounted to the Machine**

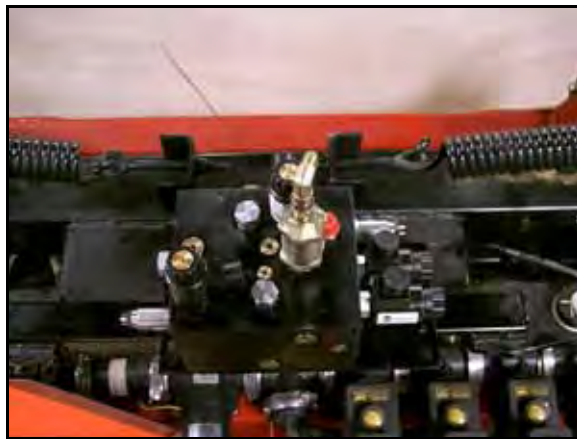

2. Mount the AutoBoom valve (P/N 063-0131-126) to the machine's center rack using two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

## Install the Pressure and Tank Hoses

	<p><b>⚠ WARNING</b></p> <p>Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.</p>
---	---


	<p><b>⚠ CAUTION</b></p> <p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.</p> <p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly cause damage to the AutoBoom hydraulic valve.</p>
---	---

FIGURE 10. Pressure and Tank Hoses Installed



1. Disconnect the machine's pressure hose from the machine's hydraulic valve.
2. Install the straight end of the supplied hydraulic hose (P/N 214-1000-386) on the P port of the machine's hydraulic valve.
3. Connect the other end of the installed hydraulic hose to the installed fitting in Port EF of the AutoBoom valve.
4. Install the supplied hydraulic hose extension (P/N 214-1000-387) to the installed fittings in Port P of the AutoBoom valve.
5. Route and connect the installed hydraulic hose extension to the machine's pressure hose.
6. Disconnect the machine's tank hose from the return port of the machine's hydraulic valve.

7. Install a 9/16" JIC M/M/F swivel run tee adapter fitting (P/N 333-0012-043) on the machine's return port.
8. Connect the machine's tank hose to the opposite end of the installed tee fitting.
9. Install one end of the supplied hydraulic hose (214-1000-386) to the 90° end of the installed tee fitting.
10. Connect the other end of the installed hydraulic hose to the fittings installed in Port T of the AutoBoom valve.


## Install the Left and Right Cylinder Hoses

**FIGURE 11. Cylinder Hoses Installed**



1. Disconnect the machine's cylinder hose from the left tilt cylinder.
2. Remove the orifice fitting from the existing elbow fitting installed on the left tilt cylinder.
3. Install the orifice fitting in the installed elbow fitting in Port LV of the AutoBoom valve.
4. Route and connect the machine's left cylinder hose to the fittings installed in Port LV of the AutoBoom valve.
5. Install the supplied hydraulic hose (P/N 214-1000-386) on the machine's left tilt cylinder elbow fitting.
6. Route and connect the installed hydraulic hose to Port LC of the AutoBoom valve.
7. Disconnect the machine's cylinder hose from the right tilt cylinder.
8. Remove the orifice fitting from the existing elbow fitting installed on the right tilt cylinder.
9. Install the orifice fitting in the installed elbow fitting in Port RV of the AutoBoom valve.
10. Route and connect the machine's right cylinder hose to the fittings installed in Port RV of the AutoBoom valve.
11. Install the supplied hydraulic hose (P/N 214-1000-386) on the machine's right tilt cylinder elbow fitting.
12. Route and connect the installed hydraulic hose to Port RC of the AutoBoom valve.


# PowerGlide Plus Hydraulic Schematic

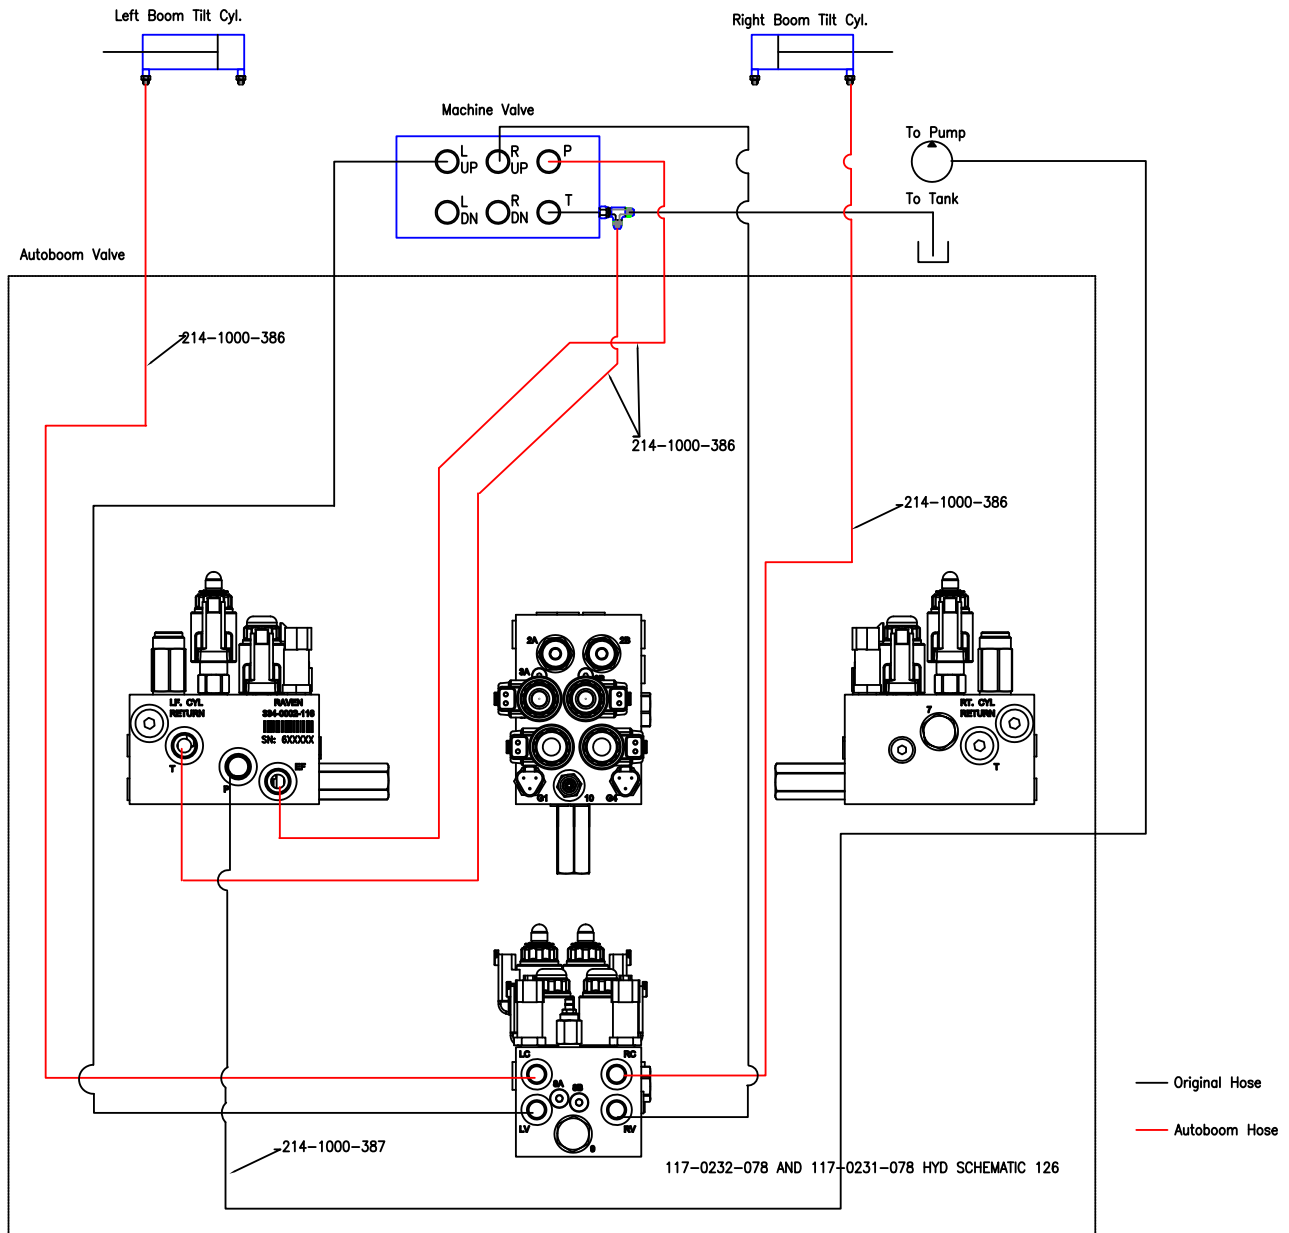

## Install the Gauge Wheels

### Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside the boom breakaway.

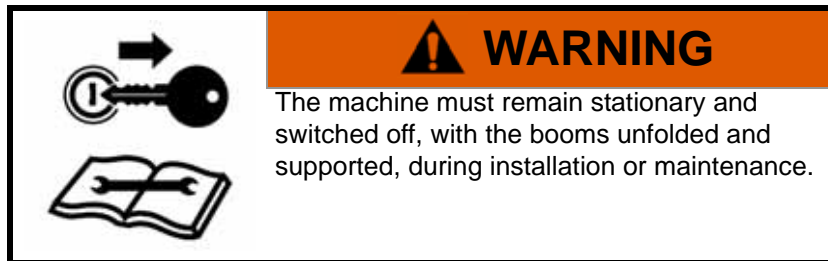

### Mount the Gauge Wheels


FIGURE 12. Gauge Wheel Mounting Location



1. Remove the lug nuts from the left wheel axle (P/N 063-0131-590).
2. Place the wheel (P/N 322-0131-008) on the wheel axle.
3. Align and place the hub retainer bracket (P/N 107-0171-617) over the wheel.
4. Reinstall the lug nuts on the wheel axle to secure the wheel and hub retainer bracket.
5. Mount the receiver bracket (P/N 116-0159-687) to the front of the left boom using two 2-9/16" W x 3-1/2" L x 3/8" thread U-bolts (P/N 107-0171-616), two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606), and eight 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).
6. Insert the wheel axle into the receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so) and the wheel faces away from the machine.
7. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2"-13 zinc hex nuts (P/N 312-1001-043).
8. Repeat the steps above to install the right wheel.

## Install the PowerGlide Plus Wiring


### Wiring Connections

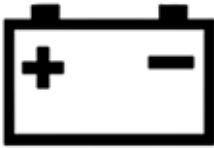	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>Always connect the power cable as the last step in the wiring process and verify that the power leads are connected with the correct polarity. Reversing power leads can cause severe damage to the equipment.</p>
---	---

**Note:** For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

### Install the AutoBoom Node

FIGURE 13. AutoBoom Node Installed

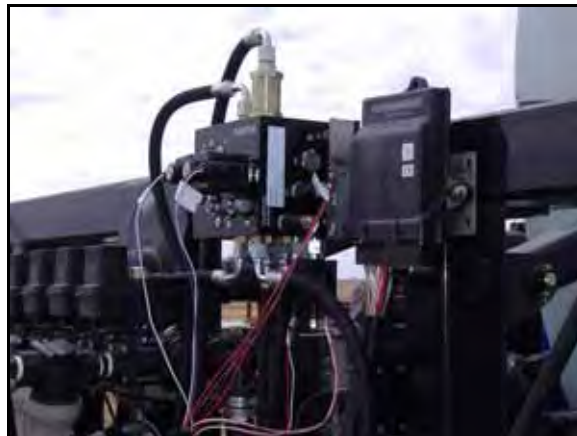

1. Mount the AutoBoom node (P/N 063-0130-010) to the to the valve mounting plate using three 3/8"-16 x 1/14" hex bolts (P/N 311-0054-106) and three 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

**Note:** The node should be installed so that the node connectors face down.

2. Insert the large, rectangular node connectors on the harness cable (P/N 115-0230-045) into the correct ports of the AutoBoom node.
3. Tighten the bolts on the node connectors to secure the connections.

### Connect the Harness to the Boom Function Controls

1. Locate the Left Press and Right Press connectors on the harness cable (P/N 115-0230-045).
2. Route the connectors to the AutoBoom valve (P/N 063-0131-126).
3. Connect the Left Press connector to Port G1 on the AutoBoom valve.
4. Connect the Right Press connector to Port G4 on the AutoBoom valve.
5. Locate the Left Solenoid and Right Solenoid connectors on the harness cable.

6. Connect the Left Solenoid connector to Port 4A on the AutoBoom valve.
7. Connect the Right Solenoid connector to Port 4B on the AutoBoom valve.
8. Locate the Left Prop and Right Prop connectors on the harness cable.
9. Connect the Left Prop connector to Port 5A on the AutoBoom valve.
10. Connect the Right Prop connector to Port 13A on the AutoBoom valve.

**FIGURE 14. Directional Valve Coil**



11. Locate the machine's directional valve.
12. Disconnect the machine's directional valve connector from the directional valve.
13. Install a boom sense adapter cable (P/N 115-0171-546) on the machine's directional valve connector.
14. Install the single weatherpack boom sense adapter cable (P/N 115-0171-790) on the installed boom sense adapter cable.
15. Connect the Right Down and Left Down connectors on the AutoBoom harness cable (P/N 115-0230-045) to the connector on the installed weatherpack boom sense adapter cable (P/N 115-0171-790).

**FIGURE 15. Machine's Up Cylinder Wiring**



16. Install boom sense adapter cables (P/N 115-0171-546) between the machine's cylinder up coils and the connectors.
17. Connect the cable Up connectors on the AutoBoom harness cable (P/N 115-0230-045) to the installed boom sense adapter cables.

### Connect the Harness Cable to the Controller Cable

1. Route the harness cable (P/N 115-0230-045) toward the machine's cab.
2. Connect the harness cable to the controller cable (P/N 115-0230-007).
3. Tighten the connector cap to secure the connection.

**Note:** *Be sure to allow enough slack in the cable to allow for boom racking. If the harness cable is not long enough, it may be necessary to connect the 12' extension cable (P/N 115-0230-008) between the harness and controller cables.*

### Connect the Controller (If Applicable)

1. Route the controller cable (P/N 115-0230-007) into the right side of the machine's cab.
2. Locate the two controller connectors and connect them to the AutoBoom controller (P/N 063-0130-011).

**Note:** *The AutoBoom controller should be mounted in the machine's cab so that the operator has easy access to it.*

### Connect the Field Computer (If Applicable)

Refer to the Installation & Operation Manual and the appropriate wiring schematic beginning on page 35 for installation and wiring instructions for the specific field computer being used.


### Connect the Power Leads

1. Locate the power cable that has the red and white power leads at one end.
2. Disconnect the machine's connectors from the battery terminals.
3. Install the red power lead on the positive battery terminal and reinstall the machine's battery connector.
4. Install the white power lead on the negative battery terminal and reinstall the machine's battery connector.




# PowerGlide Plus Wiring Schematics


## AutoBoom Controller

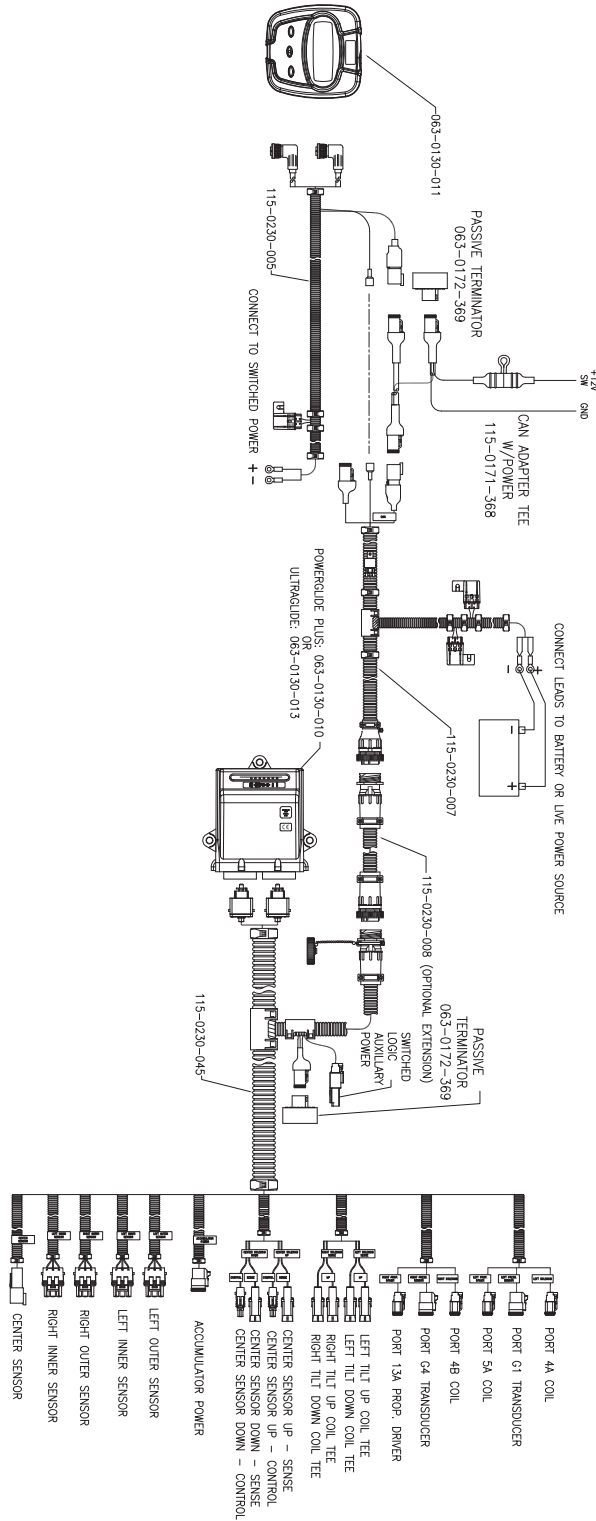


# Envizio Plus

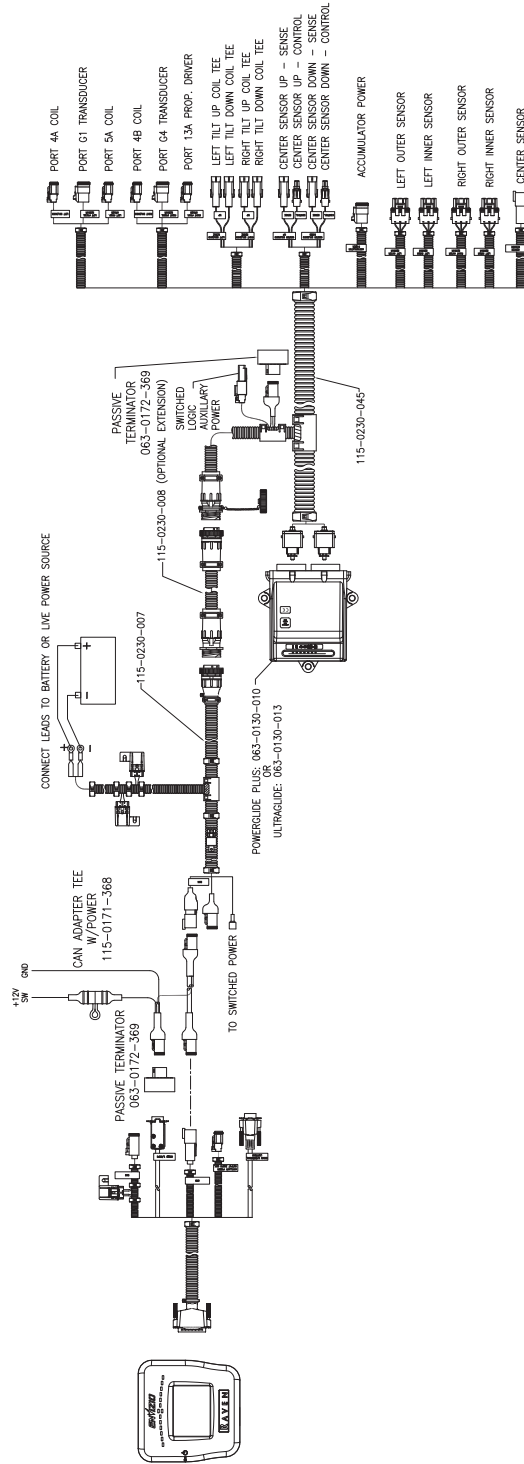

SCS 4000/5000

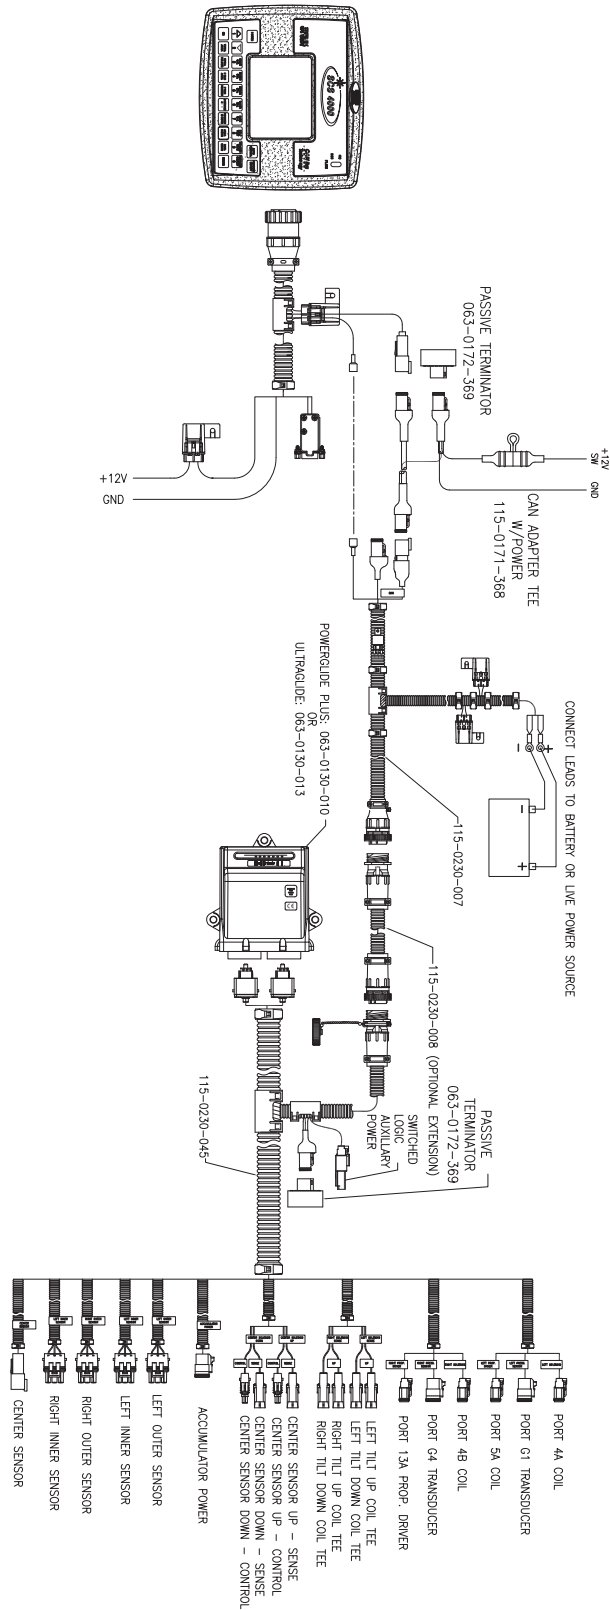

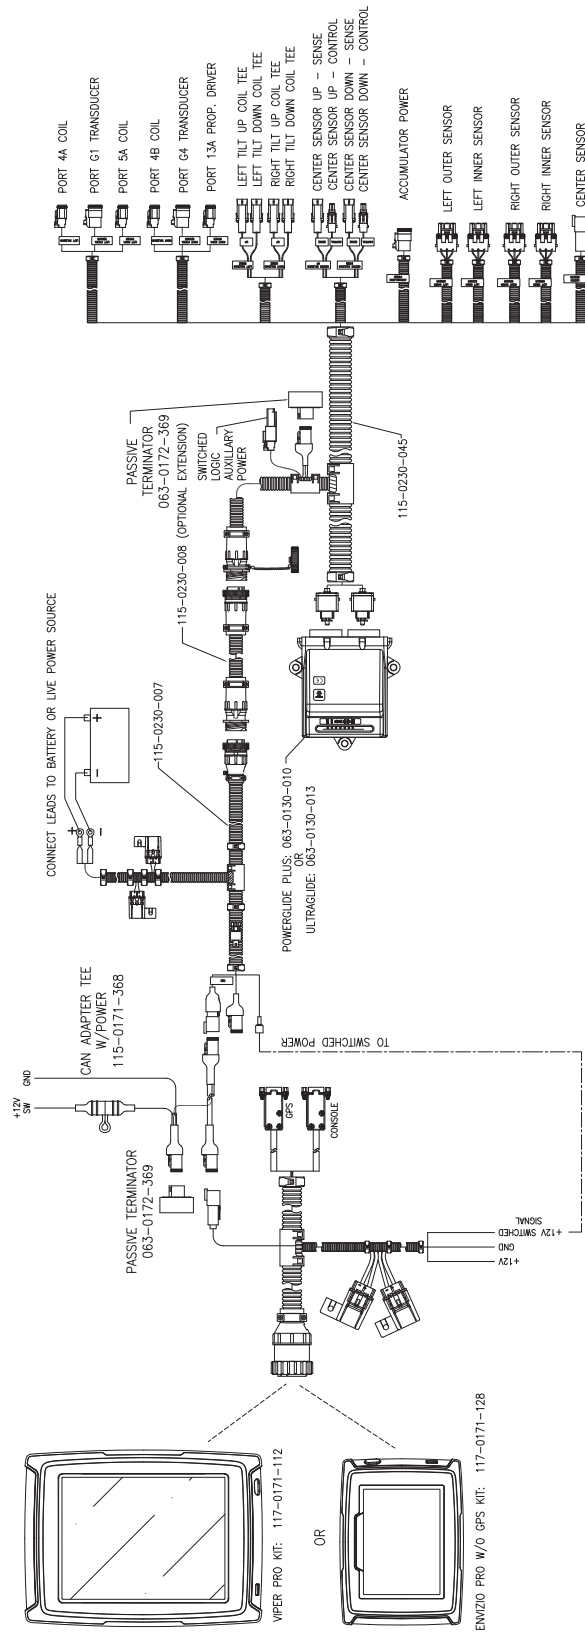

# Viper Pro & Envizio Pro



*UltraGlide Kit Contents*

This section contains a list of the components that are included in the UltraGlide AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

**TABLE 1. UltraGlide Installation Kit (P/N 117-0232-078)**

Picture	Item Description	Part Number	Qty.
Not Pictured	Manual - Miller Pro 1250 AutoBoom Installation	016-0230-078	1
	Valve - UltraGlide AutoBoom	063-0131-126	1
	Plate - Hydraulic Block Mounting	107-0171-802	1
	Sensor - Right Ultrasonic	063-0130-012	1
	Sensor - Left Ultrasonic	063-0130-014	1
	Sensor - Center Ultrasonic	063-0130-018	1

**TABLE 1. UltraGlide Installation Kit (P/N 117-0232-078)**

Picture	Item Description	Part Number	Qty.
	Bracket - Ultrasonic Sensor Boom Mounting Weldment	116-0159-684	3
	Cable - Boom Sense Adapter	115-0171-546	3
	Cable - 12' Extension	115-0230-008	1
	Cable - 2-Pin Deutsch Center Rack Control Boom Sense Adapter	115-0230-039	1
	Cable - 2-Pin Deutsch Directional Valve Boom Sense Adapter	115-0230-081	1
	U-Bolt - 4" W x 5" L x 3/8" Thread	107-0171-606	2
	U-Bolt - 3-1/16" W x 4" L x 3/8" Thread	107-0171-608	6
	Bolt - 5/16"-18 x 7/8" Hex	311-0052-104	4
	Bolt - 3/8"-16 UNC x 1-1/4" Hex	311-0054-106	15
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	31
	Washer - 5/16" Zinc Plated Lock	313-1000-019	4

TABLE 2. Hydraulic Kit (P/N 117-0134-078)








Picture	Item Description	Part Number	Qty.
	Fitting - 9/16" JIC M/F 90° Swivel Elbow	333-0012-042	3
	Fitting - 9/16" JIC M/M/F Swivel Run Tee Adapter	333-0012-043	1
	Fitting - 9/16" JIC (M) to 3/4" SAE O-Ring (M) Straight Adapter	333-0012-046	3
	Fitting - 9/16" SAE O-Ring (M) to 9/16" JIC (M) 90° Elbow	333-0012-072	4
	Hydraulic Hose - 9/16" JIC (F) to 9/16" JIC (F) - 80"	214-1000-386	4
	Hydraulic Hose - 9/16" JIC (F) to 9/16" JIC (M) - 64"	214-1000-387	1



TABLE 3. Optional Wheel Kit (P/N 117-0133-078)

Picture	Item Description	Part Number	Qty.
	Axle Assembly - Right Cushioned AutoBoom	063-0131-585	1
	Axle Assembly - Left Cushioned AutoBoom	063-0131-590	1
	Bracket - Miller Pro Left Weldment Receiver	116-0159-687	1
	Bracket - Miller Pro Right Weldment Receiver	116-0159-688	1





TABLE 3. Optional Wheel Kit (P/N 117-0133-078)


Picture	Item Description	Part Number	Qty.
	Bracket - Hub Retainer	107-0171-617	2
	Wheel	322-0131-008	2
	U-Bolt - 4" W x 5" L x 3/8" Thread	107-0171-606	4
	U-Bolt - 2-9/16" W x 3-1/2" L x 3/8" Thread	107-0171-616	4
	Bolt - 1/2"-13 x 1-1/2" SS Hex	311-0058-186	4
	Nut - 1/2"-13 Zinc Hex	312-1001-043	4
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	16

Picture	Item Description	Part Number	Qty.
Not Pictured	CAN AutoBoom Calibration & Operation Manual	016-0130-062	1
	Node - UltraGlide AutoBoom	063-0130-013	1
	Cable - Sensor	115-0171-527	2




Picture	Item Description	Part Number	Qty.
	Cable - AutoBoom Harness	115-0230-045	1
	Cable - Power/CAN Controller	115-0230-007	1

## *Install the UltraGlide Hydraulic System*



⚠ **WARNING**


The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.



⚠ **CAUTION**

When installing Autoboom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.

Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly cause damage to the AutoBoom hydraulic valve.



**NOTICE**


The appearance of the AutoBoom hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.

## Convert the Sprayer's Hydraulic Valve to Open Center (If Applicable)

By factory default, the machine's main hydraulic valve is configured as a "closed center" hydraulic system. In order for AutoBoom to function properly and to prevent the hydraulic system from overheating, Raven recommends converting the machine's hydraulic system to an "open center" system.

**Note:** Contact your Miller dealer to obtain the open center conversion kit.

FIGURE 1. Converted Hydraulic Valve - Closed Center to Open Center

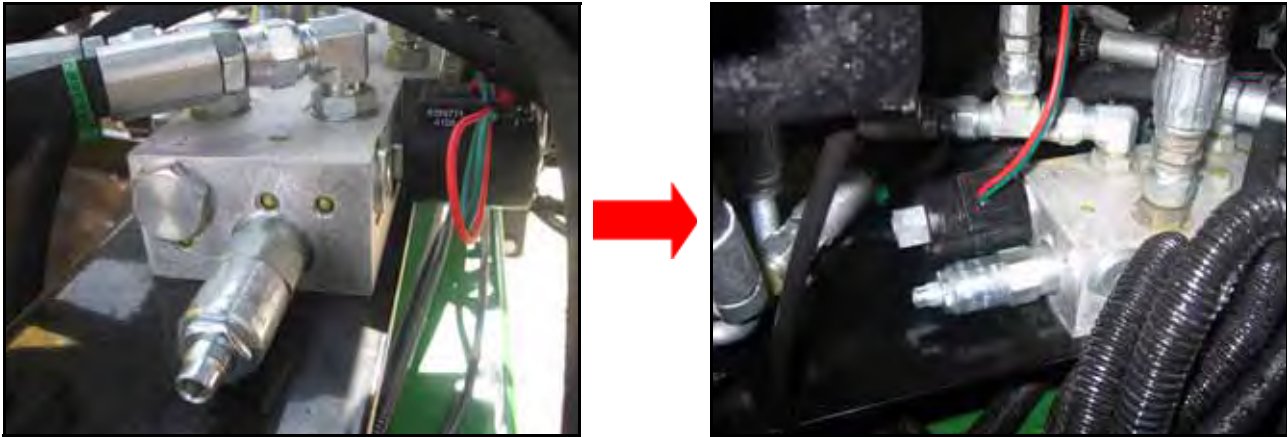


## Install the Fittings on the AutoBoom Valve

Before mounting the AutoBoom valve on the machine, install the proper fittings on the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.

Fitting	Part Number	Port
Fitting - 9/16" JIC (M) to 3/4" SAE O-Ring (M) Straight Adapter	333-0012-046	P, T, EF
Fitting - 9/16" JIC M/F 90° Swivel Elbow	333-0012-042	P, T, EF
Fitting - 9/16" SAE O-Ring (M) to 9/16" JIC (M) 90° Elbow	333-0012-072	LC, RC LV, RV

## Mount the AutoBoom Valve

**FIGURE 2. AutoBoom Valve Mounted on the Mounting Plate**

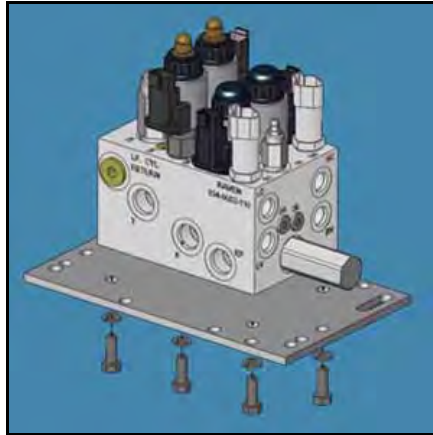


1. Secure the AutoBoom valve (P/N 063-0131-126) to the mounting plate (P/N 107-0171-802) using four 5/16"-18 x 7/8" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

**FIGURE 3. AutoBoom Valve Mounted to the Machine**



2. Secure the mounting plate to the machine's center rack using two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

## Install the Pressure and Tank Hoses



**⚠ WARNING**

Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that the hydraulic fluid within the machine's system may be extremely hot and under high pressure.


	<b>! CAUTION</b>
<p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.</p>	
<p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly cause damage to the AutoBoom hydraulic valve.</p>	

FIGURE 4. Pressure and Tank Hoses Installed



1. Disconnect the machine's pressure hose from the machine's hydraulic valve.
2. Install the straight end of the supplied hydraulic hose (P/N 214-1000-386) on the P port of the machine's hydraulic valve.
3. Connect the other end of the installed hydraulic hose to the installed fitting in Port EF of the AutoBoom valve.
4. Install the supplied hydraulic hose extension (P/N 214-1000-387) to the installed fittings in Port P of the AutoBoom valve.
5. Route and connect the installed hydraulic hose extension to the machine's pressure hose.
6. Disconnect the machine's tank hose from the return port of the machine's hydraulic valve.
7. Install a 9/16" JIC M/M/F swivel run tee adapter fitting (P/N 333-0012-043) on the machine's return port.
8. Connect the machine's tank hose to the opposite end of the installed tee fitting.
9. Install one end of the supplied hydraulic hose (P/N 214-1000-386) to the 90° end of the installed tee fitting.
10. Connect the other end of the installed hydraulic hose to the fittings installed in Port T of the AutoBoom valve.


## Install the Left and Right Cylinder Hoses

**FIGURE 5. Cylinder Hoses Installed**



1. Disconnect the machine's cylinder hose from the left tilt cylinder.
2. Remove the orifice fitting from the existing elbow fitting installed on the left tilt cylinder.
3. Install the orifice fitting in the installed elbow fitting in Port LV of the AutoBoom valve.
4. Route and connect the machine's left cylinder hose to the fittings installed in Port LV of the AutoBoom valve.
5. Install the supplied hydraulic hose (P/N 214-1000-386) on the machine's left tilt cylinder elbow fitting.
6. Route and connect the installed hydraulic hose to Port LC of the AutoBoom valve.
7. Disconnect the machine's cylinder hose from the right tilt cylinder.
8. Remove the orifice fitting from the existing elbow fitting installed on the right tilt cylinder.
9. Install the orifice fitting in the installed elbow fitting in Port RV of the AutoBoom valve.
10. Route and connect the machine's right cylinder hose to the fittings installed in Port RV of the AutoBoom valve.
11. Install the supplied hydraulic hose (P/N 214-1000-386) on the machine's right tilt cylinder elbow fitting.
12. Route and connect the installed hydraulic hose to Port RC of the AutoBoom valve.

# UltraGlide Hydraulic Schematic

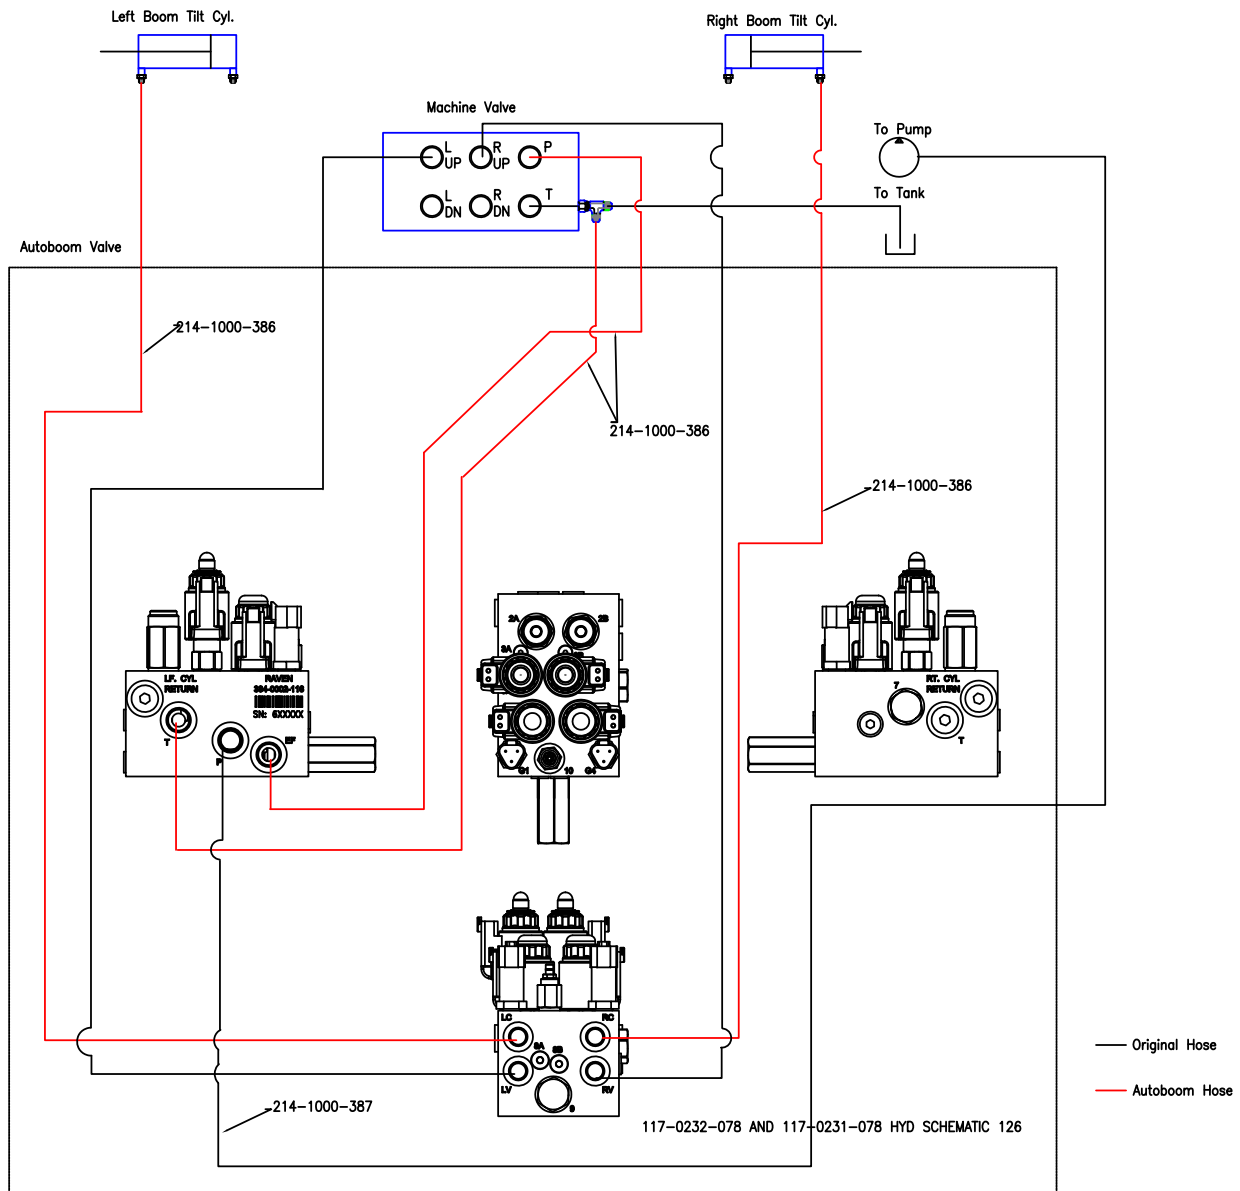

## Install the UltraGlide Sensors

### Boom Sensor Mounting Locations

Sensor mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the sensors on the boom, ensuring the sensors will not interfere with or be damaged while folding or unfolding the booms. The sensors should be mounted outside of the boom fold, but inside the boom breakaway.

### Mount the Boom Sensors

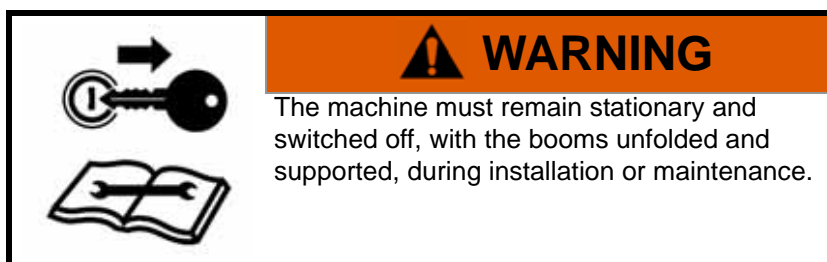


FIGURE 6. Center Sensor Mounted to Bracket



1. Secure the right sensor (P/N 063-0130-012) to the ultrasonic sensor boom mount weldment (P/N 116-0159-684) using four 3/8"-16 UNC x 1-1/4" hex bolts (P/N 311-0054-106) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

FIGURE 7. Mounted Boom Sensor



2. Mount the right sensor to the front of the right boom using two 3" W x 4" L x 3/8" thread U-bolts (P/N 107-0171-608) and four 3/8" zinc flanged lock nuts (P/N 312-1001-164).
3. Tighten the nuts to ensure the sensor is mounted securely.
4. Repeat the steps above to mount the remaining boom sensor(s).

## Mount the Center Rack Sensor

**FIGURE 8. Center Sensor Mounted to Bracket**

---



1. Secure the center sensor (P/N 063-0130-018) to the ultrasonic sensor boom mount weldment (P/N 116-0159-684) using four 3/8"-16 UNC x 1-1/4" hex bolts (P/N 311-0054-106) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

**FIGURE 9. Center Sensor Mounting Location**

---



2. Mount the center sensor (P/N 063-0130-018) to the machine's center rack using two 3" W x 4" L x 3/8" thread U-bolts (P/N 107-0171-608) and four 3/8" zinc flanged lock nuts (P/N 312-1001-164).
3. Tighten the nuts to ensure the sensor is mounted securely.

## Connect the Sensor Cables

1. Connect the left sensor cable (P/N 115-0171-527) to the connector on the outer left sensor.
2. Route the left sensor cable toward the AutoBoom valve.
3. Loop and tie-off any excess cable, allowing enough cable for boom folding and extension.
4. Repeat the steps above to connect the remaining sensor cable(s).

**Note:** The sensor cables will be connected to the AutoBoom system in the wiring phase of installation.



## Install the Gauge Wheels - Optional

### Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside the boom breakaway.

### Mount the Gauge Wheels

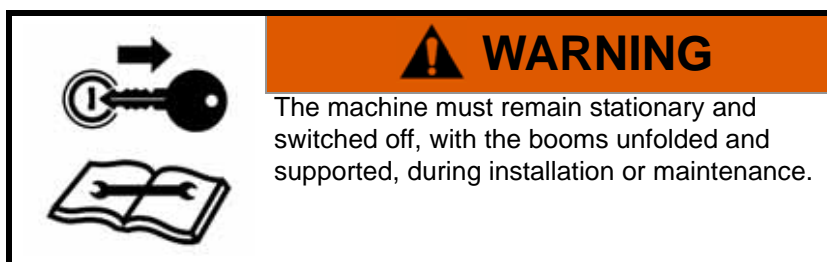



FIGURE 10. Gauge Wheel Mounting Location



1. Remove the lug nuts from the left wheel axle (P/N 063-0131-590).
2. Place the wheel (P/N 322-0131-008) on the wheel axle.
3. Align and place the hub retainer bracket (P/N 107-0171-619) over the wheel.
4. Reinstall the lug nuts on the wheel axle to secure the wheel and hub retainer bracket.
5. Mount the receiver bracket (P/N 116-0159-687) to the front of the left boom using two 2-9/16" W x 3-1/2" L x 3/8" thread U-bolts (P/N 107-0171-616), two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606), and eight 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).
6. Insert the wheel axle into the receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so) and wheel faces away from the machine.
7. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2"-13 zinc hex nuts (P/N 312-1001-043).
8. Repeat the steps above to install the right wheel.

## Install the UltraGlide Wiring


### Wiring Connections

	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>Always connect the power cable as the last step in the wiring process and verify that that power leads are connected with the correct polarity. Reversing power leads can cause severe damage to the equipment.</p>
---	--

**Note:** For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

### Install the AutoBoom Node

FIGURE 11. AutoBoom Node Installed

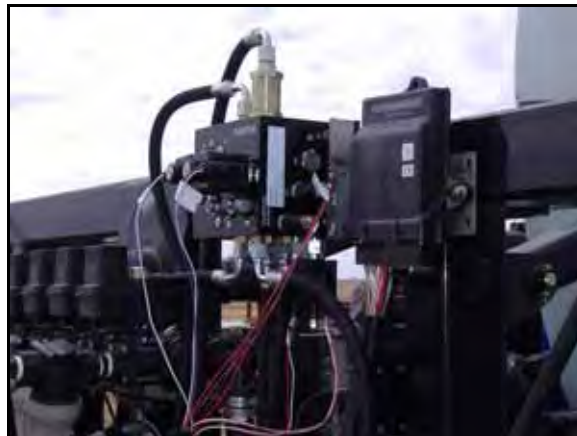

1. Mount the AutoBoom node (P/N 063-0130-013) to the to the valve mounting plate using three 3/8"-16 x 1/14" hex bolts (P/N 311-0054-106) and three 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

**Note:** The node should be installed so that the node connectors face down.

2. Insert the large, rectangular node connectors on the harness cable (P/N 115-0230-045) into the correct ports of the AutoBoom node.
3. Tighten the bolts on the node connectors to secure the connection.

### Connect the Harness to the Boom Function Controls

1. Locate the Left Press and Right Press connectors on the AutoBoom harness cable (P/N 115-0230-045).
2. Route the connectors to the AutoBoom valve (P/N 063-0131-126).
3. Connect the Left Press connector to Port G1 on the AutoBoom valve.
4. Connect the Right Press connector to Port G4 on the AutoBoom valve.
5. Locate the Left Solenoid and Right Solenoid connectors on the harness cable.

6. Connect the Left Solenoid connector to Port 4A on the AutoBoom valve.
7. Connect the Right Solenoid connector to Port 4B on the AutoBoom valve.
8. Locate the Left Prop and Right Prop connectors on the harness cable.
9. Connect the Left Prop connector to Port 5A on the AutoBoom valve.
10. Connect the Right Prop connector to Port 13A on the AutoBoom valve.

**FIGURE 12. Directional Valve Coil**



11. Disconnect the machine's harness cable connection from the C3 coil on the machine's hydraulic valve.
12. Install a boom sense adapter cable (P/N 115-0171-546) on the coil.
13. connect the machine's harness cable to the installed boom sense adapter cable.
14. Disconnect the machine's harness cable connection from the C5 coil on the machine's hydraulic valve.
15. Install a boom sense adapter cable (P/N 115-0171-546) on the coil.
16. Connect the machine's harness cable to the installed boom sense adapter cable.

**FIGURE 13. Machine's Up Cylinder Wiring**



17. Connect the Up connectors on the AutoBoom harness cable (P/N 115-0230-045) to the installed boom sense adapter cables.



FIGURE 14. Open Center Coil Wiring



18. Disconnect the machine's harness cable connection from the open center coil on the machine's hydraulic valve.
19. Install a boom sense adapter cable (P/N 115-0171-546) on the open center coil.
20. Connect the machine's harness cable to the installed boom sense adapter cable.
21. Connect the Open Center Valve connection on the AutoBoom harness cable to the single weatherpack connection of the installed boom sense adapter cable.

## Install the Center Rack Control

FIGURE 15. Directional Valve Boom Sense Adapter Cable Installed



1. Locate the machine's directional valve.
2. Disconnect the machine's directional valve connector from the directional valve.

**FIGURE 16. Center Rack Control Boom Sense Adapter Cable Installed**

3. Install the directional valve boom sense adapter cable (P/N 115-0230-081) on the machine's valve connector.
4. Connect the Center Solenoid Down Sense connections on the AutoBoom harness (P/N 115-0230-045) cable to the Open single weatherpack connections on the directional valve boom sense adapter cable (P/N 115-0230-081).

**FIGURE 17. Center Rack Control Coil**

5. Locate the machine's center rack coil.
6. Disconnect the machine's connections from the center rack control valve.
7. Install the center rack control boom sense adapter cable (P/N 115-0230-039) on the machine's center rack control coil.
8. Connect the machine's connections to the installed center rack control boom sense adapter cable.
9. Connect the center rack control boom sense adapter cable to the Center Solenoid Up Sense and Control connections on the AutoBoom harness cable.

## Connect the Harness Cable to the Controller Cable

1. Route the harness cable (P/N 115-0230-045) toward the machine's cab.
2. Connect the harness cable to the controller cable (P/N 115-0230-007).
3. Tighten the connector cap to secure the connection.



**Note:** *Be sure to allow enough slack in the cable to allow for boom racking. If the harness cable is not long enough, it may be necessary to connect the 12' extension cable (P/N 115-0230-008) between the harness and controller cables.*

### Connect the Controller (If Applicable)

1. Route the controller cable (P/N 115-0230-007) into the right side of the machine's cab.
2. Locate the two controller connectors and connect them to the AutoBoom controller (P/N 063-0130-011).

**Note:** *The AutoBoom controller should be mounted in the machine's cab so that the operator has easy access to it.*

### Connect the Field Computer (If Applicable)


Refer to the Installation & Operation Manual and the appropriate wiring schematic beginning on page 57 for installation and wiring instructions for the specific field computer being used.

### Connect the Power Leads


1. Locate the power cable that has the red and white power leads at one end.
2. Disconnect the machine's connectors from the battery terminals.
3. Install the red power lead on the positive battery terminal and reinstall the machine's battery connector.
4. Install the white power lead on the negative battery terminal and reinstall the machine's battery connector.

# UltraGlide Wiring Schematics

## AutoBoom Controller

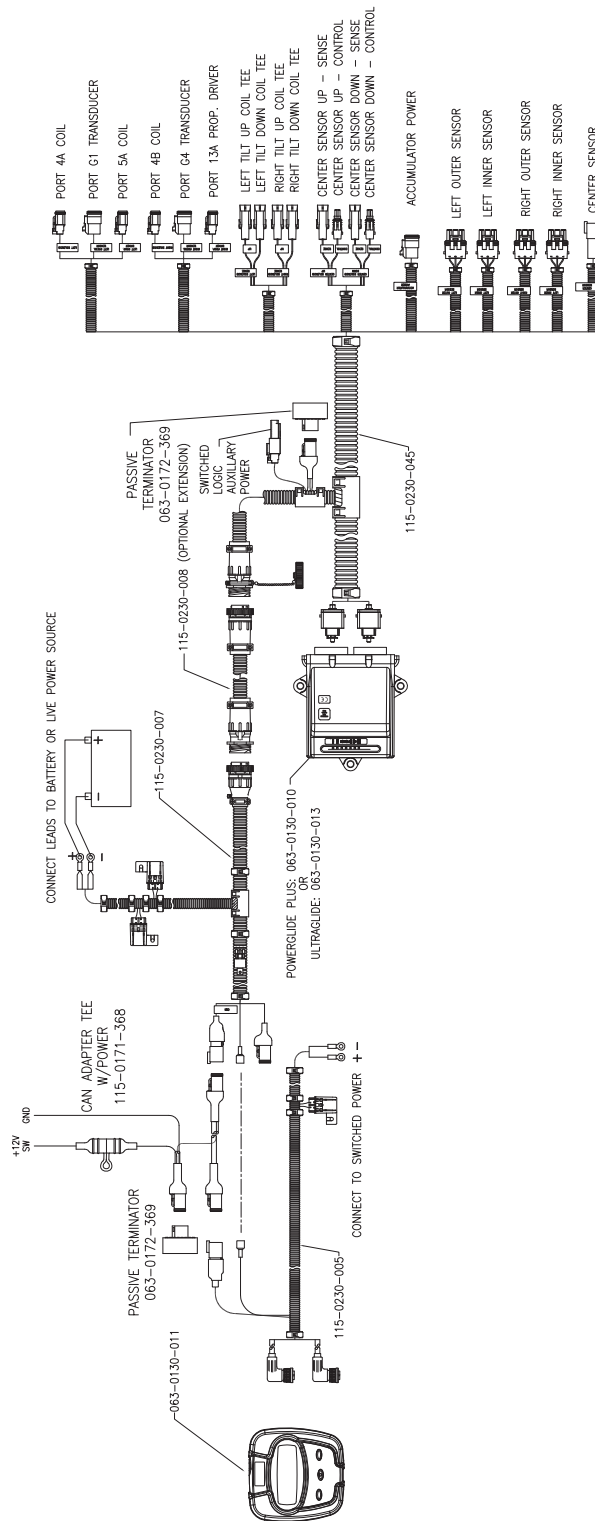


# Envizio Plus

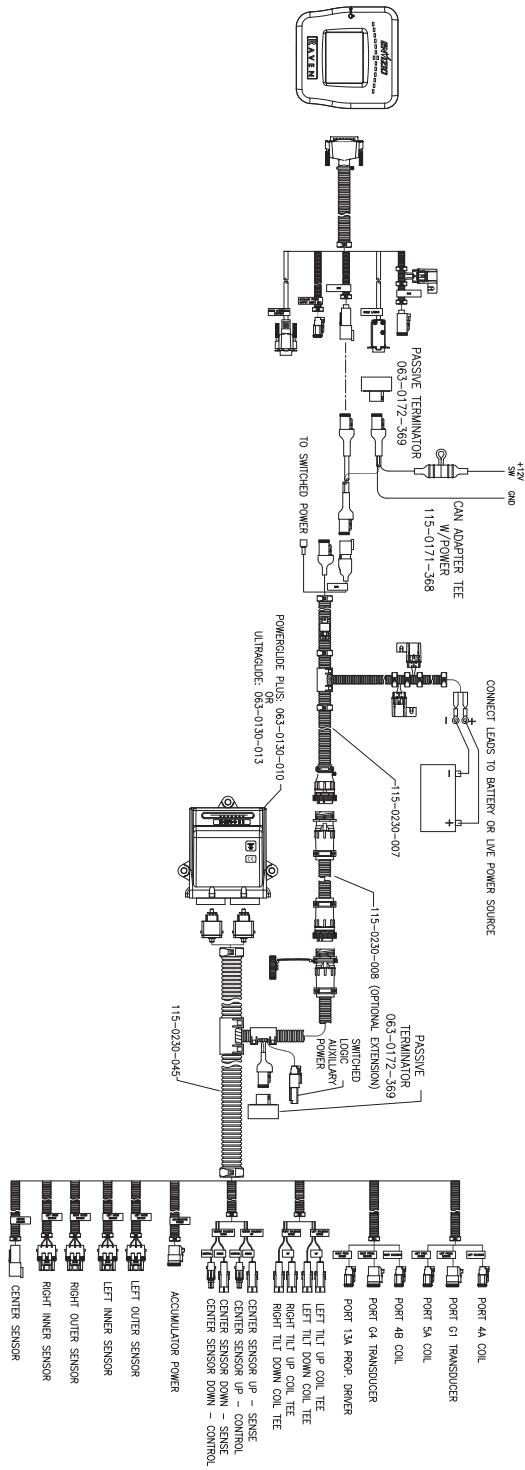




# SCS 4000/5000

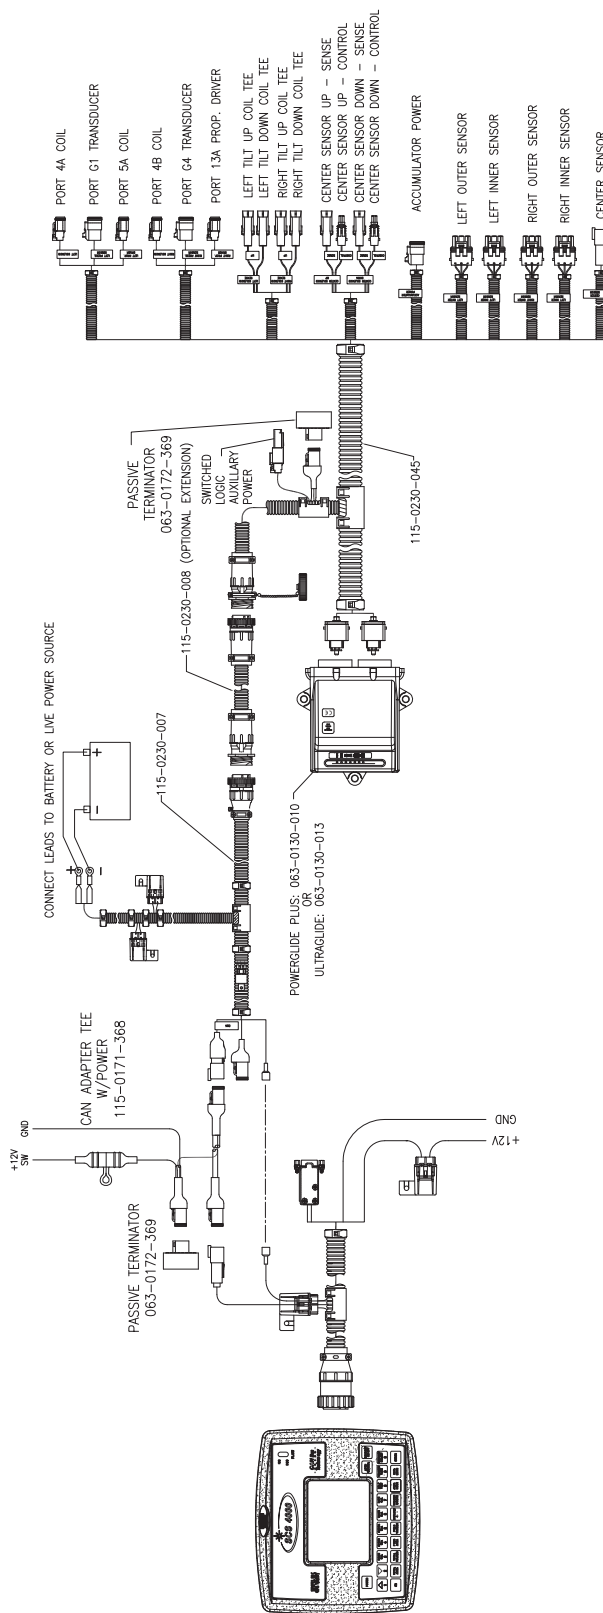

# Viper Pro & Envizio Pro

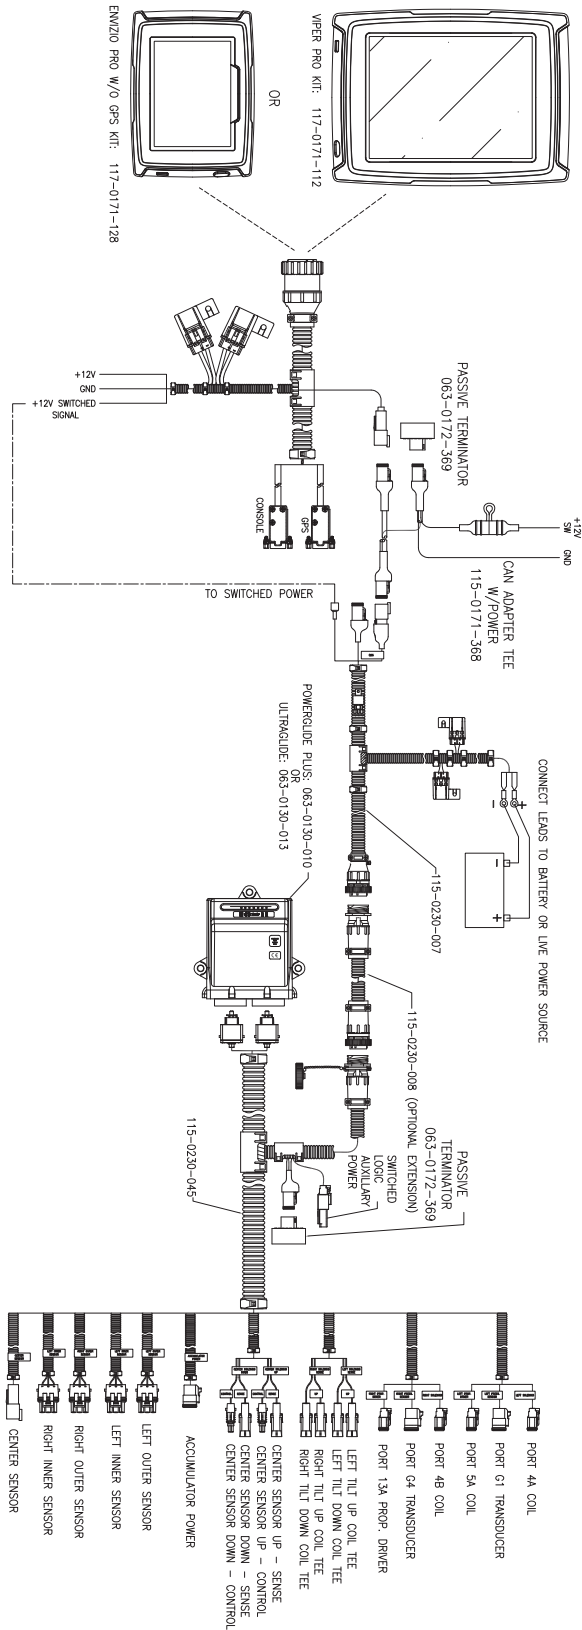

CHAPTER


6

*Chapter Title*

This section contains replacement part diagrams for PowerGlide, PowerGlide Plus, and UltraGlide systems. Refer to these diagrams when calling to request replacement parts.


## *Valve Blocks*

### PowerGlide Replacement Parts

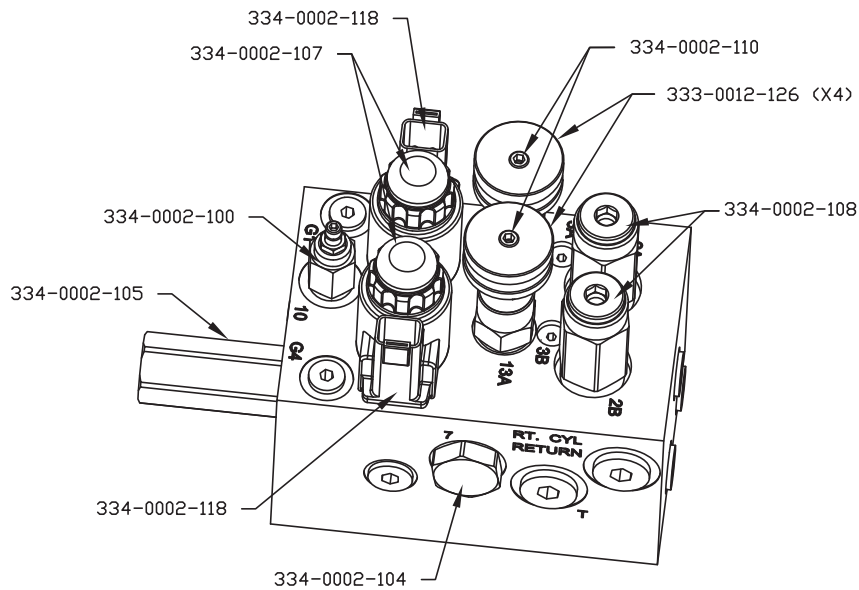


063-0131-127  
VALVE, HYDRAULIC POWERGLIDE,  
OPEN CENTER, AUTOBOOM

## PowerGlide Plus and UltraGlide Replacement Parts

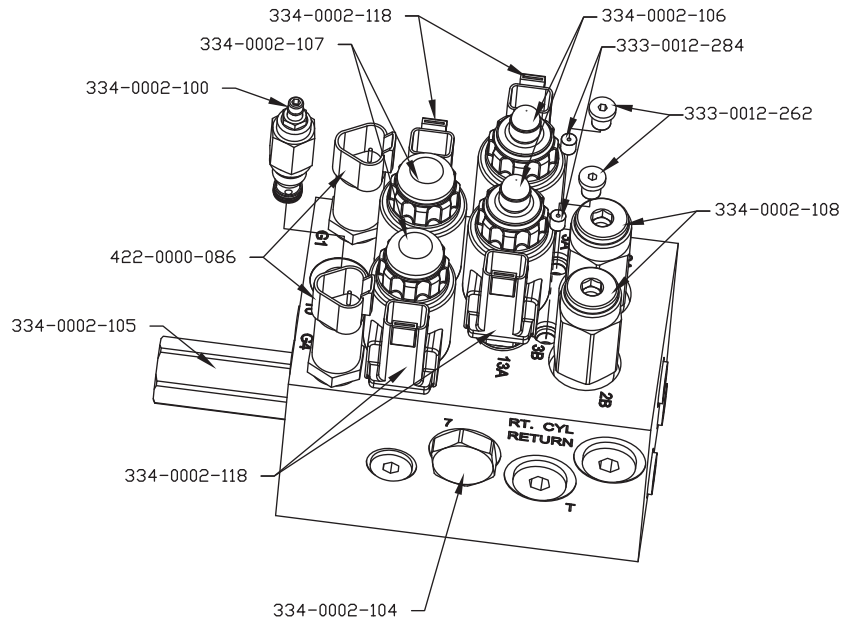


063-0131-126  
VALVE, HYDRAULIC POWERGLIDE  
PLUS/ULTRAGLIDE, OPEN CENTER, AUTOBOOM

## Wheels

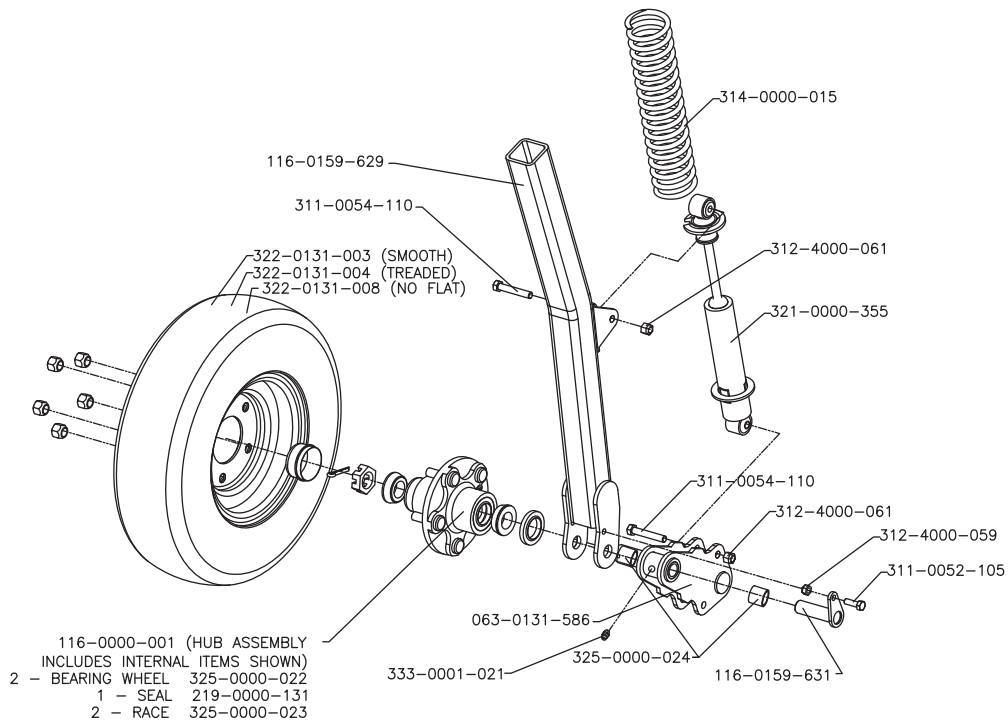

# Sensors

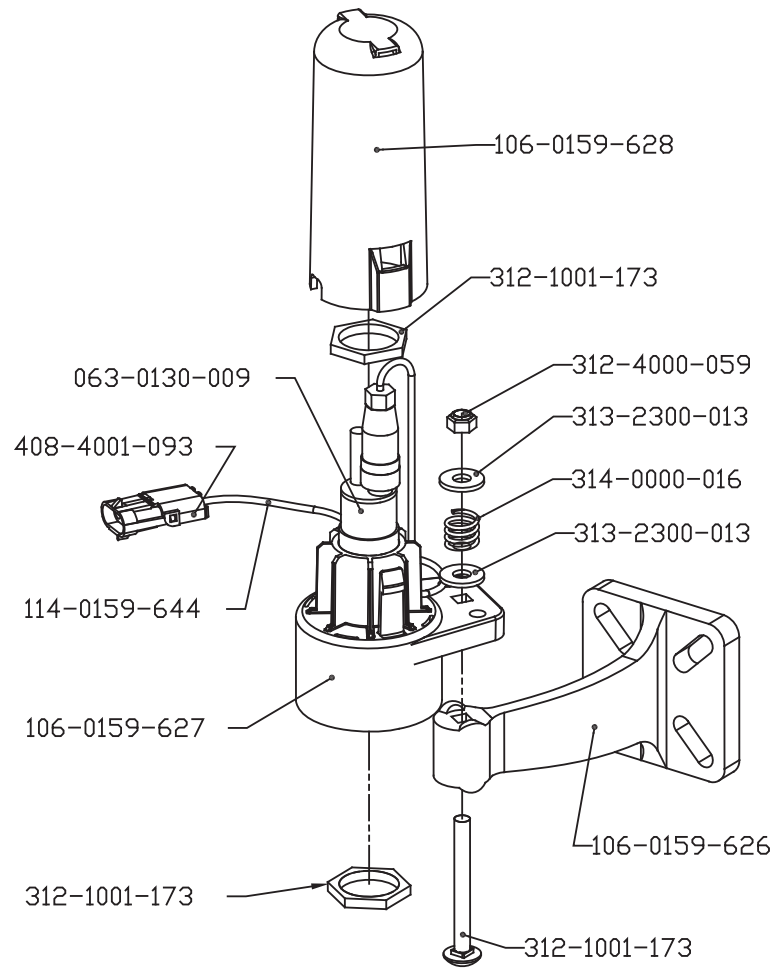



## K

**Kit Contents**

- PowerGlide 5
- PowerGlide Plus 19
- UltraGlide 39

## P

**PowerGlid**

- Kit Contents 5

**PowerGlide 5**

## Install

- Gauge Wheels 14
  - Gauge Wheel Mounting Locations 14
  - Mounting the Gauge Wheels 14
- Hydraulic System 8
  - Converting the Sprayer's Hydraulic Valve to Open Center 8
  - Hydraulic Schematic 13
  - Installing Firttings on the AutoBoom Valve 9
  - Installing the Left and Right Cylinder Hoses 12
  - Installing the Pressure and Tank Hoses 10
  - Mounting the AutoBoom Valve 10
- Wiring 15
  - Connecting the Controller 16
  - Connecting the Harness Cable to the Controller Cable 15
  - Connecting the Harness to the Boom Function Controls 15
  - Connecting the Power Leads 16
  - PowerGlide Wiring Schematic 17
  - Wiring Connections 15

**PowerGlide Plus 19**

## Install

- Gauge Wheels 31
  - Gauge Wheel Mounting Locations 31
  - Mounting the Gauge Wheels 31
- Hydraulic System 23
  - Converting the Sprayer's Hydraulic Valve to Open Center 23
  - Hydraulic Schematic 30
  - Installing Fittings on the AutoBoom Valve 26
  - Installing the Left and Right Cylinder Hoses 29
  - Installing the Pressure and Tank Hoses 28
  - Mounting the AutoBoom Valve 27
  - Removing the Orifice Fittings 24
- Wiring 32
  - Connecting the Controller 34
  - Connecting the Field Computer 34
  - Connecting the Harness Cable to the Controller Cable 34
  - Connecting the Harness to the Boom Function Controls 32
  - Connecting the Power Leads 34
  - Installing the AutoBoom Node 32
  - Wiring Connections 32
  - Wiring Schematics
    - AutoBoom Controller 35
    - Envizio Plus 36

SCS 4000/5000 37

Viper Pro &amp; Envizio Pro 38

Kit Contents 19

## R

**Replacement Parts**

- Sensors 63
- Valve Blocks 61
  - PowerGlide 61
  - PowerGlide Plus and UltraGlide 62
- Wheels 62

## U

**UltraGlide 39**

## Install

- Gauge Wheels 51
  - Gauge Wheel Mounting Locations 51
  - Mounting the Gauge Wheels 51
- Hydraulic System 43
  - Converting the Sprayer's Hydraulic Valve to Open Center 44
  - Hydraulic Schematic 48
  - Installing Fittings in the AutoBoom Valve 44
  - Installing the Left and Right Cylinder Hoses 47
  - Installing the Pressure and Tank Hoses 45
  - Mounting the AutoBoom Valve 45
- Sensors 49
  - Boom Sensor Mounting Locations 49
  - Connecting the Sensor Cables 50
  - Mounting the Boom Sensors 49
  - Mounting the Center Rack Sensor 50
- Wiring 52
  - Connecting the Controller 56
  - Connecting the Field Computer 56
  - Connecting the Harness Cable to the Controller Cable 55
  - Connecting the Harness to the Boom Function Controls 52
  - Connecting the Power Leads 56
  - Installing the AutoBoom Node 52
  - Installing the Center Rack Control 54
  - Wiring Connections 52
  - Wiring Schematics
    - AutoBoom Controller 57
    - Envizio Plus 58
    - SCS 4000/5000 59
    - Viper Pro & Envizio Pro 60

Kit Contents 39





**RAVEN**

# **RAVEN INDUSTRIES**

## **Limited Warranty**

---

### ***What Does this Warranty Cover?***

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Product under normal use, maintenance, and service.

### ***How Long is the Coverage Period?***

Raven Applied Technology Division products are covered by this warranty for 12 months after the date of purchase. This warranty coverage applies only to the original owner and is non-transferrable.

### ***How Can I Get Service?***

Bring the defective part and proof of purchase to your Raven Dealer. If your Dealer agrees with the warranty claim, the Dealer will send the part and proof of purchase to their distributor or to Raven Industries for final approval.

### ***What Will Raven Industries Do?***

Upon confirmation of the warranty claim, Raven Industries will, at our discretion, repair or replace the defective part and pay for return freight.

### ***What is not Covered by this Warranty?***

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

**R A V E N**

Miller Pro 1250  
AutoBoom™ Installation Manual  
(P/N 016-0230-078 Rev B 02/10 E15641)

*Simply improving your position.™*



Raven Industries  
Applied Technology Division  
P.O. Box 5107  
Sioux Falls, SD 57117-5107

Toll Free (U.S. and Canada): (800)-243-5435  
or Outside the U.S. :1 605-575-0722  
Fax: 605-331-0426  
[www.ravenprecision.com](http://www.ravenprecision.com)  
[atdinfo@ravenind.com](mailto:atdinfo@ravenind.com)

Notice: This document and the information provided are the property of Raven Industries, Inc. and may only be used as authorized by Raven Industries, Inc. All rights reserved under copyright laws.