
**Miller Condor GC Series and New
Holland Guardian R Series Spray-Air
Boom AutoBoom® Installation
Manual**

P/N 016-0230-109 Rev. B

04/15

E23879

Copyright 2013, 2015

Disclaimer

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

Chapter 1	<i>Important Safety Information</i>	1
	Hydraulic Safety	2
	Electrical Safety	2
Chapter 2	<i>Introduction</i>	3
	Introduction	3
	Preparing for Installation	4
	Recommendations	4
	Point of Reference	4
	Hydraulic Fittings	4
	Updates	5
Chapter 3	<i>PowerGlide Plus</i>	7
	PowerGlide Plus Kit Contents	7
	Install the PowerGlide Plus Hydraulic System	10
	Remove the Orifice Fittings	11
	Install Fittings on the AutoBoom Valve	13
	Mount the AutoBoom Valve	14
	Install the Pressure and Tank Hoses	15
	Install Left and Right Cylinder Hoses	16
	Install the Gauge Wheels	18
	Gauge Wheel Mounting Locations	18
	Mount the Gauge Wheels	18
	Install the PowerGlide Plus Wiring	19
	Install the AutoBoom Node	19
	Connect the Harness - Power/CAN Connectors	19
	Connect the Harness to the Tilt and Center Rack Controls	20
	Connect the Harness to the AutoBoom Valve	20
Chapter 4	<i>UltraGlide</i>	23
	UltraGlide Kit Contents	23
	Install the UltraGlide Hydraulic System	27
	Install Fittings on the AutoBoom Valve	27
	Mount the AutoBoom Valve	27
	Install the Pressure and Tank Hoses	28
	Install Left and Right Cylinder Hoses	29
	Install the UltraGlide Sensors	32
	Boom Sensor Mounting Locations	32
	Mount the Center Rack Sensor	33
	Connect the Sensor Cables	34
	Install the Gauge Wheels - Optional	35
	Gauge Wheel Mounting Locations	35

Table of Contents

Mount the Gauge Wheels	35
Install the UltraGlide Wiring	36
Install the AutoBoom Node	36
Connect the Harness - Power/CAN Connectors	36
Connect the Harness to the Tilt and Center Rack Controls	37
Connect the Harness to the AutoBoom Valve	37
Connect the Harness Cable to the Sensors	38
Install the Node Power Jumper (If Applicable)	38
Connect the Field Computer (If Applicable)	38
Chapter 5 Replacement Parts	39
Valves	39
Wheels	40
Sensors	40

CHAPTER

1

*Important Safety
Information*

NOTICE

Read this manual and the operation and safety instructions included with your implement and/or controller carefully before installing the AutoBoom™ system.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of your Raven equipment, contact your local Raven dealer for support.
- Follow all safety labels affixed to the AutoBoom system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact your local Raven dealer.

When operating the machine after installing AutoBoom, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate AutoBoom or any agricultural equipment while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when AutoBoom is engaged.
- Disable AutoBoom when exiting from the operator's seat and machine.
- Do not drive the machine with AutoBoom enabled on any public road.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling AutoBoom when the safe working distance has been diminished.
- Ensure AutoBoom is disabled prior to starting any maintenance work on AutoBoom or the machine.

WARNING

- When starting the machine for the first time after installing AutoBoom, be sure that all persons stand clear, in case a hose has not been properly tightened.
- The machine must remain stationary and switched off, with the booms unfolded and supported while installation or maintenance is conducted.

CAUTION

Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on the hydraulic system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when opening a system that has been previously pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic fluid may be extremely hot and under high pressure. Caution must be exercised.
- Any work performed on the hydraulic system must be done in accordance with the machine manufacturer's approved maintenance instructions.
- When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure that precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will adversely reduce performance and possibly damage the AutoBoom hydraulic valves.

Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.

Introduction

Congratulations on your purchase of the Raven AutoBoom system! This system is designed to provide automated boom height adjustment for agricultural equipment.

This manual applies to the following machines. For future reference, write your serial number in the space below.

MAKE: Miller
MODEL: Condor GC Series Spray-Air Boom

MAKE: New Holland
MODEL: Guardian R Series Spray-Air Boom

FIGURE 1. New Holland Guardian R Series Spray-Air Boom



Note: *This manual contains the installation instructions for the PowerGlide Plus and UltraGlide systems. Be sure to identify which system you have and follow only the instructions for that system.*

Preparing for Installation

Before installing AutoBoom, park the machine where the ground is level, clean, and dry. Leave the machine turned off for the duration of the installation process.

During the installation process, follow good safety practices. Be sure to carefully read the instructions in this manual as you complete the installation process.

Recommendations

Raven Industries recommends the following best practices before installing or operating the AutoBoom system for the first time, at the start of the season, or when moving the AutoBoom system to another machine:

- Ensure the machine's hydraulic filters have been recently changed and there are no issues with the machine's hydraulic system (e.g., pump issues, faulty hydraulic motors, fine metal deposits in the hydraulic hoses, etc.).
- Operate each of the machine's boom hydraulic functions (i.e., tilt, fold, center rack, tongue extension, or other hydraulic valve functions) three times to ensure the machine's hydraulic valve is using fresh oil and debris is flushed from the hydraulic hoses, valves, and filters.
- Upon installation of the AutoBoom system, operate the boom and center rack raise/lower functions through the machine's manual control functions first before operating them via the AutoBoom controller/field computer to ensure the hydraulic system has been installed correctly and air is released from the system.

Raven Industries recommends the following best practices when installing the AutoBoom system.

- Use part numbers to identify the parts.
- Do not remove the plastic wrap from a part until it is necessary for installation.
- Do not remove plastic caps from a part until it is necessary for installation.

Tools Needed

The following tools are recommended for installation of the AutoBoom system:

- SAE standard-sized wrenches
- Cable ties
- Set of tools

Point of Reference

The instructions in this manual assume that you are standing behind the machine, looking toward the cab.

Hydraulic Fittings

This manual may reference the following types of hydraulic fittings:

- SAE O-ring fittings
- ORFS (O-Ring Face Seal) fittings
- JIC fittings

SAE O-ring fitting



ORFS fitting



JIC fitting



Updates

Software and manual updates are available on the Raven Applied Technology website:

<http://www.ravenhelp.com>

At Raven Industries, we strive to make your experience with our products as rewarding as possible. One way to improve this experience is to provide us with feedback on this manual.

Your feedback will help shape the future of our product documentation and the overall service we provide. We appreciate the opportunity to see ourselves as our customers see us and are eager to gather ideas on how we have been helping or how we can do better.

To serve you best, please send an email with the following information to

techwriting@ravenind.com

-Miller Condor GC Series and New Holland Guardian R Series Spray-Air Boom AutoBoom® Installation Manual

-P/N 016-0230-109 Rev. B

-Any comments or feedback (include chapter or page numbers if applicable).

-Let us know how long have you been using this or other Raven products.

We will not share your email or any information you provide with anyone else. Your feedback is valued and extremely important to us.

Thank you for your time.

CHAPTER

3

PowerGlide Plus

PowerGlide Plus Kit Contents

This section contains a list of the components that are included in the PowerGlide Plus AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

TABLE 1. PowerGlide Plus Installation Kit (P/N 117-0231-109)


Picture	Item Description	Part Number	Qty.
Not Pictured	Manual - CAN AutoBoom Calibration & Operation	016-0130-062	1
Not Pictured	Manual - Miller Condor GC Series and New Holland Guardian R Series Spray Air Boom AutoBoom Installation	016-0230-109	1
	Valve - PowerGlide Plus AutoBoom	063-0131-124	1
	Plate - Hydraulic Block Mounting	107-0171-802	1
	AutoBoom PowerGlide Plus CAN Node	063-0130-010	1
	Cable - AutoBoom Harness	115-0230-102	1

TABLE 1. PowerGlide Plus Installation Kit (P/N 117-0231-109)






Picture	Item Description	Part Number	Qty.
	U-Bolt - 4" W x 5" L x 3/8" Thread	107-0171-606	2
	Bolt - 5/16"-18 x 7/8" Grade 8 Hex	311-0052-104	4
	Bolt - 3/8"-16 UNC x 1-1/4" Hex	311-0054-106	3
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	7
	Washer - 5/16" Zinc Plated Lock	313-1000-019	4

TABLE 2. Hydraulic Kit (P/N 117-0134-081)

Picture	Item Description	Part Number	Qty.
	Fitting - 13/16" ORFS M/M/F Swivel Run Tee Adapter	333-0012-028	2
	Fitting - 11/16" ORFS M/M/F Swivel Run Tee Adapter	333-0012-069	2
	Fitting - 11/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter	333-0012-084	2
	Fitting - 11/16" ORFS M/F Swivel 45° Elbow	333-0012-090	1
	Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M)	333-0012-168	2

TABLE 2. Hydraulic Kit (P/N 117-0134-081)




Picture	Item Description	Part Number	Qty.
	Fitting - 11/16" Hex 9/16" SAE O-Ring Plug	333-0012-194	2
	Hydraulic Hose - 9/16" ORFS 90° to 9/16" ORFS - 44"	214-1000-494	2
	Hydraulic Hose - 3/4" ORFS 90° to 9/16" ORFS - 44"	214-1000-495	2

TABLE 3. PowerGlide Plus Wheel Kit (P/N 117-0133-081)











Picture	Item Description	Part Number	Qty.
	Axle Assembly - Right Cushioned AutoBoom	063-0131-585	1
	Axle Assembly - Left Cushioned AutoBoom	063-0131-590	1
	Bracket - Left Miller Condor Spray-Air Boom Weldment Receiver	116-0159-697	1
	Bracket - Right Miller Condor Spray-Air Boom Weldment Receiver	116-0159-698	1
	Wheel	322-0131-008	2
	U-Bolt - 2-1/2" ID x 3.12" L x 3/8"-16 Thread Zinc Plated Clamp	435-3003-043	8
	Bolt - 1/2"-13 x 1-1/2" SS Hex	311-0058-186	4

TABLE 3. PowerGlide Plus Wheel Kit (P/N 117-0133-081)


Picture	Item Description	Part Number	Qty.
	Nut - 1/2"-13 Zinc Hex	312-1001-043	4
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	16

Install the PowerGlide Plus Hydraulic System



⚠ WARNING


The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.



⚠ CAUTION

When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material from being introduced into the machine's hydraulic system.

Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.



NOTICE

The appearance of the AutoBoom hydraulic valve may vary slightly from the images contained in this manual. However, the fittings, hose connections, and cable connections remain the same.

Remove the Orifice Fittings

Before populating the hydraulic fittings on the AutoBoom valve, it is necessary to remove orifice fittings from the valve in the PowerGlide Plus system. Failure to remove these fittings from the valve will restrict the down speed of the booms when the system is enabled.

FIGURE 1. Port 3A and 3B Location



1. Locate Ports 3A and 3B on the AutoBoom valve (P/N 063-0131-124).

FIGURE 2. Coil Removed from the AutoBoom Valve



2. Remove the coils from the solenoids near Ports 3A and 3B to gain easy access to those ports.

FIGURE 3. Port Plugs Removed from the AutoBoom Valve



3. Use an Allen wrench to remove the plugs from Ports 3A and 3B.

FIGURE 4. Orifice Fitting Removed from the AutoBoom Valve



Orifice Fitting
Removed - Keep for
Future Use

4. Remove the orifice fittings from Ports 3A and 3B.

Important: *Tip the AutoBoom valve on its side and use the Allen wrench to remove the orifice from the cavity, taking care not to let the fitting fall into the valve.*

FIGURE 5. Port Plug Reinstalled on the AutoBoom Valve



- Use the Allen wrench to reinstall the port plugs on Ports 3A and 3B of the AutoBoom valve.

FIGURE 6. Coil Reinstalled on the AutoBoom Valve



- Reinstall the coils on the solenoids of the AutoBoom valve.


Install Fittings on the AutoBoom Valve

Before mounting the AutoBoom valve on the machine, install the proper fittings in the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.

Fitting	Part Number	Port
Fitting - 13/16" ORFS (M) to 3/4" SAE O-ring (M)	333-0012-168	P, T
Fitting - 11/16" ORFS (M) to 9/16" SAE O-ring	333-0012-084	LC, RC
Fitting - 11/16" hex 9/16" SAE O-ring plug	333-0012-194	LV, RV


Mount the AutoBoom Valve

FIGURE 7. AutoBoom Valve Mounted on Valve Mounting Plate

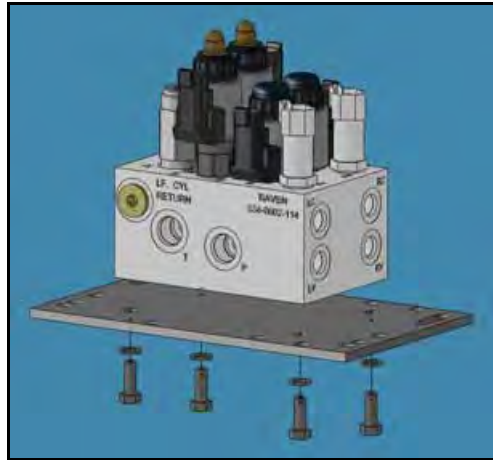


1. Secure the AutoBoom valve (P/N 063-0131-124) to the mounting bracket (P/N 107-0171-802) using four 5/16" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

FIGURE 8. AutoBoom Valve Mounted on the Machine

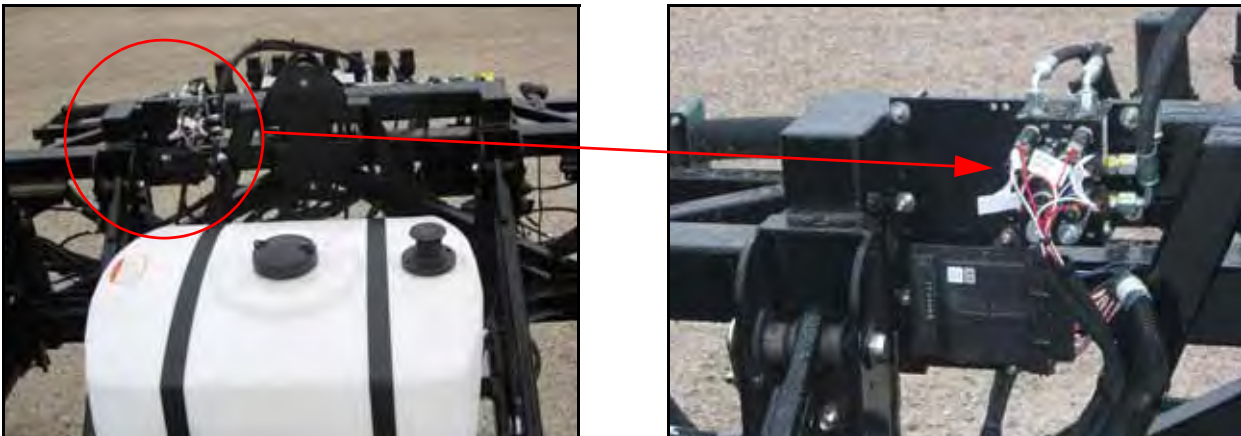


2. Secure the mounting bracket on the inside of the machine's center rack using two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Install the Pressure and Tank Hoses



⚠ WARNING

Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that hydraulic fluid within the machine's system may be extremely hot and under high pressure.




⚠ CAUTION

When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.

Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.

FIGURE 9. Pressure and Tank Hoses Installed

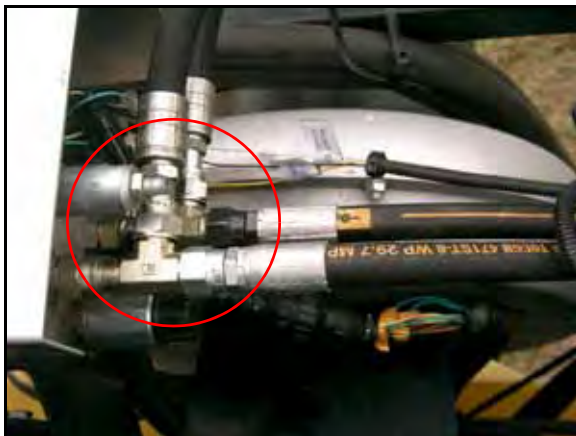

1. Disconnect the machine's pressure line from the machine's hydraulic valve.
2. Install a 13/16" ORFS (F) M/M/F swivel run tee adapter fitting (P/N 333-0012-028) in the machine's pressure port.
3. Attach the machine's pressure line to the opposite end of the installed tee fitting.
4. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-495) to the 90° end of the installed tee fitting.
5. Connect the 90° end of the hydraulic hose to Port P on the AutoBoom valve.
6. Disconnect the machine's tank line from the machine's hydraulic valve.

7. Install a 13/16" ORFS (F) M/M/F swivel run tee adapter fitting (P/N 333-0012-028) in the machine's tank port.
8. Attach the machine's tank line to the opposite end of the installed tee fitting.
9. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-495) to the 90° end of the installed tee fitting.
10. Connect the 90° end of the hydraulic hose to Port T on the AutoBoom valve.


Install Left and Right Cylinder Hoses

FIGURE 10. Left and Right Cylinder Hoses Installed



1. Disconnect the machine's left and right tilt hoses from the machine's manifold.
2. Install 11/16" ORFS M/M/F swivel run tee adapter fittings (P/N 333-0012-069) in the tilt hose ports of the machine's manifold.
3. Connect the machine's right tilt hose to the opposite end of the tee fitting.
4. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-494) to the 90° end of the tee adapter installed in the right tilt port.
5. Connect the 90° end of the hydraulic hose to the installed fitting in Port RC on the AutoBoom valve.
6. Install the 11/16" ORFS M/F swivel elbow fitting (P/N 333-0012-090) on the opposite end of the tee adapter installed on the left tilt port.
7. Connect the machine's left tilt hose to the installed elbow fitting.
8. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-494) to the 90° end of the tee adapter.
9. Connect the 90° end of the hydraulic hose to the installed fitting in Port LC on the AutoBoom valve.


PowerGlide Plus Hydraulic Schematic

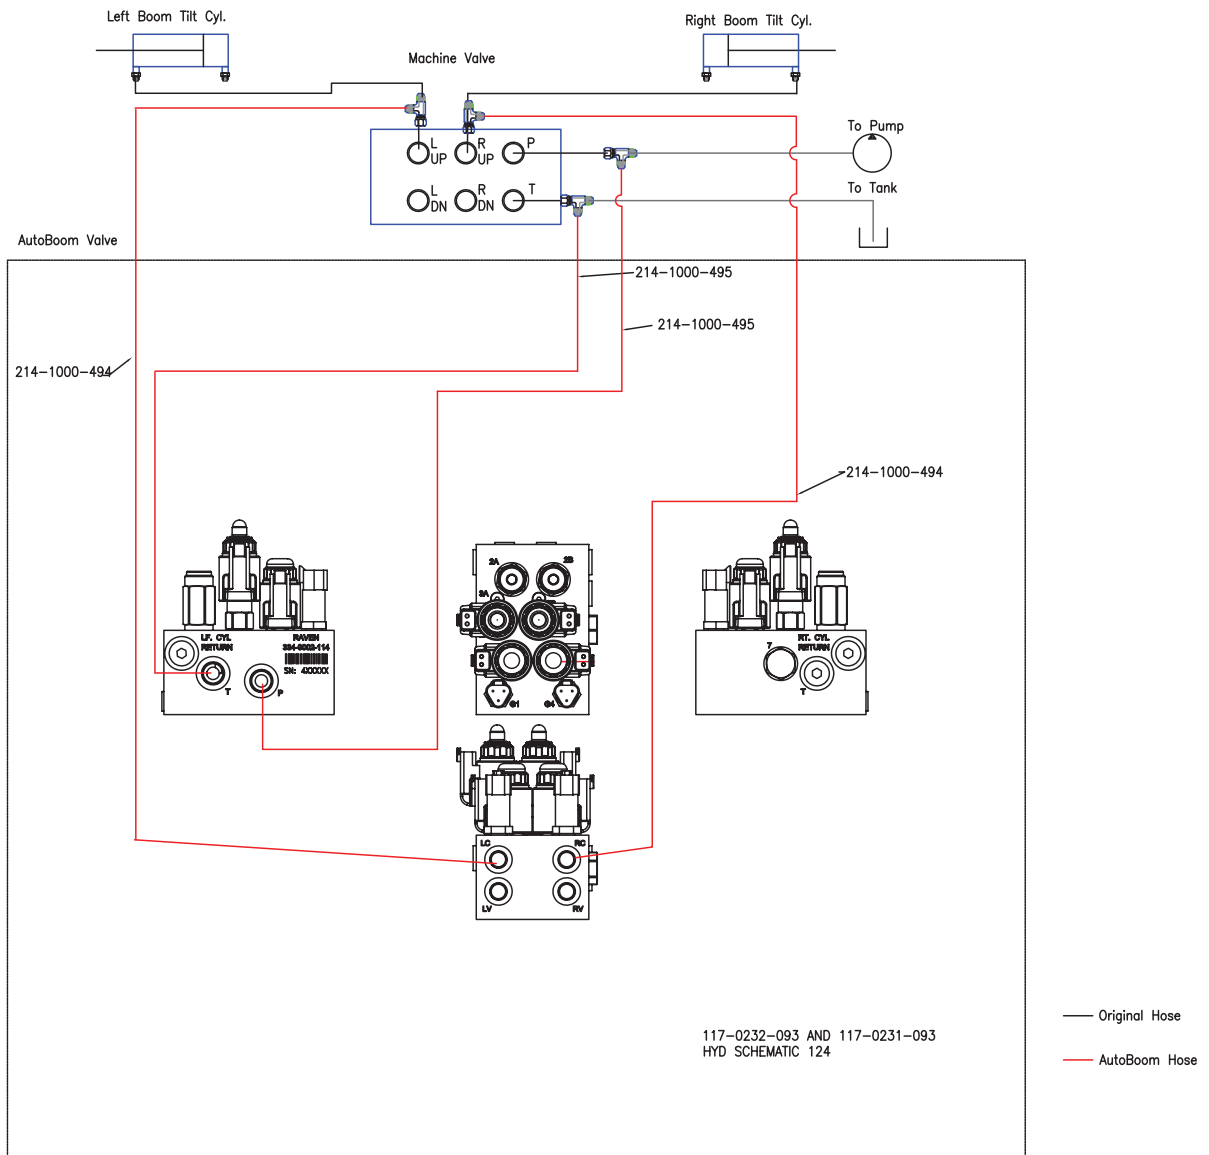

Install the Gauge Wheels

Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside of the boom breakaway.

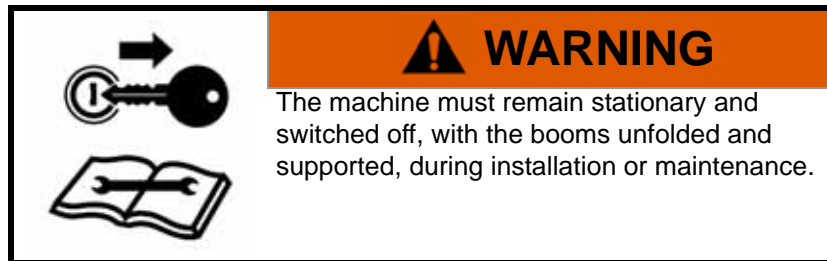

Mount the Gauge Wheels

Note: The appearance of the wheel axles may vary.


FIGURE 11. Gauge Wheel Installed



1. Remove the nuts from the left wheel axle (P/N 063-0131-590).
2. Place the wheel (P/N 322-0131-008) on the left wheel axle.
3. Reinstall the lug nuts on the wheel axle to secure the wheel and hub retainer bracket.
4. Mount the left wheel receiver bracket (P/N 116-0159-697) to the front of the left boom by installing four 2-1/2" ID x 3.12" L x 3/8" thread zinc plated U-bolts (P/N 435-3003-043) through the back of the receiver bracket and securing them with eight 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).
5. Insert the left wheel axle into the left wheel receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so).
6. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2" zinc hex nuts (P/N 312-1000-043).
7. Repeat the steps above to install the right wheel.

Install the PowerGlide Plus Wiring


Wiring Connections

	<div style="background-color: yellow; text-align: center; padding: 5px;">⚠ CAUTION</div> <p>Always connect the power cable as the last step in the wiring process and verify that the power leads are connected with the correct polarity. Reversing power leads can cause severe damage to the equipment.</p>
---	---

For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

Install the AutoBoom Node

FIGURE 12. AutoBoom Node Mounting Location

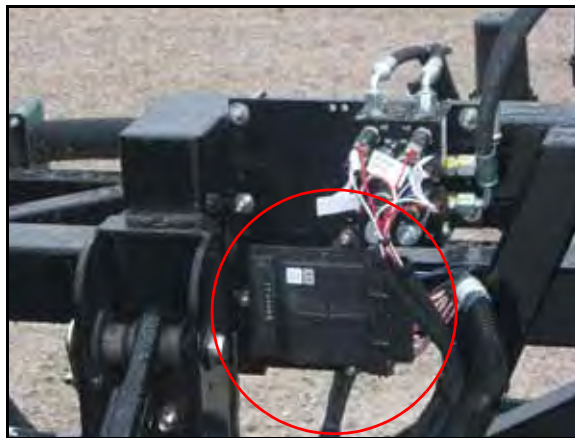

1. Mount the AutoBoom node (P/N 063-0130-010) on the valve mounting bracket (P/N 107-0171-802) using three 3/8"-16 UNC x 1-1/4" hex bolts (P/N 311-0054-106) and three 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Note: Position the node so that the cable connections point to the middle of the machine.

2. Insert the large, rectangular node connectors on the harness cable (P/N 115-0230-102) into the correct ports of the AutoBoom node.
3. Tighten the bolts on the node connectors to secure the connections.

Connect the Harness - Power/CAN Connectors

1. Locate the 8-pin Deutsch connectors labeled CD09 and CD10 on the machine's harness cable.
2. Disconnect the connectors.

FIGURE 13. AutoBoom Harness Connected to the Machine's Harness



3. Connect the harness cable (P/N 115-0230-102) 8-pin Deutsch connectors to the machine's CD09 and CD10 connectors.

Connect the Harness to the Tilt and Center Rack Controls

FIGURE 14. Boom Function Wiring



1. Locate and disconnect the machine's 6-pin Deutsch connectors along the right rear chassis frame rail.
2. Locate the 6-pin Deutsch connectors on the AutoBoom harness cable (P/N 115-0230-102).
3. Route the AutoBoom harness cable connectors to the machine's 6-pin connectors.
4. Connect the harness cable's 6-pin connectors to the machine's connectors.

Connect the Harness to the AutoBoom Valve

1. Locate the Left Press and Right Press connectors on the AutoBoom harness cable (P/N 115-0230-102).
2. Route the connectors to the AutoBoom valve (P/N 063-0131-124).
3. Connect the Left Press connector to Port G1 on the AutoBoom valve.
4. Connect the Right Press connector to Port G4 on the AutoBoom valve.
5. Locate the Left Solenoid and Right Solenoid connectors on the harness cable.
6. Connect the Left Solenoid connector to Port 4A on the AutoBoom valve.

7. Connect the Right Solenoid connector to Port 4B on the AutoBoom valve.
8. Locate the Left Prop and Right Prop connectors on the harness cable.
9. Connect the Left Prop connector to Port 5A on the AutoBoom valve.
10. Connect the Right Prop connector to Port 13A on the AutoBoom valve.
11. Secure the harness cable and unused connections with plastic ties, allowing enough slack in the harness cable to allow for boom racking.

UltraGlide Kit Contents

This section contains a list of the components that are included in the UltraGlide AutoBoom kit. Before beginning the AutoBoom installation, compare the items in the AutoBoom kit with the components on this list. If you have questions about the kit, contact your Raven dealer.

TABLE 1. UltraGlide Installation Kit (P/N 117-0232-109)

Picture	Item Description	Part Number	Qty.
Not Pictured	Manual - AutoBoom Calibration & Operation	016-0130-062 or 016-0130-065	1
Not Pictured	Manual - Miller Condor GC Series and New Holland Guardian R Series Spray Air Boom AutoBoom Installation	016-0230-109	1
	Valve - UltraGlide AutoBoom	063-0131-124	1
	Plate - Hydraulic Block Mounting	107-0171-802	1
	Node - UltraGlide AutoBoom	063-0130-013 or 016-0130-016	1
	Sensor - Right Ultrasonic	063-0130-012	2

TABLE 1. UltraGlide Installation Kit (P/N 117-0232-109)











Picture	Item Description	Part Number	Qty.
	Sensor - Left Ultrasonic	063-0130-014	1
	Weldment - Center UltraSonic Sensor Boom Mount	116-0159-684	1
	Cable - Miller Condor G-Series AutoBoom	115-0230-102	1
	Cable - 60' Extension Ultrasonic Sensor	115-0230-051	2
	Jumper - Node Power (ISO AutoBoom Systems Only)	063-0173-614	1
	Clamp - 2.2" ID x 3" LG x 3/8"-16 Thread U-Bolt	435-3003-046	4
	U-Bolt - 4" W x 5" L x 3/8" Thread	107-0171-606	4
	Bolt - 5/16"-18 x 7/8" Grade 8 Hex	311-0052-104	4
	Bolt - 3/8"-16 UNC x 1-1/4" Hex	311-0054-106	4
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	15
	Washer - 5/16" Zinc Plated Lock	313-1000-019	4

TABLE 2. Hydraulic Kit (P/N 117-0134-081)

Picture	Item Description	Part Number	Qty.
	Fitting - 13/16" ORFS M/M/F Swivel Run Tee Adapter	333-0012-028	2
	Fitting - 11/16" ORFS M/M/F Swivel Run Tee Adapter	333-0012-069	2
	Fitting - 11/16" ORFS (M) to 9/16" SAE O-Ring (M) Straight Adapter	333-0012-084	2
	Fitting - 11/16" ORFS M/F Swivel 45° Elbow	333-0012-090	1
	Fitting - 13/16" ORFS (M) to 3/4" SAE O-Ring (M)	333-0012-168	2
	Fitting - 11/16" Hex 9/16" SAE O-Ring Plug	333-0012-194	2
	Hydraulic Hose - 9/16" ORFS 90° to 9/16" ORFS - 44"	214-1000-494	2
	Hydraulic Hose - 3/4" ORFS 90° to 9/16" ORFS - 44"	214-1000-495	2

TABLE 3. Optional Wheel Kit (P/N 117-0133-081)










Picture	Item Description	Part Number	Qty.
	Axle Assembly - Right Cushioned AutoBoom	063-0131-585	1
	Axle Assembly - Left Cushioned AutoBoom	063-0131-590	1

TABLE 3. Optional Wheel Kit (P/N 117-0133-081)

Picture	Item Description	Part Number	Qty.
	Bracket - Left Miller Condor Spray-Air Boom Weldment Receiver	116-0159-697	1
	Bracket - Right Miller Condor Spray-Air Boom Weldment Receiver	116-0159-698	1
	Wheel	322-0131-008	2
	U-Bolt - 2-1/2" ID x 3.12" L x 3/8"-16 Thread Zinc Plated Clamp	435-3003-043	8
	Bolt - 1/2"-13 x 1-1/2" SS Hex	311-0058-186	4
	Nut - 1/2"-13 Zinc Hex	312-1001-043	4
	Nut - 3/8"-16 Zinc Flanged Lock	312-1001-164	16

Install the UltraGlide Hydraulic System


Install Fittings on the AutoBoom Valve

Before mounting the AutoBoom valve on the machine, install the proper fittings in the valve. This prepares the valve for installation and simplifies the hose connection process later in the procedure. Refer to the following table to install the fittings in the appropriate ports of the AutoBoom valve.

Fitting	Part Number	Port
Fitting - 13/16" ORFS (M) to 3/4" SAE O-ring (M)	333-0012-168	P, T
Fitting - 11/16" ORFS (M) to 9/16" SAE O-ring	333-0012-084	LC, RC
Fitting - 11/16" hex 9/16" SAE O-ring plug	333-0012-194	LV, RV


Mount the AutoBoom Valve

FIGURE 1. AutoBoom Valve Mounted on Valve Mounting Plate

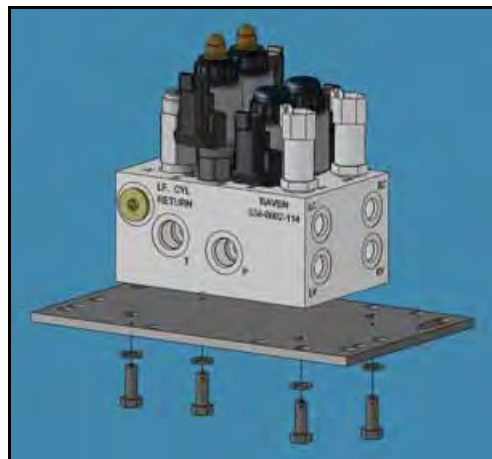


1. Secure the AutoBoom valve (P/N 063-0131-124) to the mounting bracket (P/N 107-0171-802) using four 5/16" hex bolts (P/N 311-0052-104) and four 5/16" lock washers (P/N 313-1000-019).

FIGURE 2. AutoBoom Valve Mounted on the Machine

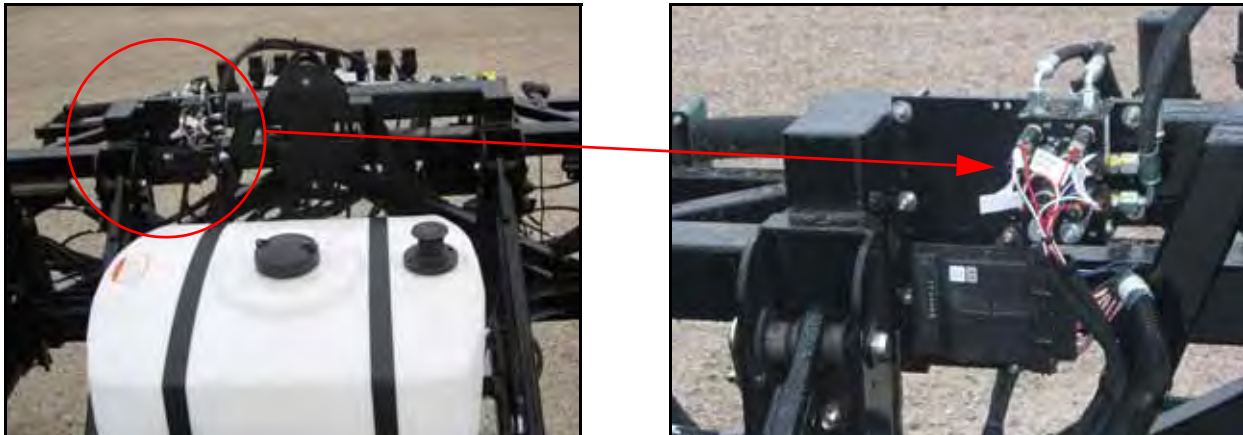

2. Secure the mounting bracket on the inside of the machine's center rack using two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Install the Pressure and Tank Hoses

	<p>⚠ WARNING</p> <p>Hydraulics are under pressure. Care should always be taken with a system that has been pressurized. When disconnecting or purging hydraulic hoses, be aware that hydraulic fluid within the machine's system may be extremely hot and under high pressure.</p>
--	---


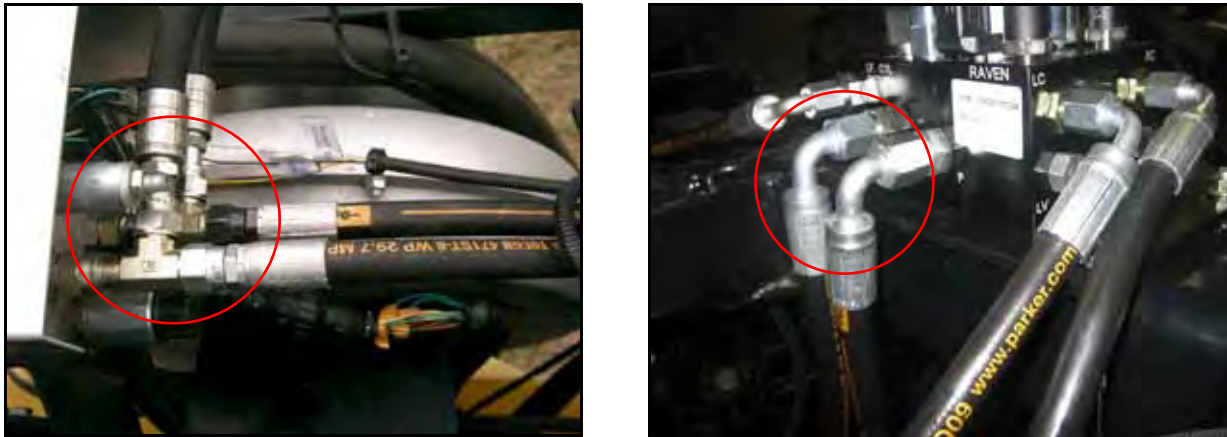
	<p>⚠ CAUTION</p> <p>When installing AutoBoom hydraulics or performing diagnostics, maintenance, or routine service, ensure precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system.</p> <p>Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the AutoBoom hydraulic valve.</p>
---	--

FIGURE 3. Pressure and Tank Hoses Installed

1. Disconnect the machine's pressure line from the machine's hydraulic valve.
2. Install a 13/16" ORFS (F) M/M/F swivel run tee adapter fitting (P/N 333-0012-028) in the machine's pressure port.
3. Attach the machine's pressure line to the opposite end of the installed tee fitting.
4. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-495) to the 90° end of the installed tee fitting.
5. Connect the 90° end of the hydraulic hose to Port P on the AutoBoom valve.
6. Disconnect the machine's tank line from the machine's hydraulic valve.
7. Install a 13/16" ORFS (F) M/M/F swivel run tee adapter fitting (P/N 333-0012-028) in the machine's tank port.
8. Attach the machine's tank line to the opposite end of the installed tee fitting.
9. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-495) to the 90° end of the installed tee fitting.
10. Connect the 90° end of the hydraulic hose to Port T on the AutoBoom valve.


Install Left and Right Cylinder Hoses

FIGURE 4. Left and Right Cylinder Hoses Installed

1. Disconnect the machine's left and right tilt hoses from the machine's manifold.
2. Install 11/16" ORFS M/M/F swivel run tee adapter fittings (P/N 333-0012-069) in the tilt hose ports of the machine's manifold.
3. Connect the machine's right tilt hose to the opposite end of the tee fitting.
4. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-494) to the 90° end of the tee adapter installed in the right tilt port.
5. Connect the 90° end of the hydraulic hose to the installed fitting in Port RC on the AutoBoom valve.
6. Install the 11/16" ORFS M/F swivel elbow fitting (P/N 333-0012-090) on the opposite end of the tee adapter installed on the left tilt port.
7. Connect the machine's left tilt hose to the installed elbow fitting.
8. Connect the straight end of the supplied hydraulic hose (P/N 214-1000-494) to the 90° end of the tee adapter.

Connect the 90° end of the hydraulic hose to the installed fitting in Port LC on the AutoBoom valve.

UltraGlide Hydraulic Schematic

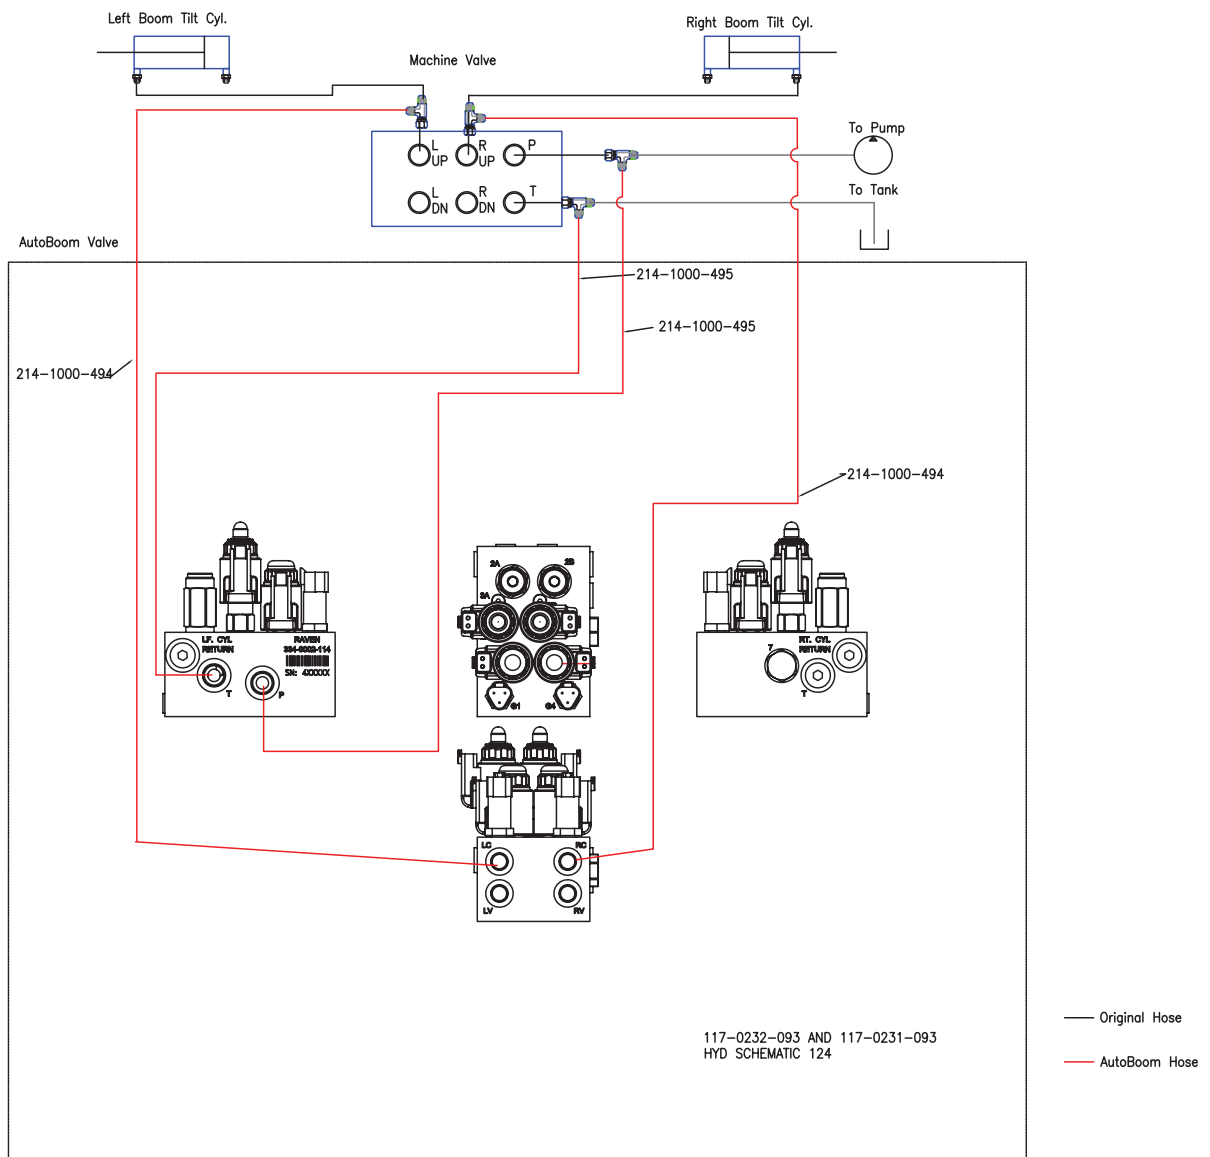

Install the UltraGlide Sensors


Boom Sensor Mounting Locations

FIGURE 5. Boom Sensor Mounting Location




Sensor mounting locations may be influenced by the boom configuration. If an object enters the sensor's blind range unexpectedly, a false echo return to the sensor could occur, causing the boom to drop and the sensor or boom to be damaged. To ensure optimal options of the UltraGlide system and to protect the sprayer boom, the sensor should be mounted on the front side of the boom, 8 - 20" above the lowest hanging part of the boom.

FIGURE 6. Illustration of Sensor's Blind Range

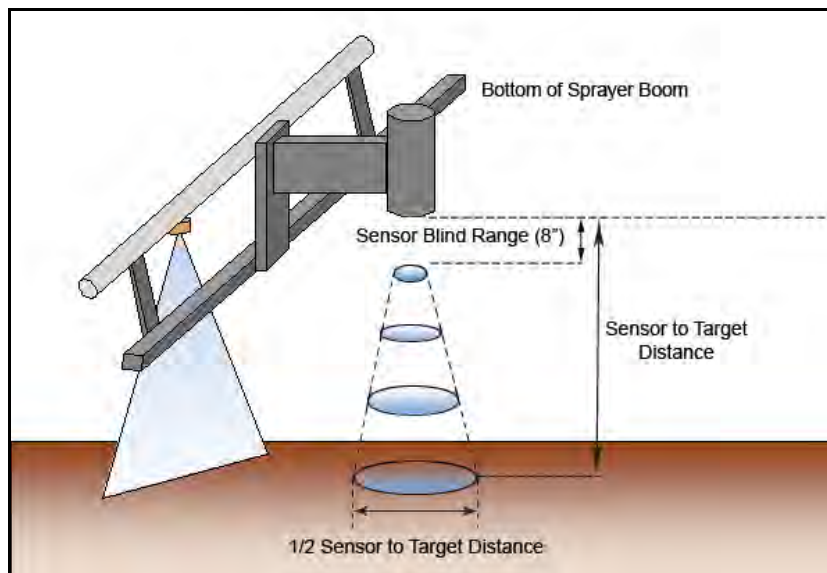

Mount the Boom Sensors



⚠ WARNING

The machine must remain stationary and switched off, with the booms unfolded and supported, during installation or maintenance.

Note: When mounting two sensors per boom, mount the inside sensors on the main wing in front of the fold. When booms are racked, the sensors will be pointing toward the hood.

FIGURE 7. Mounted Sensor



1. Secure the left sensor (P/N 063-0130-014) to the front of the left boom using two 2-1/2" ID x 3.0" L x 3/8" thread clamp U-bolts (P/N 435-3003-046).
2. Tighten the nuts to ensure the sensor is mounted securely.
3. Secure the right sensor (P/N 063-0130-012) to the front of the right boom using two 2-1/2" ID x 3.0" L x 3/8" thread clamp U-bolts (P/N 435-3003-046).
4. Tighten the nuts to ensure the sensor is mounted securely.

Mount the Center Rack Sensor

FIGURE 8. Center Sensor Mounted to the Bracket



1. Secure the center sensor (P/N 063-0130-012) to the ultrasonic sensor boom mount weldment (P/N 116-0159-684) using four 3/8"-16 UNC x 1-1/4" hex bolts (P/N 311-0054-106) and four 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

FIGURE 9. Center Sensor Mounting Location



2. Mount the center sensor to the inside of the machine's center rack using two 4" W x 5" L x 3/8" thread U-bolts (P/N 107-0171-606) and four 3/8" zinc flanged lock nuts (P/N 312-1001-164).
3. Tighten the nuts to ensure the sensor is mounted securely.

Connect the Sensor Cables


1. Connect the left sensor cable (P/N 115-0230-051) to the connector on the left sensor.
2. Route the left sensor cable toward the AutoBoom valve.
3. Loop and tie-off any excess cable, allowing enough cable for boom folding and extension.
4. Repeat the steps above to connect the remaining sensor cable(s).

Note: *The sensor cables will be connected to the AutoBoom system in the wiring phase of installation.*

Install the Gauge Wheels - Optional

Gauge Wheel Mounting Locations

Wheel mounting locations may be influenced by the boom configuration. Determine the appropriate location for mounting the wheels on the boom, ensuring the wheels will not interfere with or be damaged while folding or unfolding the booms. The wheels should be mounted outside of the boom fold, but inside of the boom breakaway.

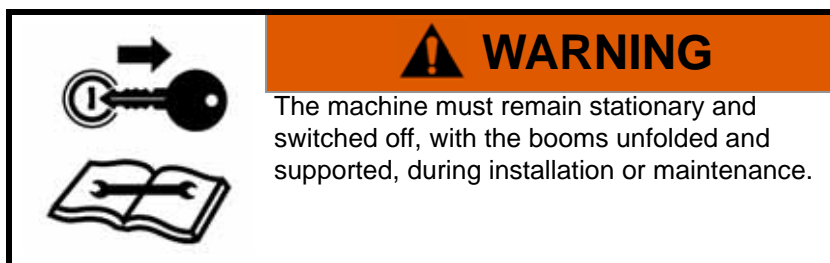

Mount the Gauge Wheels

Note: *The appearance of the wheel axles may vary.*


FIGURE 10. Gauge Wheel Installed



1. Remove the nuts from the left wheel axle (P/N 063-0131-590).
2. Place the wheel (P/N 322-0131-008) on the left wheel axle.
3. Reinstall the lug nuts on the wheel axle to secure the wheel and hub retainer bracket.
4. Mount the left wheel receiver bracket (P/N 116-0159-697) to the front of the left boom by installing four 2-1/2" ID x 3.12" L x 3/8" thread zinc plated U-bolts (P/N 435-3003-043) through the back of the receiver bracket and securing them with eight 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).
5. Insert the left wheel axle into the left wheel receiver bracket, positioning it so that the bottom of the wheel touches the ground (or nearly so).
6. Secure the gauge wheel assembly in the wheel mounting bracket by installing two 1/2"-13 x 1-1/2" SS hex bolts (P/N 311-0058-186) and two 1/2" zinc hex nuts (P/N 312-1000-043).
7. Repeat the steps above to install the right wheel.

Install the UltraGlide Wiring


Wiring Connections

	<p style="text-align: center;">⚠ CAUTION</p> <p>Always connect the power cable as the last step in the wiring process and verify that the power leads are connected with the correct polarity. Reversing power leads can cause severe damage to the equipment.</p>
---	---

For wiring connections made outside the cab, apply dielectric silicone grease (P/N 222-0000-006) generously on both the male and female ends of the connectors. Application of the grease will prevent corrosion to the pins and wires.

Install the AutoBoom Node

FIGURE 11. AutoBoom Node Mounting Location

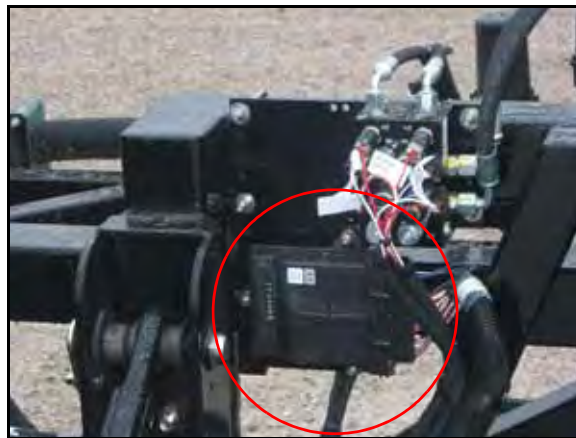

1. Mount the AutoBoom node (P/N 063-0130-013 or 016-0130-016) on the valve mounting bracket (P/N 107-0171-802) using three 3/8"-16 UNC x 1-1/4" hex bolts (P/N 311-0054-106) and three 3/8"-16 zinc flanged lock nuts (P/N 312-1001-164).

Note: Position the node so that the cable connections point to the middle of the machine.

2. Insert the large, rectangular node connectors on the harness cable (P/N 115-0230-102) into the correct ports of the AutoBoom node.
3. Tighten the bolts on the node connectors to secure the connections.

Connect the Harness - Power/CAN Connectors

1. Locate the 8-pin Deutsch connectors labeled CD09 and CD10 on the machine's harness cable.
2. Disconnect the connectors.

FIGURE 12. AutoBoom Harness Connected to the Machine's Harness


3. Connect the harness cable (P/N 115-0230-102) 8-pin Deutsch connectors to the machine's CD09 and CD10 connectors.

Connect the Harness to the Tilt and Center Rack Controls

FIGURE 13. Boom Function Wiring


1. Locate and disconnect the machine's 6-pin Deutsch connectors along the right rear chassis frame rail.
2. Locate the 6-pin Deutsch connectors on the AutoBoom harness cable (P/N 115-0230-102).
3. Route the AutoBoom harness cable connectors to the machine's 6-pin connectors.
4. Connect the harness cable's 6-pin connectors to the machine's connectors.

Connect the Harness to the AutoBoom Valve

1. Locate the LEFT PRESS and RIGHT PRESS connectors on the AutoBoom harness cable (P/N 115-0230-102).
2. Route the connectors to the AutoBoom valve (P/N 063-0131-124).
3. Connect the LEFT PRESS connector to Port G1 on the AutoBoom valve.
4. Connect the RIGHT PRESS connector to Port G4 on the AutoBoom valve.
5. Locate the LEFT SOLENOID and RIGHT SOLENOID connectors on the harness cable.

6. Connect the LEFT SOLENOID connector to Port 4A on the AutoBoom valve.
7. Connect the RIGHT SOLENOID connector to Port 4B on the AutoBoom valve.
8. Locate the LEFT PROP and RIGHT PROP connectors on the harness cable.
9. Connect the LEFT PROP connector to Port 5A on the AutoBoom valve.
10. Connect the RIGHT PROP connector to Port 13A on the AutoBoom valve.
11. Secure the harness cable and unused connections with plastic ties, allowing enough slack in the harness cable to allow for boom racking.

Connect the Harness Cable to the Sensors

1. Locate the CENTER SENSOR connector on the AutoBoom harness cable.
2. Connect the CENTER SENSOR connector to the installed center sensor (P/N 063-0130-012).
3. Locate the LEFT OUTER SENSOR connector on the AutoBoom harness cable.
4. Connect the LEFT OUTER SENSOR connector to the installed left sensor cable (P/N 115-0171-527).
5. Locate the RIGHT OUTER SENSOR connector on the AutoBoom harness cable.
6. Connect the RIGHT OUTER SENSOR connector to the installed right sensor cable.
7. If optional inside boom sensor sensors are installed, repeat the steps above to connect the sensors.

Install the Node Power Jumper (If Applicable)

Note: *This section applies only to ISO AutoBoom systems with no display connected to the right armrest bulkhead connector.*

FIGURE 14. Node Power Jumper Installed



Install a node power jumper (P/N 063-0173-614) in the machine's right armrest bulkhead connector to provide power to the AutoBoom node.

Connect the Field Computer (If Applicable)

Refer to the Installation & Operation Manual and the appropriate wiring schematic for installation and wiring instructions for your specific Raven field computer.


CHAPTER

5

Replacement Parts


This section contains replacement part diagrams for PowerGlide Plus and UltraGlide systems. Refer to these diagrams when calling to request replacement parts.

Valves

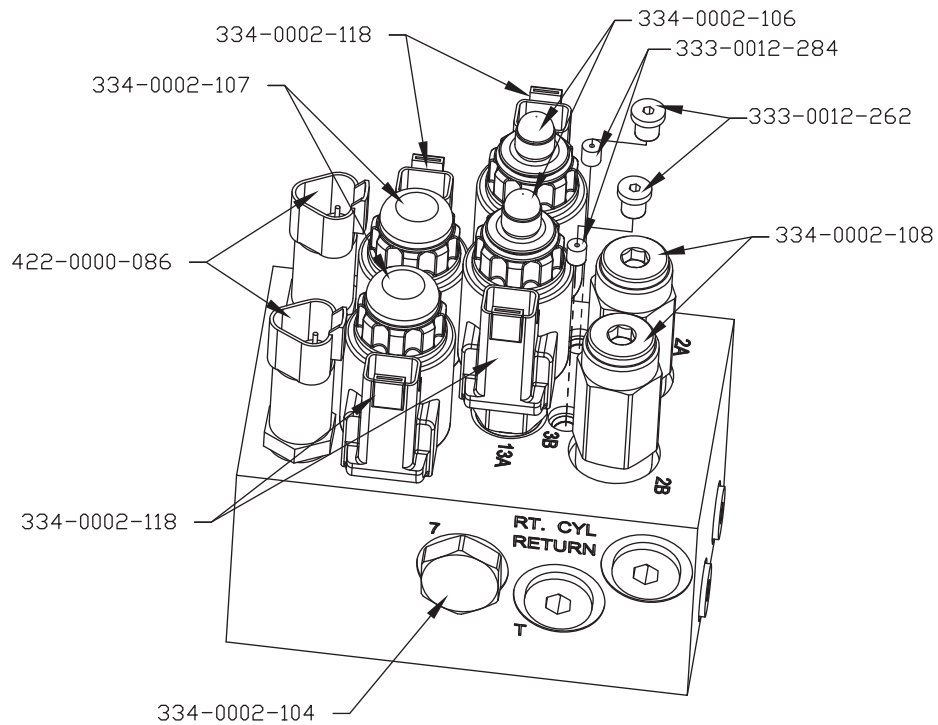


063-0131-124
VALVE, HYDRAULIC POWERGLIDE
PLUS/ULTRAGLIDE, CLOSED CENTER, AUTOBOOM

Wheels

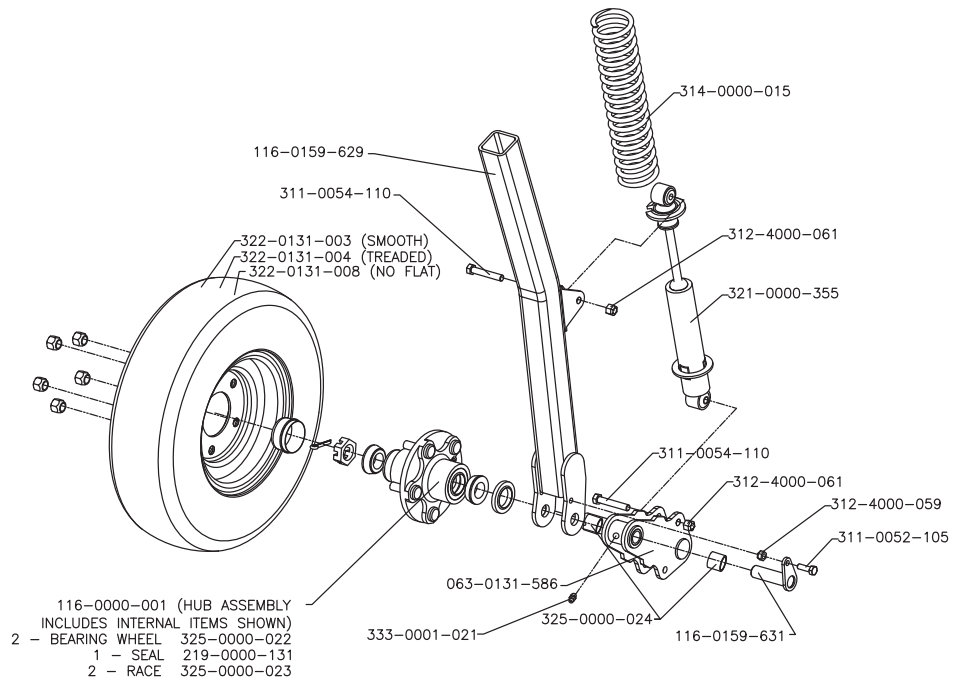

Sensors

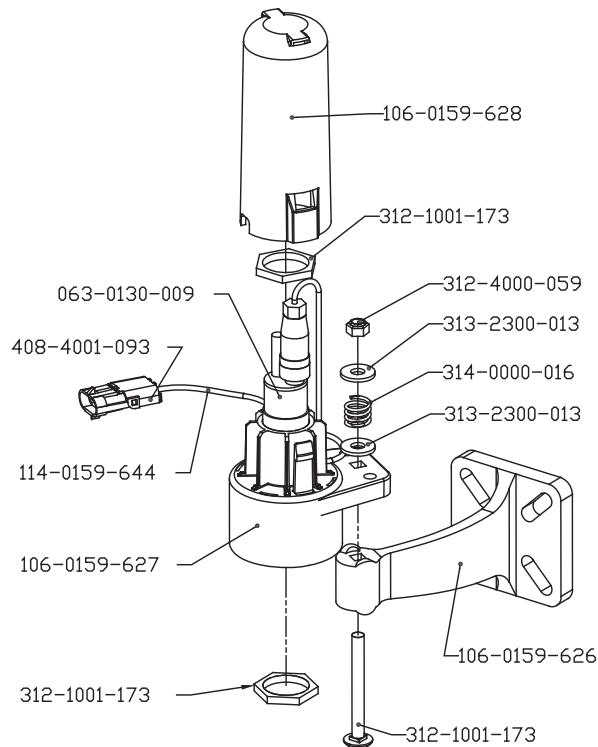

E**Electrical**

Safety 2

H**Hydraulic**

Fittings 4

Safety 2

I**Important Safety Information**

Electrical Safety 2

Hydraulic Safety 2

Introduction

Updates 5

K**Kit Contents**

PowerGlide Plus 7

UltraGlide 23

P**Point of Reference 4****PowerGlide Plus 7**

Install

Gauge Wheels 18

Gauge Wheel Mounting Locations 18

Mounting the Gauge Wheels 18

Hydraulic System 10

Hydraulic Schematic 17

Install Fittings 13

Left and Right Cylinder Hoses 16

Mount the AutoBoom Valve 14

Pressure and Tank Hoses 15

Removing the Orifice Fittings 11

Wiring 19

AutoBoom Valve Connections 20

Installing the AutoBoom Node 19

Power/CAN Connectors 19

Tilt and Center Rack Controls 20

Wiring Connections 19

Kit Contents 7

Preparing for Installation 4**R****Recommendations 4****Replacement Parts 39**

Sensors 40

Valves 39

Wheels 40

T**Tools Needed 4****U****UltraGlide 23**

Install

Gauge Wheels 35

Gauge Wheel Mounting Locations 35

Mounting the Gauge Wheels 35

Hydraulic System 27

Hydraulic Schematic 31

Install Fittings 27

Left and Right Cylinder Hoses 29

Mount the AutoBoom Valve 27

Pressure and Tank Hoses 28

Sensors 32

Boom Sensor Mounting Locations 32

Boom Sensors 33

Center Rack Sensor 33

Connecting Sensor Cables 34

Wiring 36

AutoBoom Valve Connections 37

Connecting the Field Computer 38

Connecting the Harness Cable to the

Sensors 38

Installing the AutoBoom Node 36

Installing the Node Power Jumper 38

Power/CAN Connectors 36

Tilt and Center Rack Controls 37

Wiring Connections 36

Kit Contents 23

RAVEN

Limited Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

How Long is the Coverage Period?

Raven Applied Technology products are covered by this warranty for 12 months from the date of retail sale. In no case will the Limited Warranty period exceed 24 months from the date the product was issued by Raven Industries Applied Technology Division. This warranty coverage applies only to the original owner and is non-transferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries.

What Will Raven Industries Do?

Upon confirmation of the warranty claim, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

What is not Covered by this Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.



Extended Warranty

What Does this Warranty Cover?

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service when used for intended purpose.

Do I Need to Register My Product to Qualify for the Extended Warranty?

Yes. Products/systems must be registered within 30 days of retail sale to receive coverage under the Extended Warranty. If the component does not have a serial tag, the kit it came in must be registered instead.

Where Can I Register My Product for the Extended Warranty?

To register, go online to www.ravenhelp.com and select Product Registration.

How Long is the Extended Warranty Coverage Period?

Raven Applied Technology products that have been registered online are covered for an additional 12 months beyond the Limited Warranty for a total coverage period of 24 months from the date of retail sale. In no case will the Extended Warranty period exceed 36 months from the date the product was issued by Raven Industries Applied Technology Division. This Extended Warranty coverage applies only to the original owner and is non-transferable.

How Can I Get Service?

Bring the defective part and proof of purchase to your Raven dealer. If the dealer approves the warranty claim, the dealer will process the claim and send it to Raven Industries for final approval. The freight cost to Raven Industries will be the customer's responsibility. The Return Materials Authorization (RMA) number must appear on the box and all documentation (including proof of purchase) must be included inside the box to be sent to Raven Industries. In addition, the words "Extended Warranty" must appear on the box and all documentation if the failure is between 12 and 24 months from the retail sale.

What Will Raven Industries Do?

Upon confirmation of the product's registration for the Extended Warranty and the claim itself, Raven Industries will (at our discretion) repair or replace the defective product and pay for the standard return freight, regardless of the inbound shipping method. Expedited freight is available at the customer's expense.

What is Not Covered by the Extended Warranty?

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit, labor, or other damages. Cables, hoses, software enhancements, and remanufactured items are not covered by this Extended Warranty. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.